

JBL Driver / Repair Kit Goes Into List

Driver (Part #) Number	Repair Kit	Goes Into Model					
010	***	J216					
011	***	J220	J320	J325	J350		
012	***	J216A	J220A	J320A	J325A	J350A	
020Nd (73687)	***	HT1D	HT1F				
022Ti (69068-01)	***	JBL 62T	JBL82T	JBL630T	JBL830T	JBL940T	
024	D4R024	LT-1					
026Ti	***	HP420 S118	HP520	LX22	LX44	LX55	S116
027Ti (74528)	***	LX300 LXE770	LX440 LXE990	LX500	LX600	LXE330	LXE550
027Ti-1 (330050-001)	***	ARC30	ARC50	ARC70	ARC90		
029Ti	***	S3	S4				
033	D8R033	L40	L40A	L110	L110A	L150	
034	D8R034	L15	L46	L56	L86		
035Ti	D8R035Ti	4312A L,R	L20T	L60T	L80T	L100T	
035TiA	D8R035TiA	4312C L40T3	L1 L80T3	L3 L100T3	L5	L7	L20T3
035TiA-1	D8R035TiA	250TiBQ					
044	D8R044	L96	L112	L150A	L150A-B		
044-1	D8R044-1	L250					
044Ti	D8R044Ti	18Ti	120Ti	240Ti	250Ti		
044Ti-1	D8R044Ti	***					
046Ti-1	D8R046Ti	S1M	XPL90A	XPL140A	XPL160A	XPL200A	
046Ti-1S (72209)	D8R046Ti	S2M L,R	S3M				
066	D8R066	L166	L166A	L212	L212C		
075	D8R075	D4400WX	D4400WXA	S38	S508	S608	
076	D8R076	L220	L220A	L222	L222A		
077	D16R2405	L55A	L65	L65A	L65B	L300	L300A
093Ti	D4R093Ti	XPL140A	XPL160A	XPL200A			
10-601-S	***	J50	M5	G40			
12C70DU-01CW (P1003)	***	Pro III	Pro III Plus				
12C70DU-05CW	***	PROIII-AW					
14R7D08RRH0094	***	CF80	CF100	CF120			
16K70DU-01DW	***	Pro VIII					
58P60DH-01CD (P1002)	***	ProIII	Pro III Plus	Pro III-AW			
58P60DH-01HD	***	Pro VIII					
104H	C8R104	120Ti	240Ti	250Ti	250TiBQ		
104H-1	C8R104	***					
104H-2	C8R104-2	L80T	L80T3	L100T	L100T3		
104H-3	C8R104-2	4312A L,R	4312C				
108H	C8R108	250Ti	250TiBQ	L250			
112A	C8R112A	L212					
112H	C8R112A	L212C					
115H	C8R115	L15					
115H-1	C8R115H-1	18Ti	L20T	L20T3	XPL90A	XPL200A	
116A	C8R116A	L16	L19				
116H	C8R116A	L19A					
116H-1	C8R116H-1	L60T					

*** Repair kit not available.

Defective driver should be replaced.

JBL Driver / Repair Kit Goes Into List

Driver (Part #) Number	Repair Kit	Goes Into Model						
116H-2	C8R116H-2	L40T3						
116H-3	C8R116H-3	XPL140A						
117H	C8R117	***						
117H-1	C8R117	L46	L86					
118H	C8R118	L56						
120T3	C8R120T3	L200T3						
121A	C8R121A	L212 Sub						
121H	C8R121A	L212C Sub						
122A	C8R129H	L65A	L166					
122A-1	C8R129H	L166A						
123A	C8R2212	***						
123A-1	C8R2212	L55A	L88	L88-1	L88A	L88P	L88P-A	
		L100	L100A	S70				
123A-2	C8R2212	S106						
123A-3	C8R2213	L100A Late Model						
124A	C8R2203 <i>OBS refer to Pro</i>	***						
124H	C8R2203 <i>OBS refer to Pro</i>	***						
125A	C8R127A	L25	L26	L26A	L36	L36A	L120	
		L120A						
126A	C8R126A	L65						
127A	C8R127A	L40	L50					
127H	C8R127A	L40A	L50A					
127H-1	C8R127H-1	L80T	L80T3	XPL160A				
128H	C8R128H	L112	L150	L150A	L150A-B			
128H-1	C8R128H-1	120Ti						
129H	C8R129H	L65B						
130A	C8R2220	L45	S36					
130B	C16R2220	***						
135A	C8R2235	L45A	L45B	L71	L71A			
136A	C8R2235	L200B	L300					
136B	C16R136B	***						
136H	C8R2235	L300A						
136HS	C8R136	S2S						
150H	C16R2115	***						
150-4	C16R1504C	***						
150-4C	C16R1504C	D30085						
150-4H	C8RE145	DD55000						
203G (73312)	***	G100	P10					
205H	***	G300	G500	LC310-1	LC312-1	P30	P40	
		P50						
206H	***	G200	P20					
208H (72412)	***	G300	G500	P30	P50	T88		
210H (72435)	***	P40						
275	D16R2421	***						
276nd (74235)	D8R2425	S1C-S	S2C	S2M L,R				
303G	C4R303G-2	502VX	702VX	902VX				
303G-1	C4R303G-2	502VXA						

*** Repair kit not available.
Defective driver should be replaced.

JBL Driver / Repair Kit Goes Into List

Driver (Part #) Number	Repair Kit	Goes Into Model					
303G-2	C4R303G-2	702VXA	902VXA				
304GS (71179)	***	Pro Perf.	Pro Perf. Plus				
305G	C4R305G-1	702VX	702VXA	902VX	902VXA	905VX	
305G-1	C4R305G-1	R103	R123	R133			
305G-2	C4R305G-2	J320	J325	J350			
305G-3	***	J320A	J325A	J350A			
305G-3A	***	JBL52TQX	S3				
305G-3A-1 (70012-01)	***	HT1D	J2050	JBL2500	S115	S2A	
305G-3A-1S (75755)	***	HT1F	SC305				
305G-4	***	JBL940	JBL940T				
306G-2	C4R306G-2	J216					
306G-3	***	J216A					
306G-4	***	JBL62	JBL630				
306G-4A	***	JBL62T	JBL630T				
308G	C4R308G-1	502VX	502VXA				
308G-1	C4R308G-1	R82					
308G-2	C4R308G-2	J220	J320				
308G-3	***	J220A	J320A				
308G-4	***	JBL82	JBL82T	JBL830	JBL830T	JBL940	JBL940T
308HS	***	S119	S2				
308SW	***	Pro Perf. Plus	Pro III Plus	S1			
310G	C4R310G-1	702VX	702VXA	905VX			
310G-1	C4R310G-1	R103	R133				
310G-2	C4R310G-2	J325	J325A	J350			
310G-3	***	J350A					
310G-4	***	JBL940	JBL940T				
312G	C4R312G-1	902VX	902VXA				
312G-1	C4R312G-1	R123					
375	D16R2440	D30085	D44000WX	S508	S608		
376	D16R2441	D44000WXA					
405G	***	HP420	HP520	LX44	LX55	S118	
405G-1 (70575-01)	***	LX500	LX600				
405G-2 (70575-02)	***	LXE770	LXE990				
405G-3 (330052-001)	***	ARC70	ARC90				
406G	***	HP520	LX22	S116			
406G-1	***	LX300					
406G-2 (70497-02)	***	LXE330					
406G-3 (330051-001)	***	ARC30					
408G	***	LX44	S118				
408G-1 (70460-01)	***	LX440	LX500				
408G-2 (70460-02)	***	LXE550	LXE770				
410G	***	LX55					
410G-1 (70443-01)	***	LX600					
410G-2 (70443-02)	***	LXE990					
410G-3 (330054-001)	***	ARC90					
505G	***	G400	J5120	JBL3800	JBL4800		
506G	***	HP420	J2060	JBL2600			
506G-1	***	S4					

*** Repair kit not available.
Defective driver should be replaced.

JBL Driver / Repair Kit Goes Into List

Driver (Part #) Number	Repair Kit	Goes Into Model				
508G	***	HP520	J2080	JBL2800	JBL3800	
510G	***	G400	JBL4800			
512G (74474)	***	J5120				
512GS (75744)	***	HT1S				
704G	***	L5	L7			
705GS (74207)	***	S1M	S2M L,R			
706G-1	***	L1	L5			
706G-1S (73715-02)	***	S3HC	S3M	S3VC		
708G-1	***	L3	L5	L7		
708G-2 (73723-02)	***	Bass 20 Early Version				
726GS (726GSB35)	***	S2C	S2M L,R			
2118H-2 (62526-07)	C8R2118	S1C-2S				
2118J-2	C16R2118	S1A	S1C	S1M		
2118JS (74234-02)	C16R2118	S1C-S				
2212	C8R2212	***				
2213	C8R2213	***				
2213H	C8R2213	4311B	4312 L,R	4312A L,R	4312C	
2214H	C8R2214	L100T				
2214H-1	C8R2214	L100T3	XPL200A			
2235H	C8R2235	B380				
2245H	C8R2245H	B460	S1S			
2405H	D16R2405	DD55000				
2416H	D8R2416-1	L200T3	S1A EARLY	S1C EARLY	S1C-2S EARLY	S1M EARLY
2416H-1	D8R2416-1	S1A	S1C	S1C-2S	S1M	
2425H	D8R2425	DD55000				
2426H	D8R2425	S2600L,R	S3100L,R			
67259-01	***	JBL62	JBL82			
67259-02	***	JBL630	JBL830	JBL940		
70391	***	JBL52TQX				
70740	***	JBL2500	JBL2600	JBL2800	JBL3800	JBL4800 S115
72273	***	J50	M5	G40		
72274	***	T88				
72773-REV A	***	FLIX1				
73959	***	G100	G400	P10		
74447	***	J2050	J2060	J2080	J5120	SC305
74860	***	Center (Sat 2) Sat 2				
74860-06	***	Sat 20				
75017	***	LC310-1	LC312-1			
75017-01	***	LC312-1				
75019	***	LC310-1				
75020	***	LC312-1				
75133	***	Sat 2	Sat 20			
75133-01	***	Sat 1	Sat 10			
75245	***	S2A				
75493-01	***	PS60				
75495	***	PS100				
75497	***	PS120				
75755	***	HT1F	SC305			

*** Repair kit not available.

Defective driver should be replaced.

JBL Driver / Repair Kit Goes Into List

Driver (Part #) Number	Repair Kit	Goes Into Model			
76316	***	S3HC	S3M	S3VC	
101100	***	PSW1000			
101200	***	PSW1200			
101300	***	PSW800			
101400	***	HT PS-300			
101500	***	ARC Sub			
101600	***	TLX PS10 Sub			
101700	***	TLX PS12 Sub			
302343-001	***	J Center	MR25	MR26	MR Center
302354-001	***	MR28	MR38	MRV308	MRV310
305062-001	***	J520M	J620M		
306572-001	***	J820M	J830M	J900MV	J1000MV
325768-001	***	HP-6B			
330053-001	***	ARC50	ARC70		
331263-001	***	SVA1800			
331264-001	***	SVA2100			
331393-001	***	SVA1500	SVA1600	SVA1800	SVA Center
331940-001	***	SVA2100			
332206-001	***	SVA1600			
332241-001	***	SVA1500	SVA Center		
974301	***	TLX121	TLX151	TLX171	TLX181
974305	***	TLX151	TLX171	TLX181	
974323	***	TLX121			
974326	***	TLX151	TLX171		
974328	***	TLX181			
974330	***	TLX181			
AW025JL1D08TTL10A1	***	CL505			
AW025M3D08TTP0010	***	ARC1000			
AW025XED08TTP0010	***	GHE1000V	GHE1200V		
C0012B	***	SUB10			
C6093B	***	SUB6			
C065N10J1970	***	FLIX2			
C065N10J1971	***	TLX Center1			
C110M16U1070	***	CF100			
C110M16U1071	***	CF120			
C120R06J1970	***	CL505			
C120R22J1970	***	FLIX2			
C120R22J1971	***	TLX Center1			
C130R07J1970	***	ARC1000	GHE1000V	GHE1200V	
C160L94J1970	***	CF150			
C200L06J1970	***	G Cinema Sub			
C200L57U1070	***	CF80			
C250L49U1070	***	CF100			
C250R01J1970	***	ARC1000	GHE1000V		
C300L49U1070	***	CF120			
C300R23J1970	***	GHE1200V			
C380L15U1070	***	CF150			
CM40AWO	***	CM40AW			

*** Repair kit not available.

Defective driver should be replaced.

JBL Driver / Repair Kit Goes Into List

Driver (Part #) Number	Repair Kit	Goes Into Model					
CM40WO	***	CM40					
CM42WO	***	CM42	CM42AW	CM42V			
CM52AWO	***	CM52AW					
CM52WO	***	CM52	CM52V				
CM62WO	***	CM62					
CT-249-S	***	FLIX1					
CT-350	***	FLIX1					
D123	C8R2125	***					
D123-3	C8RD1233	***					
D126	C8R2110	***					
D130	C8RE130	S38					
D131	C8RE120	***					
D175	D16R2410	***					
D204	C8R2110	***					
D208	C8R2110	***					
D280	C8R2110	L57					
D025N55J1970	***	CF150					
DT397TH-1	***	CM52	CM52AW	CM52V	CM62		
DT397TH-2	***	CM42	CM42AW	CM42V			
FTW6080-311	***	ESC300 Sub					
HP027Ti (325792-001)	***	HP-6B	HP-8B	HP-82B	HP-88F		
HP5 (325781-001)	***	HP-8B	HP-88F				
HP8 (325757-001)	***	HP-8B	HP-82B				
HP8J (330215-001)	***	HP-88F					
JBEN10-S	***	GT-B10	GT-B12				
JBLAS002	***	AS-5	AS-6	AS-8			
JBLAS5003	***	AS-5					
JBLAS6003	***	AS-6					
JBLAS8003	***	AS-8					
JBLAS65C003	***	AS-65C					
JBLASSUB003	***	AS-Sub					
JBSM10-S	***	GT-B210					
JBST10-S	***	GT-B10	GT-B12	GT-B210			
JBSW10-S	***	GT-B10	GT-B210				
JBSW12-S	***	GT-B12					
JGS10WFR-S	***	GSUB10					
LC14C	C8RLC14CLF	***					
LE5-H	C8RLE59	***					
LE5-2	C8RLE52	L88P S106	L88P-A	L100	L100A	L100ALM	S70
LE5-3	C8RLE59	L71	L71A	S105			
LE5-5	C8RLE59	L45A	L45B	L55A	L65	L65A	L65B
LE5-6	C8RLE510	L36	L36A	L120	L120A		
LE5-8	C8RLE510	L166	L166A				
LE5-9	C8RLE59	L212	L212C	L220	L220A	L222	L222A
LE5-10	C8RLE510	4311B	L50	L50A	L110	L110A	L150
LE5-11	C8RLE59	L250					
LE5-12	C8RLE510	4312 L,R	L86	L96	L112	L150A	L150A-B

*** Repair kit not available.

Defective driver should be replaced.

JBL Driver / Repair Kit Goes Into List

Driver (Part #) Number	Repair Kit	Goes Into Model					
LE8	C8RLE8T	L33					
LE8T	C8RLE8T	L44	L54	L59	L75	L80	
LE8T-2	C8R2115	S109					
LE8-1	C8RLE8T	***					
LE8-7	CRPR8	***					
LE8-101	C8RLE8T	***					
LE10	C8RLE10A	L66					
LE10A	C8RLE10A	L77	Minigon	S105			
LE10A-1	C8RLE10A	***					
LE10B	C8RLE10A	***					
LE10H-1	C8RLE10H-1	L96					
LE10-101	C8RLE10A	***					
LE12C	C8R2145LF	***					
LE12C	D8R2145HF <i>NLA-OBS</i>	***					
LE12C-1	C8R2145ALF	***					
LE12C-1	D8R2145HF <i>NLA-OBS</i>	***					
LE14A	C8RLE14A	L55 SC99	L101	L220	L222	S56	S99
LE14C	C8RCL14CLF	***					
LE14C	D8R2145HF <i>NLA-OBS</i>	***					
LE14H	C8RLE14A	L220A	L222A				
LE14H-1	C8RLE14H-1	240Ti	250Ti	250TiBQ	L250		
LE14-1	C8RLE14A	***					
LE15A	C16R2215	D44000WX S508	S51 S607	S61K S608	S61P	S72	S507
LE15B	C8RLE15B	L200	L200A				
LE15H	C8RLE15H	D44000WXA					
LE20	D8RLE20	***					
LE20-1	D8RLE20	L55 S56 SC99	L66 S70	L77 S99	L88 S105	L88-1 S106	L100 S109
LE21H	D8RLE25	***					
LE25	D8RLE25	L25 L88P	L45A L88P-A	L45B L100A	L71 L100ALM	L71A	L88A
LE25-1	D8RLE25	***					
LE25-2	D8RLE252	4311B R103	4312 L,R R123	L16 R133	L26	L36	R82
LE25-3	D8RLE252	L120					
LE25-4	D8RLE254	L26A	L36A				
LE25-5	D8RLE254	L120A					
LE26	D8RLE26	L19	L19A	L50	L50A		
LE30	***	Minigon					
LE75	D16R2410	***					
LE85	D16R2421	L200 S61K	L200A S61P	L200B S72	L300 S507	L300A S607	S51
LE111A	C8RLE111A	L110					

*** Repair kit not available.
Defective driver should be replaced.

JBL Driver / Repair Kit Goes Into List

Driver (Part #) Number	Repair Kit	Goes Into Model					
LE111H	C8RLE111H	L110A					
LE120H-1	C8RLE120-1	L7					
LE120H-1S (73851-02)	C8RLE120-1	S3S L,R					
LE175	D16R2410	L45	L101	S36			
LE175DLH	D16R2410	***					
LT-1	C8RLT-1, D4R024	LT-1					
ME120HS (311891-001)	***	S2600L,R					
ME150HS	***	S3100L,R					
P205G (76431)	***	J520M	MR25				
P206G (76474)	***	J620M	MR26				
P206H (76474-01)	***	J830M	MR38				
P206HS (76474-02)	***	J900MV	J1000MV	MRV308	MRV310		
P208G (76478)	***	J820M	MR28				
P208H (76478-01)	***	J830M	MR38				
P208HS (76478-02)	***	J900MV	MRV308				
P210HS (302748-001)	***	J1000MV	MRV310				
PR7	CRPR10	***					
PR8	CRPR8	L44	L54	L57	L59	L75	L80
PR10	CRPR10	L77					
PR12	<i>OBSOLETE</i>	S70					
PR15	CRPR15C	S507	S508	S607	S608		
PR15C	CRPR15C	L220	L222	L222A			
PR15D	CRPR15C	L220A					
PR15F,R	CRPR15C	***					
PR300	CRPR300	L150	L150A	L150A-B			
PR310	***	905VX					
PR310-1	***	R133					
PR310-2	***	J350					
PR310-3	***	J350A					
S6C170-26-SP	***	GT650T					
S8C200-104-SP	***	GT-M80					
S8C200-135-SP	***	GT800T	GT8SW				
S10C200-120-SP	***	GT1000T	GT10SW				
S10C290-48-SP	***	GT-M100					
SE3.5G (74860-01)	***	Sat 1					
SE3.5GC (74860-05)	***	Sat 10	Sat 10s				
SE3.5HB (74860-03)	***	J Center	MR Center				
SE5H (75089-01)	***	Bass 1	Basswave				
SE5HP (321772-001)	***	Bass 10	Bass 15				
SE5HS (75089)	***	Bass 1	Basswave				
SE6H (332299-001)	***	ESC550 Sub					
SE8H (332246-001)	***	Bass 20 Late Version					
TLX-1	***	JBL62	JBL82				
TLX-2	***	JBL630	JBL830	JBL940			
TWO25XE (74093)	***	G200	G300	G500	P20	P30	P40
		P50					
ULTRA 12 (69455)	***	S2	S119				

*** Repair kit not available.

Defective driver should be replaced.