

60MHz TRIPLE TRACE OSCILLOSCOPE

CS-5165
50MHz TRIPLE TRACE OSCILLOSCOPE

CS-5155

INSTRUCTION MANUAL

KENWOOD CORPORATION

©PRINTED IN JAPAN B50-7674-10(T) 92/12 11 10 9 8 7 6 5 4 3 2 1 91/12 11 10 9 8 7 6 5

SAFETY

Symbol in This Manual

This symbol indicates where applicable cautionary or other information is to be found.

Power Source

This equipment operates from a power source that does not apply more than 250 V rms between the supply conductors or between either supply conductor and ground. A protective ground connection by way of the grounding conductor in the power cord is essential for safe operation.

Grounding the Product

This equipment is grounded through the grounding conductor of the power cord. To avoid electrical shock, plug the power cord into a properly wired receptacle before connecting to the equipment input or output terminals.

Use the Proper Power Cord

Use only the power cord and connector specified for your product.

Use the Proper Fuse

To avoid fire hazard, use a fuse of the correct type.

Do not Operate in Explosive Atmospheres

To avoid explosion, do not operate this product in an explosive atmosphere.

Do not Remove Cover or Panel

To avoid personal injury, do not remove the cover or panel. Refer servicing to qualified personnel.

Voltage Conversion

If the power source is not applied to your product, contact your dealer. To avoid electrical shock, do not perform the voltage conversion.

CONTENTS

FEATURES
♠ PRECAUTIONS 7 CONTROLS AND INDICATORS 9 FRONT PANEL 9 REAR PANEL 13 OPERATION 14 INITIAL STARTING PROCEDURE 14
♠ PRECAUTIONS 7 CONTROLS AND INDICATORS 9 FRONT PANEL 9 REAR PANEL 13 OPERATION 14 INITIAL STARTING PROCEDURE 14
CONTROLS AND INDICATORS 9 FRONT PANEL 9 REAR PANEL 13 OPERATION 14 INITIAL STARTING PROCEDURE 14
FRONT PANEL
OPERATION14 INITIAL STARTING PROCEDURE14
INITIAL STARTING PROCEDURE14
INITIAL STARTING PROCEDURE14
(1) NODMAL SWEED DISDLAY OPERATION 14
(1) IAQUIAIVE DAAFEL DIDI EVI OI FILVIIOITIIII
(2) MAGNIFIED SWEEP OPERATION17
(3) DELAYED SWEEP OPERATION17
(4) ALTERNATING SWEEP OPERATION17
(5) X-Y OPERATION18
(6) VIDEO SIGNAL OBSERVATION18
(7) SINGLE SWEEP OPERATION18
APPLICATION19
PROBE COMPENSATION19
TRACE ROTATION COMPENSATION19
DC VOLTAGE MEASUREMENTS19
MEASUREMENTS OF THE VOLTAGE
BETWEEN TWO POINTS ON A WAVEFORM20
ELIMINATION OF UNDESIRED SIGNAL
COMPONENTS20
TIME MEASUREMENTS2
FREQUENCY MEASUREMENTS2

PULSE WIDTH MEASUREMENTS	22
PULSE RISE TIME AND FALLTIME	
MEASUREMENTS	22
TIME DIFFERENCE MEASUREMENTS	23
PHASE DIFFERENCE MEASUREMENTS	24
RELATIVE MEASUREMENTS	24
PULSE JITTER MEASUREMENT	26
SWEEP MULTIPLICATION (MAGNIFICATION)	
DELAYED SWEEP TIME MEASUREMENT	27
PULSE WIDTH MEASUREMENTS USING	
DELAYED SWEEP	27
FREQUENCY MEASUREMENTS USING	
DELAYED SWEEP	28
PULSE REPETITION TIME	
USING DELAYED SWEEP FOR MEASUREMENT	
RISETIMES AND FALLTIMES	29
TIME DIFFERENCE MEASUREMENTS USING	
DELAYED SWEEP	
TRIPLE-TRACE APPLICATIONS	
OBSERVATION OF THE START PORTION OF	
THE IRREGULAR WAVEFORM	30
X-Y APPLICATION	
ACCESSORIES	32
MAINTENANCE	33
7	

Note: This instruction manual is described for two models.

Refer to item applied to your product.

FEATURES

 Vertical axis has high sensitivity and wide bandwidth and especially covers fully specified frequency response at 5mV/div for all models.

CS-5165;

1mV/div, 2mV/div : DC to 20 MHz, -3 dB

5mV/div : DC to 60 MHz, -3 dB

CS-5155;

1 mV/div, 2 mV/div : DC to 20 MHz, -3 dB

5mV/div: DC to 50 MHz, -3 dB

- 2. Vertical sensitivity range is selectable from 1mV/div to 5V/div with rotary switch continuously.
- 3. Time base permits the high sweep speed. 5nsec/div (×10 MAG)
- 4. Vertical sensitivity error and sweep rate error are ±3% and accurate measurements are provided.
- The 150 mm rectangular, domed mesh type CRT with internal graticule provides high brightness and accurate measurements, free of parallax error.
- 6. For convenience in making rise time measurements, the 0%, 10%, 90% and 100% levels are marked on the graticule scale of the CRT.
- The built-in Auto-focus circuit keeps the waveforms in clear focus automatically regardless of the INTENSITY control setting.
- 8. Trace rotation is electrically adjustable from the front panel.

- By SCALE ILLUM control, the waveform is easy observed in darkened area and the photograph of the waveform is easy provided a single photograph of the waveform superimposed on the graticule scale.
- 10. Delay sweep modes are available in not only Continuous Delay (AFTER DELAY) and trigger Delay (TRIG) but also both A and B zero Delay (DELAY = 0) allowing to observe the whole extent of any complicated pulse train with magnification as necessary.
- 11. Single sweep permits viewing and photographing one-time events.
- 12. TRIPLE mode presents a triple-trace oscilloscope; even six traces of waveforms may be observed simultaneously with HORIZ MODE set at ALT.
- 13. The delay line permits viewing of leading edge of high-frequency, fast risetime pulses.
- 14. Selectable AUTO FREE RUN function provides sweep without trigger input signal.
- 15. The FRAME-LINE switch provides selection of sync pulse for sweep triggering from small amplitude to large amplitude without adjusting when viewing composite video waveforms.
- 16. Vertical mode automatically provides the trigger signal with TRIG SOURCE and VERT MODE switches.
- 17. X-Y operation is easy provided by one-touche.
- 18. Provides with CH1 OUTPUT terminal to monitor input signal of CH1.
- 19. DELAY TIME MULT permits the accurate time measurements with the dial scale.

SPECIFICATIONS

	CS-5165	CS-5155	
CRT	150TTM31		
	150 mm Rectangular, with internal graticule		
Acceleration Voltage	12 kV		
Display Area	$8 \times 10 \text{ div } (1 \text{ div} = 10 \text{ mm})$		
VERTICAL AXIS	CH1 and CH2		
Sensitivity	1 mV/div to 5 V/div, ±3%		
Attenuator	12 steps, 1 mV/div to 5 V/div in 1-2-5 sequence. Vernier control for fully adjustable sensitivity between steps.		
Input Impedance	1 M Ω ±2%, approx. 20 pF		
Frequency Response			
5mV/div to 5V/div	DC; DC to 60 MHz, -3 dB AC; 5 Hz to 60 MHz, -3 dB	DC; DC to 50 MHz, -3 dB AC; 5 Hz, to 50 MHz, -3 dB	
1 mV/div, 2 mV/div	DC; DC to 20 MHz, -3 dB AC; 5 Hz to 20 MHz, -3 dB	DC; DC to 20 MHz, -3 dB AC; 5 Hz to 20 MHz, -3 dB	
Rise Time	5.8 ns or less (5 mV/div to 5 V/div) 17.5 ns or less (1 mV/div, 2 mV/div)		
Signal Delay Time	Approx.20 ns on the CRT screen		
Crosstalk	– 40 dB minimum		
Operating Modes	CH1; single trace CH2; single trace DUAL; CH1 and CH2, dual trace ADD; CH1+CH2 added as a single trace TRIPLE; CH1, CH2 and CH3 triple trace		
Chop Frequency	Approx. 250 kHz		
Channel Polarity	Normal or inverted, channel 2 only inverted		
Maximum Input voltage	500 Vp-p or 250 V (DC + AC peak)		
Non-Distorted Maximum Amplitude	More than 8 div (DC to 60 MHz)	More than 8 div (DC to 50 MHz)	
VERTICAL AXIS	СНЗ		
Sensitivity	0.5 V/div ±3%		
Input Resistance	1 MΩ±2%		
Input Capacitance	Approx 20 pF		
Frequency Response	DC: DC to 60 MHz, -3 dB	DC: DC to 50 MHz, -3 dB	
Rise Time	5.8 ns or less		
Signal Delay Time	Same as C	H1 and CH2	
⚠ Maximum Input Voltage	50 V (DC + AC peak)		
HORIZONTAL AXIS	Input thru CH2, ×1	O MAG not included	
Operating Modes	With HORIZ MODE switch, X-Y operation is selectable CH1; Y axis CH2; X axis		
Sensitivity	Same as vertical axis (CH2)		

			CS	-5165		CS-	5155	
Input Impedance		Same as vertical axis (CH2)						
Frequency Response		DC; DC to 1 MHz, -3 dB AC; 5 Hz to 1 MHz, -3 dB						
X-Y Phase Difference		3° or less at 100 kHz						
Maximum Input Voltage		Same as vertical axis (CH2)						
SWEEP							, A.	
Туре	-	A; ALT; B; X-Y;	(delay Delay	eep (inten) alternating	ration of B sweep)	and B sw	eep
Sweep Time	Α	$0.05~\mu s/div$ to $0.5~s/div$, $\pm3\%$ in 22 ranges, in 1-2-5 sequence. Vernier control provides fully adjustable sweep time between steps.						
	В	$0.05~\mu s/div$ to 50 ms/div, $\pm 3\%$ in 19 ranges, in 1-2-5 sequence.						
Sweep Magnification		×10	(ten ti	mes) ± 59	% (±8% on	, 0.05 μs/div to 0.2	μs/div rai	nge)
Linearity		±3% al	l range	s, ±5% c	n 0.05 μs/d	iv to 0.2 μs/div rang	ge at ×10	MAG.
Holdoff		Continuously variable from NORM to more than ten times (MAX)						
Trace Separation		B sweep can be separated from A sweep up to 4 divisions downward, continuously adjustable.						
Delay Method		Continuous delay (AFTER DELAY), Trigger delay (TRIG), Trigger delay (TV LINE), Zero delay (DELAY = 0)						
Delay Time		From 500 ns to 0.5sec. Available delay time is 0.2 to 10 times the A sweep time setting, continuously adjustable.						
Time difference measurement accuracy		±2%						
Delay Jitter		1/20000 of ten times of A sweep time setting			×-			
TRIGGERING								1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1
Trigger mode				AUTO	, NORM, FI	X, SINGLE-RESET	**	1 5 5 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4
Trigger source		VERT MODE; Trigger selected by vertical MODE switch. CH1; Triggered by CH1 signal CH2; Triggered by CH2 signal CH3/EXT; Triggered by CH3 signal LINE; Triggered by line frequency						
Coupling				AC, H	FREJ, DC, T\	/ FRAME, TV LINE		
Trigger sensitivity		FREQ.RA	NGE	INT	EXT	FREQ.RANGE	INT	EXT
DC		DC to 50 DC to 60		1 div 1.5 div	0.5 Vp-p 0.8 Vp-p	DC to 50 MHz	1 div	0.5Vp-p
AC		Same as for DC but increased minimum level below 10 Hz			·			
AC, HFREJ		Increas	ed minim	ım level bel	ow 10 Hz and abov	e 20 kHz		
TV		FRAME, I		1 div	0.5 Vp-p	FRAME, LINE	1 div	0.5 Vp-p
		FIX:			-	ns for above 50 Hz ns for above 50 Hz		

	CS-5165	CS-5155	
CALIBRATION VOLTAGE	1 V \pm 3%, square wave, positive polarity, approx. 1 kHz		
INTENSITY MODULATION			
Sensitivity	+5 V. Negative voltage increases brightness, positive voltage decreases brightness.		
Input Impedance	Approx. 10 kΩ		
Usable Frequency Range	DC to 5 MHz DC to 5 MHz		
Maximum Input Voltage	50 V (DC+AC peak)		
VERTICAL AXIS SIGNAL OUTPUT	CH1 OUTPUT		
Output Voltage	Approx. 50 m	V/div into 50 Ω	
Output Impedance	Approx	κ. 50 Ω	
Frequency Response			
5 mV/div to 5 V/div	100 Hz to 60 MHz, -3 dB into 50 Ω	100 Hz to 50 MHz, -3 dB into 50 Ω	
1 mV/div, 2 mV/div	100 Hz to 20 MHz, -3 dB into 50 Ω	100 Hz to 20 MHz, -3 dB into 50 Ω	
POWER REQUIREMENT			
Power Supply	100 V/120 V/220 V ± 10% 216 V-250 V		
Line Frequency	50/60 Hz		
Power Consumption	Approx. 61 W		
DIMENSIONS (W×H×D)	$319(359) \times 132(145) \times 380(455)$ mm () dimensions include protrusion from basic outline dimensions		
WEIGHT	Approx. 9.2 kg		
ENVIRONMENTAL			
Within Specifications	10°C to 35°C, 85% max. relative humidity		
Full Operation	0°C to 40°C, 85% max. relative humidity		
ACCESSORIES SUPPLIED			
Probe	PC-39×2		
Power Supply Cable	1		
Spare Fuse	0.7 A×2		
	1	A×2	
Instruction Manual		1	

^{*} Circuit and rating are subject to change without notice due to developments in technology.

PRECAUTIONS

SAFETY

Before connecting the instrument to the power source, carefully read the following information, then verify that the power cord and power line fuse are ones for your power line. The instrument's rear panel has a fuse holder on the left of the AC inlet terminal (the fuse holer also serves as a voltage selector). The value under the triangle ▼ marked on the holder indicates the line voltage set for the instrument. If the power cord is not applied with the correct voltage, there is a danger from electric shock.

Line voltage

This instrument operates using ac-power input voltages that 100/120/220/240 V at frequencies from 50 Hz to 60 Hz.

Power cord

The ground wire of the 3-wire ac power plug places the chassis and housing of the oscilloscope at earth ground. Do not attempt to defeat the ground wire connection or float the oscilloscope; to do so may pose a great safety hazard. The appropriate power cord is supplied by an option that is specified when the instrument is ordered.

The optional power cords are shown as follows in Fig. 1.

Line fuse

The fuse holder is located on the rear panel and contains the line fuse. Verify that the proper fuse is installed by replacing the line fuse.

EQUIPMENT PROTECTION

- 1. Never allow a small spot of high brilliance to remain stationary on the screen for more than a few seconds. The screen may become permanently burned. A spot will occur only when the scope is set up for X-Y operation and no signal is applied. Either reduce the intensity so the spot is barely visible, switch back to normal sweep operation when no signal is applied, or set up the scope for spot blanking.
- 2. Never cover the ventilating holes on the top of the oscilloscope, as this will increase the operating temperature inside the case.
- Never apply more than the maximum rating to the oscilloscope inputs.

CH1, CH2 INPUT jacks: 500 Vp-p or 250 V (DC + AC peak)

CH3 INPUT jack: 50 V (DC+AC peak) Z axis INPUT jack: 50 V (DC+AC peak)

Never apply external voltage to the oscilloscope output terminals.

4. Always connect a cable from the earth ground (GND) jack of the oscilloscope to the chassis of the equipment under test. Without this caution, the entire current for the equipment under test may be drawn through the probe clip leads under certain circumstances. Such conditions could also pose a safety hazard, which the ground cable will prevent.

- Always use the probe ground clips for best results. Do not use an external ground wire in lieu of the probe ground clips, as undesired signals may be introduced.
- 6. Operation adjacent to equipment which produces strong ac magnetic fields should be avoided where possible. This includes such devices as large power supplies, transformers, electric motors, etc., that are often found in an industrial environment. Strong magnetic shields can exceed the practical CRT magnetic shielding limits and result interference and distortion.
- 7. Probe compensation adjustment matches the probe to the input of the scope. For best results, compensation of probe should be adjusted initially, then the same probe always used with the input of scope. Probe compensation should be readjusted whenever a probe from a different scope is used. (See page 19)
- 8. In X-Y operation, do not pull out the PULL × 10 MAG switch. If pulled out it, noise may appeare on the waveform.

Plug configuration	Power cord and plug type	Factory installed instrument fuse	Line cord plug fuse
	North American 120 volt/60 Hz Rated 15 amp (12 amp max; NEC)	1 A, 250 V Fast blow 6×30 mm	None
	Universal Europe 220 volt/50 Hz Rated 16 amp	0.63 A, 250 V T. lag 5×20 mm	None
	U.K. 240 volt/50 Hz Rated 13 amp	0.7 A, 250 V Fast blow 6×30 mm	0.7 A Type C
	Australian 240 volt/50 Hz Rated 10 amp	0.7 A, 250 V Fast blow 6×30 mm	None
	North American 240 volt/60 Hz Rated 15 amp (12 amp max; NEC)	0.7 A, 250 V Fast blow 6 × 30 mm	None
	Switzerland 240 volt/50 Hz Rated 10 amp	0.7 A, 250 V Fast blow 6×30 mm	None

Fig. 1 Power Input Voltage Configuration

CONTROLS AND INDICATORS

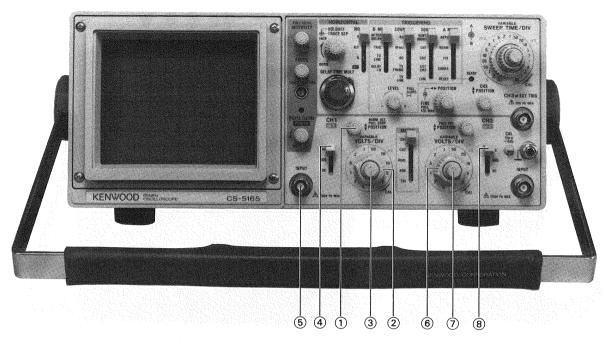


Fig. 2

FRONT PANEL

POSITION/PULL CHOP Control

POSITION:

Rotation adjusts vertical position of chan-

nel 1 trace.

In X-Y operation, rotation adjusts vertical

position of display.

CHOP:

ALT/CHOP selector switch; pulling this switch

causes chop operation.

ALT operation:

Alternate sweep is selected

regardless of sweep time as dual trace (CH1 and CH2) or triple trace

(CH1, CH2 and CH3).

CHOP operation: Chop sweep is selected regardless of sweep time at approximately 250 kHz as dual trace (CH1 and CH2) or triple trace (CH1, CH2 and

CH3).

2 VOLTS/DIV Control

Vertical attenuator for channel 1; provides step adjustment of vertical sensitivity. When VARIABLE control $\ensuremath{\mathfrak{G}}$ is set to CAL, vertical sensitivity is calibrated in 12 steps from 5 V/div to 1 mV/div.

For X-Y operation, this control provides step adjustment of vertical sensitivity.

③ VARIABLE Control

Rotation provides fine control of channel 1 vertical sensitivity. In the fully clockwise (CAL) position, the vertical attenuator is calibrated. For X-Y operation, this control serves as the Y axis attenuation fine adjustment.

(4) AC-GND-DC Switch

Three-position lever switch which operates as follows:

Blocks dc component of channel 1 input signal.

GND: Opens signal path and grounds input to vertical amplifier. This provides a zero-signal base line, the position of which can be used as a reference when performing dc measurements.

DC: Direct input of ac and dc component of channel 1 input signal.

(5) INPUT Jack

Vertical input for channel 1 trace. Vertical input for X-Y operation.

6 VOLTS/DIV Control

Vertical attenuator for channel 2; provides step adjustment of vertical sensitivity. When VARIABLE control 7 is set to CAL, vertical sensitivity is calibrated in 12 steps from 5 V/div to 1 mV/div.

In X-Y operation, this control provides step adjustment of horizontal sensitivity.

(7) VARIABLE Control

Rotation provides fine control of channel 2 vertical sensitivity. In the fully clockwise (CAL) position, the vertical attenuator is calibrated. In X-Y operation, this control becomes the fine horizontal gain control.

(8) AC-GND-DC Switch

Three-position lever switch which operates as follows:

Blocks DC component of channel 2 input signal.

GND: Opens signal path and grounds input to vertical amplifier. This provides a zero-signal base line, the position of which can be used as a reference when performing dc measurements.

DC: Direct input of AC and DC component of channel 2 input signal.

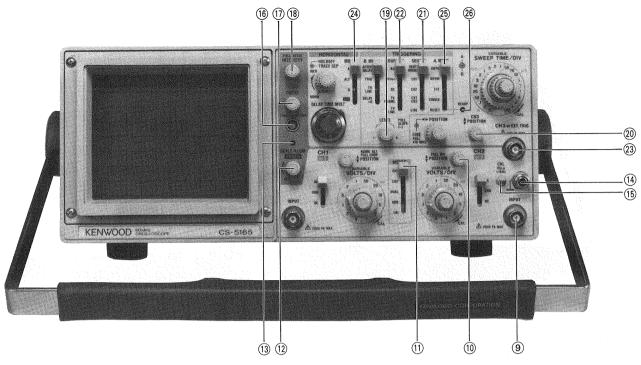


Fig. 3

(9) INPUT Jack

Vertical input for channel 2 trace in normal sweep operation. External horizontal input in X-Y operation.

♦ POSITION/PULL INV Control

POSITION:

Rotation adjusts vertical position of channel 2 trace.

INV:

Pulling this control inverts channel 2 signal. (Hereafter PULL INV is described as CH2 INV.)

(1) MODE Switch

Selects the basic operating modes of the oscilloscope.

CH1:

Only the input signal to channel 1 is displayed as

a single trace.

CH2:

Only the input signal to channel 2 is displayed as a single trace.

DUAL:

Displays channel 1 and 2 signals on the screen.

ADD:

The waveforms from channel 1 and channel 2 in-(CH1+CH2) puts are added and the sum is displayed as a single trace. When the CH2 INV (10) control is pulled

out, the waveform from channel 2 is subtracted from the channel 1 waveform and the difference is displayed as a single trace.

TRI:

Displays channel 1, 2 and 3 signals on the screen.

12) POWER, SCALE ILLUM Control

Fully counterclockwise rotation of this control (OFF position) turns off oscilloscope. Clockwise rotation turns on oscilloscope. Further clockwise rotation of the control increases the illumination level of scale.

(13) PILOT Lamp

Lights when oscilloscope is turned on.

(14) — GND terminal/binding post

Earth and chassis ground.

(15) CAL Terminal

Provides approximately 1 kHz, 1 V peak-to-peak square wave signal. This is useful for probe compensation adjustment.

16) TRACE ROTATION Control

Electrically rotates trace to horizontal position.

Strong magnetic fields may cause the trace to be tilted. The degree of tilt may vary as the scope is moved from one location to another. In these cases, adjust this control.

(17) FOCUS Control

Adjusts the trace for optimum focus.

(18) INTENSITY/PULL ASTIG Control

INTENSITY: Clockwise rotation of this control increases the

brightness of the trace.

ASTIG:

Pull out and rotate this knob. Astigmatism adjustment provides optimum spot roundness when used in conjunction with FOCUS control regardless intensity control.

(19) LEVEL/PULL SLOPE (-) Control

LEVEL:

Trigger level adjustment determines the point on waveform where sweep starts.

When COUPLING switch is selected in TV-FRAME or LINE, the trigger level adjustment

has no effect.

SLOPE:

Selector of trigger polarity; pulling this control selects the negative slope.

② CH3 ♦ POSITION Control

Adjusts the vertical position of channel 3 trace. This control is used when the vertical MODE is selected to TRIPLE.

21) SOURCE Switch

Five-position lever switch; selects triggering source for the sweep, with following positions;

VERT MODE:

The trigger source is determined by vertical MODE selection. (Hereafter VERT MODE is abbreviated to V. MODE.)

CH1: Channel 1 signal is used as a trigger source.

CH2: Channel 2 signal is used as a trigger source.

ADD: The algebraic sum of channel 1 and channel 2 signals is the trigger source.

(If CH2 INV is engaged, the difference becomes the trigger source.)

ALT; Display is alternately triggered by CH1 and CH2 (dual-trace operation) or CH1, CH2 and CH3 (triple-trace operation).

CHOP; The display cannot be synchronized with the input signal since the chopping signal becomes the trigger source.

CH1: Sweep is triggered by channel 1 signal regardless of vertical MODE selection.

CH2: Sweep is triggered by channel 2 signal regardless of vertical MODE selection.

EXT/

CH3: Sweep is triggered by signal applied to EXT TRIG INPUT jack (3).

LINE: Sweep is triggered by line frequency (50/60 Hz).

Sweep may not be triggered when the COUPLING switch is not at the AC position. In that case, set the COUPLING switch to AC.

22 COUPLING Switch

Five-position lever switch; selects coupling for sync trigger signal.

AC: Trigger is AC coupled. Blocks DC component of input signal; most commonly used position.

Sync signal is coupled through a low-pass filter to eliminate high frequency components for stable triggering of low frequency signals.

DC: The sync signal is DC coupled for sync which includes the effects of DC components.

TV

HFREJ:

FRAME: Vertical sync pulses of a composite video signal are selected for triggering.

TV LINE: Horizontal sync pulses of a composite video signal are selected for triggering.

23 CH3 or EXT. TRIG Input Jack

Input terminal of channel 3 signal or external trigger signal. When vertical MODE is set at TRI, not only channel 1 and channel 2 input signals but channel 3 signal is observable simultaneously. When the SOURCE switch is set to EXT CH3, this signal triggers sweep.

(4) HORIZ MODE Switch

Used to select the horizontal display mode.

 Only A sweep is operative with the B sweep dormant.

ALT: A sweep alternates with the B sweep. For this mode of operation, the B sweep appears as an intensified section on the A sweep.

B: Only delayed B sweep is operative.

X-Y: Channel 1 becomes the Y axis and channel 2 becomes the X axis for X-Y operation. The setting of the vertical MODE and TRIG MODE switches have no effect.

25 A TRIG MODE Switch

Five-position lever switch; selects triggering mode.

AUTO: Triggered sweep operation. When trigger signal is present, automatically generates sweep (free runs in absence of trigger signal.)

NORM: Normal triggered sweep operation. No trace is presented when a proper trigger signal is not applied.

FIX: Same as automatic mode; automatically generates sweep (free runs) in absence of trigger signal except trigger threshold is automatically fixed at center of input signal regardless of setting of LEVEL control.

SINGLE: Single sweep operation. In this mode, simultaneous observation of both the A and B sweeps is not possible.

Note;

For single sweep operation in dual or triple trace, vertical MODE must not be set to ALT. Use the CHOP mode instead.

RESET: This is the reset switch for single sweep operation. Setting to RESET returns the switch to the SINGLE position; READY indicator ® goes ON and stays ON until main sweep (A sweep) is completed.

26 READY Indicator

In SINGLE triggering mode, lights when A TRIG MODE switch is set to RESET and goes off when main sweep (A sweep) is completed.

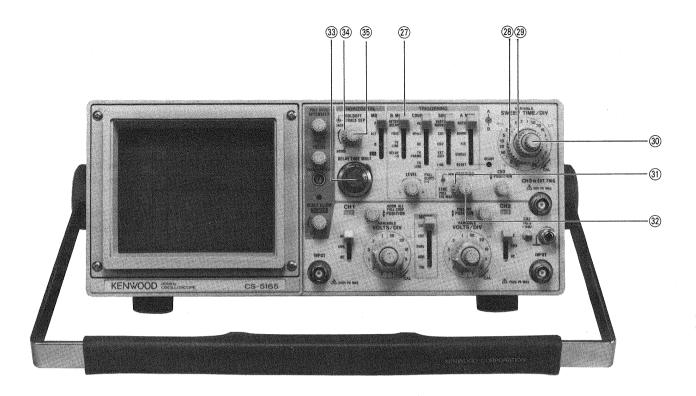


Fig. 4

② B TRIG MODE Switch

Used to select delay sweep mode.

AFTER DELAY:

B sweep is triggered immediately after the delay set by A SWEEP TIME/DIV and DELAY TIME MULT controls.

TRIG:

"Triggerable After Delay" operation of B Sweep triggering is inhibited during delay period set by A SWEEP TIME/DIV and DELAY TIME MULT controls. B Sweep is triggered by first occurence of proper trigger signal after the delay. In this case the source of the B trigger is the same as the source of the A trigger. Both A and B trigger levels are adjusted by TRIG LEVEL control.

TV LINE:

When A sweep trigger signal coupling is set to TV FRAME, B sweep is triggered by horizontal sync pulses of a composite video signal after the delay time set by DELAY TIME MULT.

DELAY = 0: (Hereafter DELAY = 0 is described as DELAY TIME ZERO.)

A and B sweeps are triggered simultaneously, regardless of DELAY TIME MULT setting. This mode is used to observe the first portion of complicated period of pulse trains with magnification.

28 A SWEEP TIME/DIV Control

Horizontal coarse A sweep time selector.

Selects calibrated sweep times of 0.05 μ s/div to 0.5 s/div in 22 steps when SWEEP VARIABLE control 30 is set to CAL position (fully clockwise).

29 B SWEEP TIME/DIV Control

Coarse horizontal B sweep time selector.

Selects sweep times of 0.05 $\mu s/div$ to 50 ms/div in 19 steps.

B sweep time selector should be set same as or faster than A sweep time.

30 SWEEP VARIABLE Control

Fine A sweep time adjustment. In the fully clockwise (CAL) position, the sweep time is calibrated.

No fine adjustment is available for the B sweep time.

③1 ◀▶ POSITION Control

Rotation adjusts horizontal position of trace.

32 FINE/PULL × 10 MAG Control

FINE:

Rotation becomes fine adjustment of horizontal position of trace.

PULL ×10 MAG:

When pulled out, increases sweep time by 10 times

33 DELAY TIME MULT Control

Adjusts the start time of the B sweep to some delay time after the start of A sweep. The delay time may be set to values between 0.2 and 10 times the setting of the A SWEEP TIME/DIV control.

34 HOLDOFF Control

Adjusts holdoff (trigger inhibit period beyond sweep duration). Clockwise rotation from the NORM position increases holdoff time, up to 10 times at the MAX. position (fully counterclockwise).

35) TRACE SEPARATION Control

Adjusts vertical separation between A sweep and B sweep (control has effect only in the ALT of HORIZ. MODE). Clockwise rotation increases separation; B sweep moves down with respect to A sweep up to 4 divisions.

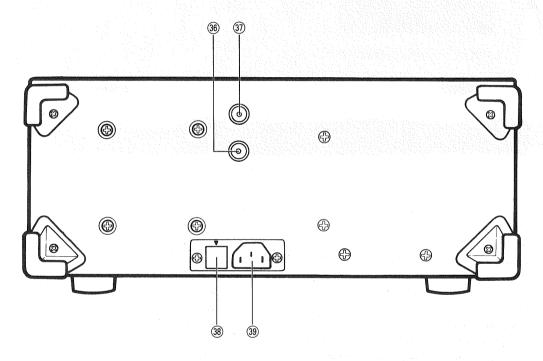


Fig. 5

REAR PANEL

36 Z AXIS INPUT Jack

External intensity modulation input terminal.

Positive voltage decreases brightness, negative voltage increases brightness.

③ CH1 OUTPUT Jack

CH1 vertical output signal connector.

AC coupled output connector. This connector is used to measure the frequency by connecting the frequency counter. When the VOLTS/DIV control ② is at 1 mV, frequency measurement with the counter may not produce a correct frequency display due to noise.

Then set the VOLTS/DIV to other range or rotate the VARI-ABLE control ③ to other than CAL position for stable operation. Do not connect CH1 OUTPUT to channel 2 input as cascaded operation.

38 Fuse Holder, Line Voltage Selector

Contains the line fuse. Verify that the proper fuse is installed when replacing the line fuse.

100 V, 120 V..... 1 A

220 V, 240 V......0.7 A

After pulling the power cord plug from the power outlet, adjust this selector to your line voltage.

39 Power input connector

Input terminals of power supply. Connect the AC cord provided.

OPERATION

INITIAL STARTING PROCEDURE

Until you familiarize yourself with the use of all controls, the following procedure may be used to standarize the initial setting of controls as a reference point and to obtain trace on the CRT in preparation for waveform observation. When using the probe(s), refer to probe's instructions and "PROBE COMPENSATION" listed in "APPLICATION" of this manual.

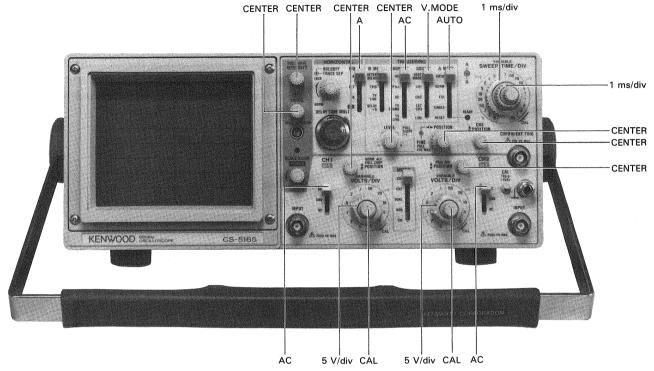


Fig. 6

(1) NORMAL SWEEP DISPLAY OPERATION

1. Turn the POWER switch 1 clockwise — the power supply will be turned on and the pilot lamp will light. Set these modes as follows;

Vertical MODE ①: CH1 A TRIG MODE ②: AUTO

- 2. The trace will appear in the center of the CRT display and can be adjusted by the CH1 ♣ POSITION ① and ◀▶ POSITION ③ controls. Next, adjust the INTENSITY ® and, if necessary, the FOCUS ⑦ for ease of observation.
- 3. Vertical Modes

With vertical MODE ① set to CH1, apply an input signal to the CH1 INPUT ⑤ jack and adjust the VOLTS/DIV ② control for a suitable size display of the waveform. If the waveform does not appear in the display, adjust the VOLTS/DIV and ♣ POSITION controls to bring the waveform into the center portion of the CRT display. Operation with a signal applied to the CH2 INPUT ⑨ jack and the vertical MODE set to CH2 is similar to the above procedure.

In the ADD mode, the algebraic sum of CH1 + CH2 is displayed. If the CH2 INV 10 switch has been engaged, the algebraic difference of the two waveforms, CH1 — CH2 is displayed. If both channels are set to the same VOLTS/DIV, the sum or difference can be read directly in VOLTS/DIV from the CRT.

The DUAL mode allows simultaneous observation of channel 1 and channel 2 waveforms. The TRI mode allows simultaneous viewing of channel 1 thru channel 3 input signals. In the TRI mode, either the CHOP or ALT mode applies and must be selected.

In the CHOP mode, the sweep is chopped at an approximate 250 kHz rate and switched between CH1 and CH2. Note that in the CHOP mode of operation with the SOURCE switch set to V. MODE, the trigger source becomes the chopping signal itself, making waveform observation impossible. Use ALT mode instead in such cases, or select a trigger SOURCE of CH1, CH2 or CH3. If no trace is obtainable, refer to the following TRIGGER-ING procedures.

4. After setting the SOURCE switch, adjust the LEV-EL/SLOPE control @. The display on the screen will probably be unsynchronized. Refer to TRIGGERING procedure below for adjusting synchronization and sweep speed to obtain a stable display showing the desired number of waveform.

TRIGGERING

The input signal must be properly triggered for stable waveform observation. TRIGGERING is possible using the input signal INTernally to create a trigger or with an EXTernally provided signal of timing relationship to the observed signal, applying such a signal to the EXT TRIG INPUT jack. The SOURCE switch selects the input signal that is to be used to trigger the sweep, with INT sync possibilities (V.MODE, CH1, CH2, LINE) and CH3/EXT sync possibility.

★ Internal Sync

When the SOURCE selection is in INT (V.MODE, CH1, CH2, LINE), the input signal is connected to the internal trigger circuit. In this position, a part of the input signal fed to the INPUT (§) or (9) jack is applied from the vertical amplifier to the trigger circuit to cause the trigger signal triggered with the input signal to drive the sweep.

When the V.MODE position is selected, the trigger source is dependent upon the vertical MODE selection.

When the vertical MODE switch is selected in ALT and DUAL, the trigger source alternates between channel 1 and channel 2 with each sweep.

When the vertical MODE switch is selected in ALT and TRI, the trigger source alternates channel 1 thru channel 3 with each sweep.

This is convenient for checking amplitudes, waveshape, or waveform period measurements and even permits simultaneous observation of two waveforms which are not related in frequency or period. However, this setting is not suitable for phase or timing comparison measurements. For such measurements, two or three traces must be triggered by the same sync signal.

When the SOURCE selection is in CH1, the input signal at the channel 1 INPUT (5) jack becomes trigger regardless of the position of vertical MODE. When the SOURCE selection is in CH2, the input signal at the channel 2 INPUT (9) jack becomes trigger regardless of the position of vertical MODE. If the SOURCE switch is set to the LINE position, triggering is derived from the input line voltage (50/60 Hz).

This is useful measurements that are related to line frequency.

* External Sync

When the SOURCE selection is in EXT/CH3, the input signal at the EXT TRIG INPUT (3) jack becomes the trigger. This signal must have a time or frequency relationship to the signal being observed to synchronize the display. External sync is prefered for waveform observation in many applications. For example, Fig. 7 shows that the sweep circuit is driven by the gate signal when the gate signal in the burst signal is applied to the EXT TRIG INPUT jack. Fig. 7 also shows the input/output signals, where the burst signal generated from the signal is applied to the instrument under test. Thus, accurate triggering can be achieved without regard to the input signal fed to the INPUT (5) or (9) jack so that no further triggering is required even when the input signal is varied. When the vertical MODE is set to TRI, triple-trace display is provided and the signal applied to EXT/CH3 is to be used to trigger the sweep, with INTernal sync possibility.

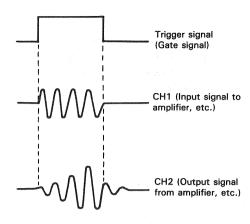


Fig. 7

* Coupling

The COUPLING switch selects the coupling mode of the trigger signal to the trigger circuit according to the type of trigger signal (DC, AC, signal superimposed on dc, signal with high frequency noise.).

AC:

Most commonly used position; permits triggering from 10 Hz to over 60 MHz (for CS-1045, 40 MHz). Blocks dc component of sync trigger signal.

HFREJ.:

Attenuates trigger signal above 100 kHz. Useful to reduce high-frequency noise, and permits triggering from the modulation envelope of an amplitude modulated rf signal.

DC:

Permits triggering from dc to over 60 MHz (for CS-1045, 40 MHz). Couples dc component of sync trigger signal. Useful for triggering from very low frequency signals (below 10 Hz) or ramp waveforms with slow repeating dc.


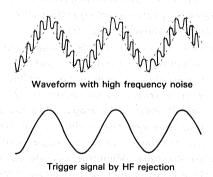


Fig. 8

* Triggering Level

Trigger point on waveform is adjusted by the LEVEL/PULL ⁽¹⁾ control. Fig. 9 shows the relationship between the SLOPE and LEVEL of the trigger point. Triggering level can be adjusted as necessary.

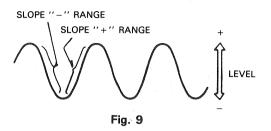

* Auto Trigger

When the A TRIG MODE ② selection is in AUTO, the sweep circuit becomes free-running as long as there is no trigger signal, permitting a check of GND level. When a trigger signal is present, the trigger point can be determined by the LEVEL control for observation as in the normal trigger signal. When the trigger level exceeds the trigger signal, the trigger circuit also becomes free-running where the waveform starts running. When the A TRIG MODE is set to NORM and/or, when the trigger signal is absent or the triggering level exceeds the signal there is no sweep.

★ Fix

When the A TRIG MODE (25) is set to FIX, triggering is always effected in the center of the waveform, eliminating the need for adjusting the triggering level. As shown in Fig. 10-(a) or (b), when the A TRIG MODE is set to NORM and the triggering level is adjusted to either side of the signal, the trigger point is deviated as the input signal becomes small which, in turn, stops the sweep operation. By setting the A TRIG MODE to FIX, the triggering level is automatically adjusted to the approximate center of the waveform and the signal is synchronized regardless of the position of LEVEL control as shown in Fig. 10-(c).

When the input signal is suddenly changed from a square waveform to a pulse waveform, the trigger point is shifted extremely toward the "-" side of the waveform unless the triggering level is readjusted as shown in Fig. 11-(a).

See Fig 11-(a)-(2). Also, if the trigger point has been set to the "-" of squarewave (Fig 11-(b)-(1)) and the input signal is changed to a pluse signal, the trigger point is deviated and the sweep stops. When this happens, set the A TRIG MODE to FIX and the triggering is effected in the approximate center of the waveform, making it possible to observe a stabilized waveform. (Fig 11-(c))



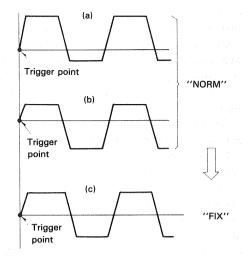



Fig. 10

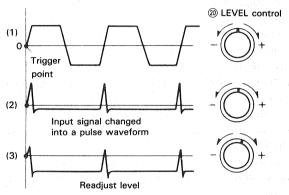

(a) When the trigger level is set around the center of the waveform

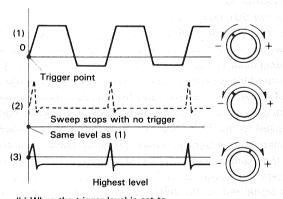

(b) When the trigger level is set to the "-" side of the waveform (Mode switch set to "NORM")

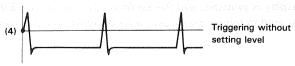

(c) Mode switch set to "FIX"

Fig. 11

(2) MAGNIFIED SWEEP OPERATION

Since merely shortening the sweep time to magnify a portion of an observed waveform can result in the desired portion disappearing off the screen, such magnified display should be performed using the MAGNIFIED SWEEP.

Using the ◀▶ POSITION control, adjust the desired portion of waveform to the CRT. Pull the PULL×10 MAG ③ control to magnify the display 10 times. For this type of display the sweep time is the SWEEP TIME/DIV setting divided by 10.

(3) ALTERNATING SWEEP OPERATION

A sweep and B delayed sweep are usable in an alternating fashion making it possible to observe both the normal and magnified waveform simultaneously.

Procedure:

- 1. Set the HORIZ MODE to A and adjust for a normal waveform display.
- 2. Set the B TRIG MODE to AFTER DELAY and set the HO-RIZ MODE to ALT. Adjust TRACE SEPATATION (§) for easy observation of both the A and B traces. The upper trace is the non-magnified portion of the waveform with the magnified portion super-imposed as an intensified section. The lower waveform is the intensified portion displayed magnified.
- 3. The DELAY TIME MULT can be used to continuously slide the magnified portion of the waveform across the A sweep period to allow magnification of precisely the desired portion of waveform. To magnify the front part of the sweep, set B TRIG MODE ② to DELAY=0.
- 4. Set the HORIZ MODE to B to display the INT intensified portion as a magnified B sweep, (Fig. 13)

Delay Time (magnified portion) = DELAY TIME MULT setting × A SWEEP TIME/DIV setting.

5. For Starts AFTER DELAY operation, apparent jitter increases as magnification increases. To obtain a jitter free display set the B TRIG MODE ② to TRIG. In this "Triggerable After Delay" mode the A trigger signal selected by the SOURCE switch ② becomes the B trigger source.

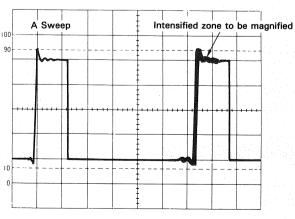


Fig. 12

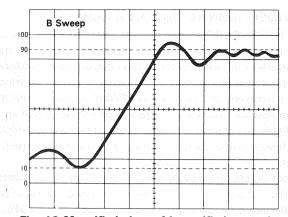


Fig. 13 Magnified view of intensified zone above

Note that for this type of operation both the DELAY TIME MULT and TRIG LEVEL affect the start of the B sweep so that the delay time is used as a reference point. (Fig. 14)

(4) X-Y OPERATION

For some measurements, an external horizontal deflection signal is required. This is also referred to as an X-Y measurement, where the Y input provides vertical deflection and X input provides horizontal deflection.

X-Y operation permits the oscilloscope to perform many types of measurements not possible with conventional sweep operation. The CRT display becomes an electronic graph of two instantaneous voltages. The display may be a direct comparison of two voltages such as during phase measurement, or frequency measurement with Lissajous waveforms.

To use an external horizontal input, use the following procedure;

- 1. Set the HORIZ MODE switch to X-Y the position.
- 2. Use the channel 1 probe for the vertical input and the channel 2 probe for the horizontal input.
- 3. Adjust the amount of horizontal deflection with the CH2 VOLTS/DIV and VARIABLE controls.
- 4. The CH2 (vertical) POSITION ⁽¹⁾ control now serves as the horizontal position control, and the ◀► POSITION control is disabled.
- 5. All sync controls are disconnected and have no effect.

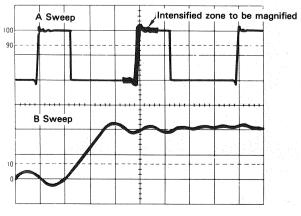


Fig. 14

(5) VIDEO SIGNAL OBSERVATION

The TV FRAME/LINE switch permits selection of vertical or horizontal sync pulse for sweep triggering when viewing composite video waveforms. In the LINE position, horizontal sync pulses are selected as triggers to permit viewing of horizontal line of video. In the FRAME position, vertical sync pulses are selected as triggers to permit viewing of vertical fields and frames of video. When observing the video waveforms, stable display is obtained on the screen regardless the TRIG LEVEL (19) control.

At most points of measurement, a composite video signal is of the (-) polarity, that is, the sync pulses are negative and the video is positive. In this case, use "-" SLOPE. If the waveform is taken at a circuit point where the video waveform is inverted, the sync pulses are positive and the video is negative. In this case, use "+" SLOPE.

(6) SINGLE SWEEP OPERATION

This mode of display is useful for looking at non-synchronous or one time events.

Procedure:

- Set the A TRIG MODE (3) to either AUTO or NORM. Apply a signal of approximately the same amplitude and frequency as the signal that is to be observed as the trigger signal and set the trigger level.
- Set A TRIG MODE to RESET observe that the READY indicator LED lights to indicate the reset condition. This LED goes out when the A sweep period is completed.
- 3. After the above set-up is completed the scope is ready to operate in the SINGLE sweep mode of operation after resetting the instrument using the RESET switch. Input of the trigger signal results in one and only one sweep and READY indicator LED goes out.

CAUTION: -

With the HORIZ MODE set to ALT the simultaneous observation of the A sweep and B sweep waveforms at SINGLE sweep mode is not possible. Also for DUAL or TRI operation simultaneous observation is not possible using ALT mode. Set the unit to the CHOP mode in this case.

APPLICATIONS

PROBE ADJUSTMENT

To obtain an accurate measurement result, the probe must be adjusted correctly before measurement.

- 1. Connect the probe to the INPUT terminal and set the control for a normal sweep display.
- 2. Connect the probe to the CAL terminal on the front panel, and adjust the SWEEP TIME/DIV switch so that several cycles of this signal are displayed.
- 3. Adjust the trimmer on the probe to obtain the following correct compensation waveform.

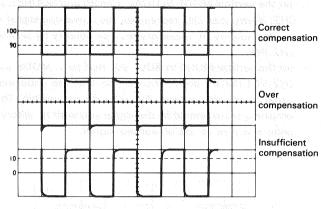


Fig. 15

TRACE ROTATION COMPENSATION

Rotation from a horizontal trace position can be the cause of measurement errors.

Adjust the controls for a single display. Set the AC-GND-DC switch to GND and A TRIG MODE to AUTO. Adjust the ♣ POSITION control such that the trace is over the center horizontal graticule line. If the trace appears to be rotated from horizontal, align it with the center graticule line using the TRACE ROTATION control located on the front panel.

DC VOLTAGE MEASUREMENTS

This procedure describes the measurement procedure for waveforms including the DC component.

Procedure:

 Connect the signal to be measured to the INPUT jack. Set the vertical MODE to the channel to be used. Set the VOLTS/DIV and SWEEP TIME/DIV switch to obtain a normal display of the waveform to be measured. Set the VARIABLE control to CAL position.

- Set the A TRIG MODE to AUTO and AC-GND-DC to the GND position, which established the zero volt reference.
 Using the ♣ POSITION control, adjust the trace position to the desired reference level position, making sure not to disturb this setting once made.
- 3. Set the AC-GND-DC switch to the DC position to observe the input waveform, including its DC component. If an appropriate reference level or VOLTS/DIV setting was not made, the waveform may not be visible on the CRT screen at this point. If so, reset VOLTS/DIV and/or the ♣ POSITION control.
- 4. Use the ◀► POSITION control to bring the portion of the waveform to be measured to the center vertical graduation line of the CRT screen.
- Measure the vertical distance from the reference level to the point to be measured, (the reference level can be rechecked by setting the AC-GND-DC switch again to GND).

Multiply the distance measured above by the VOLTS/DIV setting and the probe attenuation ratio as well. Voltages above and below the reference level are positive and negative values respectively.

Using the formula:

DC level = Vertical distance in divisions \times (VOLTS/DIV setting) \times (probe attenuation ratio).

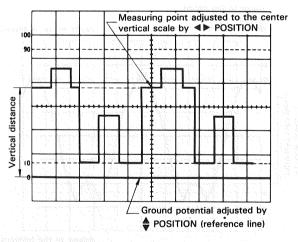


Fig. 16

[EXAMPLE]

For the example, the point being measured is 3.8 divisions from the reference level (ground potential).

If the VOLTS/DIV was set to 0.2 V/div and a 10:1 probe was used. (See Fig. 16)

Substituting the given values:

DC level = 3.8 (div) \times 0.2(V/div) \times 10 = 7.6 V

MEASUREMENT OF THE VOLTAGE BETWEEN TWO POINTS ON A WAVEFORM

This technique can be used to measure peak-to-peak voltages.

Procedure:

- Apply the signal to be measured to the INPUT jack. Set the vertical MODE to the channel to be used. Set the AC-GND-DC to AC, adjusting VOLTS/DIV and SWEEP TIME/DIV for a normal display. Set the VARIABLE control to CAL position.
- Using the ♣ POSITION control, adjust the waveform position such that one of the two points falls on a CRT graduation line and that the other is visible on the display screen.
- 3. Using the ◀▶ POSITION control, adjust the second point to coincide with the center vertical graduation line.
- 4. Measure the vertical distance between the two points and multiply this by the setting of the VOLTS/DIV control. If a probe is used, further multiply this by the attenuation ratio.

Using the formula:

Volts peak-to-peak

= Vertical distance (div) × (VOLTS/DIV setting) × (probe attenuation ratio)

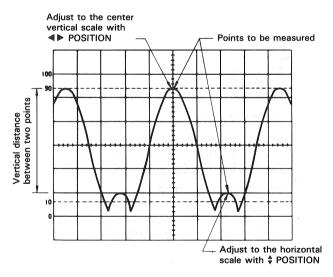


Fig. 17

[EXAMPLE]

For the example, the two points are separated by 4.4 divisions vertically. Set the VOLTS/DIV setting be 0.2 V/div and the probe attenuation be 10:1. (See Fig. 17)

Substituting the given value:


Voltage between two points = 4.4 (div) \times 0.2(V/div) \times 10 = 8.8V

ELIMINATION OF UNDESIRED SIGNAL COMPONENTS


The ADD feature can be conveniently used to cancel out the effect of an undesired signal component which may be superimposed on the signal you wish to observe. (See Fig. 18)

Procedure:

- Apply the signal containing an undesired component to the CH1 INPUT jack and the undesired signal itself alone to the CH2 INPUT jack.
- Set the vertical MODE to DUAL (CHOP) and SOURCE to CH2. Verify that CH2 represents the unwanted signal in reverse polarity. If necessary reverse polarity by setting CH2 INV.
- Set the vertical MODE to ADD, SOURCE to V. MODE and CH2 VOLTS/DIV and VARIABLE so that the undesired signal component is cancelled as much as possible. The remaining signal should be the signal you wish to observe alone and free of the unwanted signal.

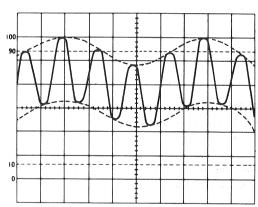

Signal containing undesired component (Broken lines: undesired component envelope)

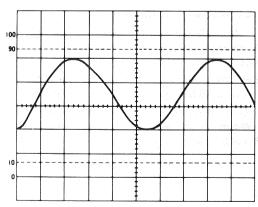

Undesired component signal

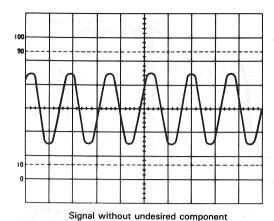


Fig. 18

TIME MEASUREMENTS


This is the procedure for making time measurements between two points on a waveform. The combination of the SWEEP TIME/DIV and the horizontal distance in divisions between the two points is used in the calculation.

Procedure:

- Apply the signal to be measured to the INPUT jack. Set the vertical MODE to the channel to be used. Adjust the VOLTS/DIV and SWEEP TIME/DIV for a normal display. Be sure that the VARIABLE control is set to CAL position.
- Using the POSITION control, set one of the points to be used as a reference to coincide with the horizontal centerline. Use the POSITION control to set this point at the intersection of any vertical graduation line.
- Measure the horizontal distance between the two points. Multiply this by the setting of the SWEEP TIME/DIV control to obtain the time between the two points. If horizontal "×10 MAG" is used, multiply this further by 1/10.

Using the formula:

Time = Horizontal distance (div) \times (SWEEP TIME/DIV setting) \times " \times 10 MAG" value⁻¹ (1/10)

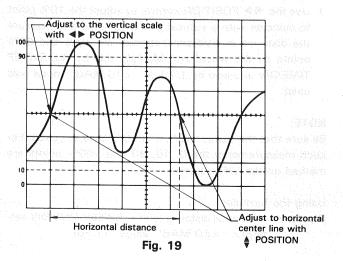

[EXAMPLE]

For the example, the horizontal distance between the two points is 5.4 divisions.

If the SWEEP TIME/DIV is 0.2 ms/div we calculate. (See Fig. 19)

Substituting the given value:

Time = $5.4 \text{ (div)} \times 0.2 \text{ (ms/div)} = 1.08 \text{ ms}$

FREQUENCY MEASUREMENTS

Frequency measurements are made by measuring the period of one cycle of waveform and taking the reciprocal of this time value as the frequency.

Procedure:

- Set the oscilloscope up to display one cycle of waveform (one period).
- 2. The frequency is the reciprocal of the period measured.

Using the formula:

$$\mathsf{Freq} = \frac{1}{\mathsf{period}}$$

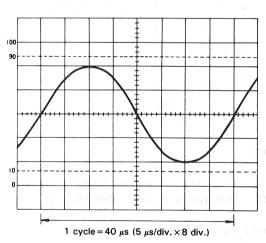


Fig. 20

[EXAMPLE]

A period of 40 μ s is observed and measured. (See Fig. 20)

Substituting the given value:

Freq = $1/[40 \times 10^{-6}] = 2.5 \times 10^4 = 25 \text{ kHz}$

While the above method relies on the measurement directly of the period of one cycle, the frequency may also be measured by counting the number of cycles present in a given time period.

 Apply the signal to the INPUT jack. Set the vertical MODE to the channel to be used and adjusting the various controls for a normal display. Set the VARIABLE control to CAL position. Count the number of cycles of waveform between a chosen set of vertical graduation lines.

Using the horizontal distance between the vertical lines used above and the SWEEP TIME/DIV, the time span may be calculated. Multiply the reciprocal of this value by the number of cycles present in the given time span. If " \times 10 MAG" is used multiply this further by 10.

Note that errors will occur for displays having only a few cycles.

Using the formula:

Freq =
$$\frac{\text{# of cycles} \times \text{"} \times 10 \text{ MAG" value}}{\text{Horizontal distance (div)} \times \text{SWEEP TIME/DIV setting}}$$

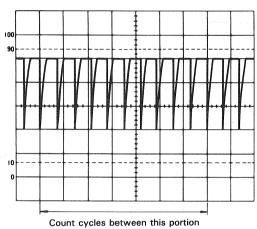


Fig. 21

[EXAMPLE]

For the example, within 7 divisions there are 10 cycles. The SWEEP TIME/DIV is 5 μ s/div. (See Fig. 21)

Substituting the given value:

Freq =
$$\frac{10}{7 \text{ (div)} \times 5 \text{ (}\mu\text{s/div)}} = 285.7 \text{ kHz}$$

PULSE WIDTH MEASUREMENTS

Procedure:

- Apply the pulse signal to the INPUT jack. Set the vertical MODE to the channel to be used.
- Use the VOLTS/DIV, VARIABLE and ♣ POSITION to adjust the waveform such that the pulse is easily observed and such that the center pulse width coincides with the center horizontal line on the CRT screen.
- 3. Measure the distance between the intersection of the pulse waveform and the center horizontal line in divisions. Be sure that the VARIABLE control is in the CAL. Multiply this distance by the SWEEP TIME/DIV and by 1/10 is "×10 MAG" mode is being used.

Using the formula:

Pulse width = Horizontal distance (div) × (SWEEP TIME/DIV setting) × '' × MAG 10'' value⁻¹ (1/10)

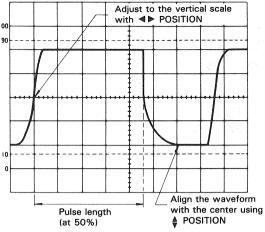


Fig. 22

[EXAMPLE]

For the example, the distance (width) at the center horizontal line is 4.6 divisions and the SWEEP TIME/DIV is 0.2 ms/div. (See Fig. 22)

Substituting the given value: Pulse width = $4.6 \text{ (div)} \times 0.2 \text{ ms/div} = 0.92 \text{ ms}$

PULSE RISETIME AND FALLTIME MEASUREMENTS

For risetime and falltime measurements, the 10% and 90% amplitude points are used as starting and ending reference points.

Procedure:

- Apply a signal to the INPUT jack. Set the vertical MODE to the channel to be used.
 - Use the VOLTS/DIV and VARIABLE to adjust the waveform peak-to-peak height to six divisions.
- Using the ♣ POSITION control and the other controls, adjust the display such that the waveform is centered vertically in the display. Set the SWEEP TIME/DIV to as fast a setting as possible consistent with observation of both the 10% and 90% points. Set the VARIABLE control to CAL position.
- 3. Use the ◀▶ POSITION control to adjust the 10% point to coincide with a vertical graduation line and measure the distance in divisions between the 10% and 90% points on the waveform. Multiply this by the SWEEP TIME/DIV and also by 1/10, if "×10 MAG" mode was used.

NOTE:

Be sure that the correct 10% and 90% lines are used. For such measurements the 0, 10, 90 and 100% points are marked on the CRT screen.

Using the formula:

Risetime = Horizontal distance (div) \times (SWEEP TIME/DIV setting) \times " \times 10 MAG" value⁻¹ (1/10)

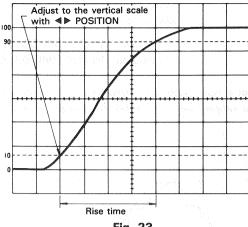


Fig. 23

[EXAMPLE]

For the example, the horizontal distance is 4.0 divisions. The SWEEP TIME/DIV is 2 μ s/div. (See Fig. 23)

Substituting the given value: Risetime = 4.0 (div) \times 2 (μ s/div) = 8 μ s

Risetime and falltime can be measured by making use of the alternate step 3 as described below as well.

4. Use the ◀► POSITION control to set the 10% point to coincide with the center vertical graduation line and measure the horizontal distance to the point of the intersection of the waveform with the center horizontal line. Let this distance be D₁. Next adjust the waveform position such that the 90% point coincides with the vertical centerline and measure the distance from that line to the intersection of the waveform with the horizontal centerline. This distance is D₂ and the total horizontal distance is then D₁ plus D₂ for use in the above relationship in calculating the risetime or falltime.

Using the formula:

Risetime = $(D_1 + D_2)$ (div) × (SWEEP TIME/DIV setting) × " × 10 MAG" value¹ (1/10)

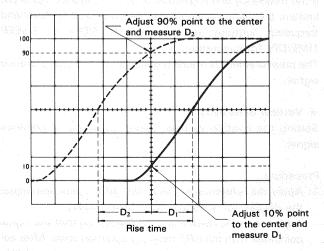


Fig. 24

IEXAMPLE

For the example, the measured D_1 is 1.8 divisions while D_2 is 2.2 divisions. If SWEEP TIME/DIV is 2 μ s/div we use the following relationship. (See Fig. 24)

Substituting the given value: Risetime = (1.8 + 2.2) (div) \times 2 (μ s/div) = 8 μ s

TIME DIFFERENCE MEASUREMENTS

This procedure is useful in measurement of time differences between two signals that are synchronized to one another but skewed in time.

Procedure:

 Apply the two signals to CH1 and CH2 INPUT jacks. Set the vertical MODE to DUAL choosing either ALT or CHOP mode.

Generally for low frequency signals CHOP is chosen with ALT used for high frequency signals.

Select the faster of the two signals as the SOURCE and use the VOLTS/DIV and SWEEP TIME/DIV to obtain an easily observed display.

Set the VARIABLE control to CAL position.

- Using the ♣ POSITION control set the waveforms to the center of the CRT display and use the ◀▶ POSITION control to set the reference signal to be coincident with a vertical graduation line.
- Measure the horizontal distance between the two signals and multiply this distance in divisions by the SWEEP TIME/DIV setting.

If " \times 10 MAG" is being used multiply this again by 1/10.

Using the formula:

Time = Horizontal distance (div) \times (SWEEP TIME/DIV setting) \times " \times 10 MAG" value⁻¹ (1/10)

[EXAMPLE]

For the example, the horizontal distance measured is 4.4 divisions. The SWEEP TIME/DIV is 0.2 ms/div. (See Fig. 25)

Substituting the given value:

Time = 4.4 (div) \times 0.2 (ms/div) = 0.88 ms

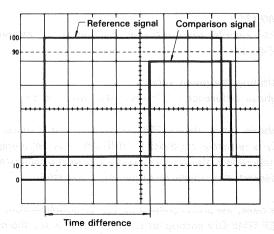


Fig. 25

PHASE DIFFERENCE MEASUREMENTS

This procedure is useful in measuring the phase difference of signals of the same frequency.

Procedure:

- Apply the two signals to the CH1 and CH2 INPUT jacks, setting the vertical MODE to either CHOP or ALT mode.
- Set the SOURCE to the signal which is leading in phase and use the VOLTS/DIV to adjust the signals such that they are equal in amplitude. Adjust the other controls for a normal display.
- 3. Use the SWEEP TIME/DIV and SWEEP VARIABLE to adjust the display such that one cycle of the signals occupies 8 divisions of horizontal display.
 - Use the ♣ POSITION to bring the signals in the center of the screen.
 - Having set up the display as above, one division now represents 45° in phase.
- 4. Measure the horizontal distance between corresponding points on the two waveforms.

Using the formula:

Phase difference = Horizontal distance (div) × 45°/div

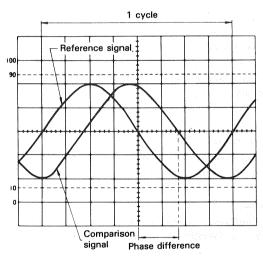


Fig. 26

[EXAMPLE]

For the example, the horizontal distance is 1.7 divisions. (See Fig. 26)

Substituting the given value:

The phase difference = $1.7 \text{ (div)} \times 45^{\circ}/\text{div} = 76.5^{\circ}$


The above setup allows 45° per division but if more accuracy is required the SWEEP TIME/DIV may be changed and magnified without touching the VARIABLE control and if necessary the trigger level can be readjusted.

In this case, the phase difference can be obtained from the SWEEP TIME/DIV setting for 8 divisions/cycle and the new SWEEP TIME/DIV setting changed for higher accuracy, by useing the following formula.


Phase difference = Horizontal distance of new sweep range (div) × 45°/div

 $\times \frac{ \text{New SWEEP TIME/DIV setting} }{ \text{Original SWEEP TIME/DIV setting} }$

Another simple method of obtaining more accuracy quickly is to simply use $\times 10$ MAG for a scale of 4.5° /div.

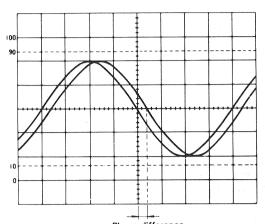

Phase difference
One cycle adjusted to occupy 8 div.

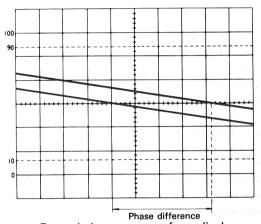

Expanded sweep waveform display.

Fig. 27

RELATIVE MEASUREMENT

If the frequency and amplitude of some reference signal are known, an unknown signal may be measured for level and frequency without use of the VOLTS/DIV or SWEEP TIME/DIV for calibration.

The measurement is made in units relative to the reference signal.

★ Vertical Sensitivity

Setting the relative vertical sensitivity using a reference signal.

Procedure:

1. Apply the reference signal to the INPUT jack and adjust the display for a normal waveform display.

Adjust the VOLTS/DIV and VARIABLE so that the signal coincides with the CRT face's graduation lines. After adjusting, be sure not to disturb the setting of the VARIABLE control.

 The vertical calibration coefficient is now the reference signal's amplitude (in volts) divided by the product of the vertical amplitude set in step 1 and the VOLTS/DIV setting.

Using the formula: Vertical coefficient

Voltage of the reference signal (V)


Vertical amplitude (div) × VOLTS/DIV setting


3. Remove the reference signal and apply the unknown signal to the INPUT jack, using the VOLTS/DIV control to adjust the display for easy observation. Measure the amplitude of the displayed waveform and use the following relationship to calculate the actual amplitude of the unknown waveform.

Using the formula:

Amplitude of the unknown signal (V)

= Vertical distance (div) × Vertical coefficient × VOLTS/ DIV setting

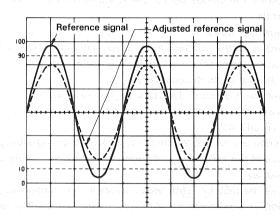

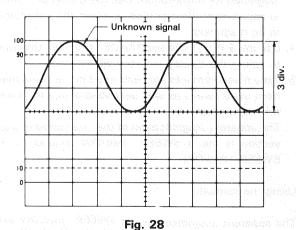

[EXAMPLE]

For the example, the VOLTS/DIV is 1 V/div.

The reference signal is 2 Vrms. Using the VARIABLE, adjust so that the amplitude of the reference signal is 4 divisions. (See Fig. 28)

Substituting the given value:

Vertical coefficient =
$$\frac{2 \text{ V rms}}{4 \text{ (div)} \times 1 \text{ (V/div)}} = 0.5$$

Then measure the unknown signal and VOLTS/DIV is 5 V/div and vertical amplitude is 3 divisions.

Substituting the given value:

Effective value of unknown signal = 3 (div) \times 0.5 \times 5 (V/div) = 7.5 V rms

★ Period

Setting the relative sweep coefficient with respect to a reference frequency signal.

Procedure:

 Apply the reference signal to the INPUT jack, using the VOLTS/DIV and VARIABLE to obtain an easily observed waveform display.

Using the SWEEP TIME/DIV and SWEEP VARIABLE adjust one cycle of the reference signal to occupy a fixed number of scale divisions accurately. After this is done be sure not to disturb the setting of the VARIABLE control.

 The Sweep (horizontal) calibration coefficient is then the period of the reference signal divided by the product of the number of divisions used in step 1 for setup of the reference and the setting of the SWEEP TIME/DIV control.

Using the formula: Sweep coefficient

Period of the reference signal (sec) horizontal width (div) × SWEEP TIME/DIV setting

Remove the reference signal and input the unknown signal, adjusting the SWEEP TIME/DIV control for easy observation.

Measure the width of one cycle in divisions and use the following relationship to calculate the actual period.

Using the formula:

Period of unknown signal = Width of 1 cycle (div) \times sweep coefficient \times SWEEP TIME/DIV setting


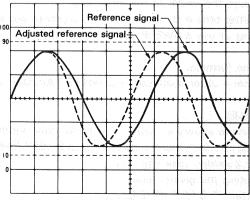


Fig. 29



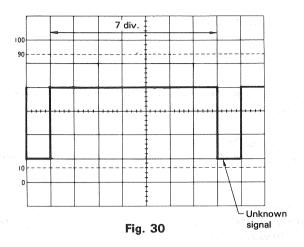

SWEEP TIME/DIV is 0.1 ms/div and apply 1.75 kHz reference signal. Adjust the SWEEP VARIABLE so that the distance of one cycle is 5 divisions.

Substituting the given value:

Horizontal coefficient =
$$\frac{1.75 \text{ (kHz)}^{-1}}{5 \times 0.1 \text{ (ms/div)}} = 1.142$$

Then, SWEEP TIME/DIV is 0.2 ms/div and horizontal amplitude is 7 divisions. (See Fig. 30)

Substituting the given value: Pulse width = 7 (div) \times 1.142 \times 0.2 (ms/div) \rightleftharpoons 1.6 ms

PULSE JITTER MEASUREMENT

- Apply the signal to the INPUT jack and set the vertical MODE to the channel to be used.
 Use the VOLTS/DIV to adjust for an easy to observe waveform display. Special care should be taken to adjust the trigger group of controls for a stable display.
 Set the SWEEP VARIABLE to CAL position.
- Set the HORIZ MODE to ALT and B TRIG MODE to affect the AFTER DELAY mode.
 Adjust the DELAY TIME MULT for intensified display of the waveform to be measured.
- Using the B SWEEP TIME/DIV adjust the display for intensification of the entire jitter area of the waveform.
- 4. Set the HORIZ MODE to B. Measure the width of the jitter area. The jitter time is this width in division multiplied by the setting of the B SWEEP TIME/DIV control.

Using the formula:

Pulse jitter = Jitter width (div) × B SWEEP TIME/DIV setting

[EXAMPLE]

The example shows a case in which the jitter width was measured at 1.6 divisions wide with the B SWEEP TIME/DIV set at 0.2 μ s/div. (See Fig. 31) Substituting the given value: Pulse jitter = 1.6 (div) × 0.2 (μ s/div) = 0.32 μ s

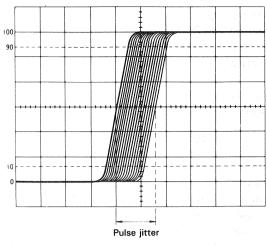


Fig. 31

SWEEP MULTIPLICATION (MAGNIFICATION)

The apparent magnification of the delayed sweep is determined by the values set by the A and B SWEEP TIME/DIV controls.

- Apply a signal to the INPUT jack and set the vertical MODE to the channel to be used, adjusting VOLTS/DIV for an easily observed display of the waveform and the other controls if necessary.
- 2. Set the A SWEEP TIME/DIV so that several cycles of the waveform are displayed. Set the B TRIG MODE to AF-

When the HORIZ MODE is set to ALT, the magnified portion of the waveform will appeared intensified on the CRT display.

- 3. Use the DELAY TIME MULT to shift the intensified portion of waveform to correspond with the section to be magnified for observation. Use the B SWEEP TIME/DIV to adjust intensified portion to cover the entire portion to be magnified.
- 4. Use the ♦ POSITION and TRACE SEPARATION controls to adjust the display for easy viewing.
- Time measurements are performed in the same manner from the B sweep as was described above for A sweep time measurements.

The apparent magnification of the intensified waveform section is the A SWEEP TIME/DIV divided by the B SWEEP TIME/DIV.

Using the formula:

The apparent magnification of the intensified waveform = $\frac{A \text{ SWEEP TIME/DIV setting}}{B \text{ SWEEP TIME/DIV setting}}$

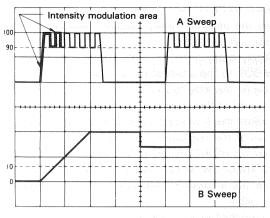


Fig. 32

[EXAMPLE]

In the example, the A SWEEP TIME is 2 μ s/div and the B SWEEP TIME is 0.2 μ s/div. (See Fig. 32)

Substituting the given value:

Apparent magnification ratio =
$$\frac{2 \times 10^{-6}}{0.2 \times 10^{-6}} = 10^{-6}$$

With the above magnification, if the magnification ratio is increased, delay jitter will occur.

To achieve a stable display, set the B MODE to TRIG and used the triggered mode of operation.

- 1. Perform the above steps 1 through 3.
- 2. Set the B TRIG MODE to TRIG.
- 3. Set the HORIZ MODE to either ALT or B. The apparent magnification will be the same as described above.

DELAYED SWEEP TIME MEASUREMENT

Using the B sweep, high accuracy time measurements can be made.


- Apply a signal to INPUT jack and set the vertical MODE to the channel to be used. Adjust the VOLTS/DIV and the other controls if necessary to obtain an easily observed waveform display.
 - Set the SWEEP VARIABLE to CAL position.
- Adjust the A SWEEP TIME/DIV to display the portion of waveform to be measured. Set the B TRIG MODE to AF-TER DELAY mode.
 - Set the HORIZ MODE to ALT and adjust the B SWEEP TIME/DIV for as small as possible an intensified region.
- 3. Using the ₱ POSITION control adjust the waveform position so as to intersect with the center horizontal line on the CRT screen. Use the DELAY TIME MULT so that the intensified portion of waveform touches the center horizontal line and record the setting of the DELAY TIME MULT at this point.
- 4. Use the DELAY TIME MULT to adjust intensified portion to same point of the second waveform.

The waveform period is the second dial reading minus the first dial reading multiplied by the A SWEEP TIME/DIV setting.

Using the formula:

Period = (2nd dial reading — 1st dial reading)

× Delayed sweep time (A SWEEP TIME/DIV setting)

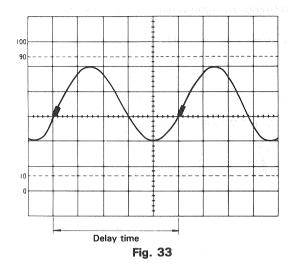

[EXAMPLE]

For the example the first dial setting is 1.01 and the second is 6.04. The setting of A SWEEP TIME/DIV is 2 ms/div. (See Fig. 33)

Substituting the given value: Period = $(6.04 - 1.01) \times 2$ (ms/div) = 10.06 ms

PULSE WIDTH MEASUREMENTS USING DELAYED SWEEP

This method is similar to the time measurement method and can be used for high accuracy pulse width measurements.

- 1. Apply the pulse signal to the INPUT jack and set the vertical MODE to the channel to be used.
- Use the VOLTS/DIV, VARIABLE and ₱ POSITION controls to adjust the display such that the waveform is easily observable with the center of the pulse width coinciding with the center horizontal graduation line.
 Set the SWEEP VARIABLE to CAL position.
- Set the A SWEEP TIME/DIV to display the portion of the waveform to be measured, set the B TRIG MODE to TRIG.
 Set the HORIZ MODE to ALT, and adjust the B SWEEP TIME/DIV for as short as possible an intensified section of waveform.
- 4. Using the DELAY TIME MULT, adjust the display so that the intensified portion touches the center horizontal graduation line of the CRT screen and record the dial setting at this point.
- 5. Using the DELAY TIME MULT adjust the falling edge of the pulse so that it touches the center horizontal graduation line and is intensified.

The pulse width is the second dial reading minus the first dial reading multiplied by the A SWEEP TIME/DIV setting.

Using the formula:

Pulse width = (2nd dial reading-1st dial reading)
× Delayed sweep time (A SWEEP TIME/DIV setting)

[EXAMPLE]

In the example, the first dial reading is 0.61 and the second is 5.78 with the A SWEEP TIME/DIV setting at 2 μ s/div. Substituting the appropriate values. (See Fig. 34)

Pulse width = $(5.78 - 0.61) \times 2 (\mu s/div) = 10.34 \mu s$

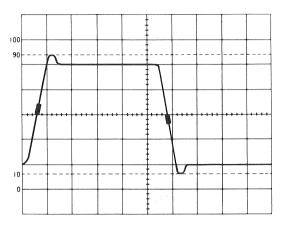


Fig. 34

FREQUENCY MEASUREMENTS USING DELAYED SWEEP

The frequency is obtained as the reciprocal of the period of one cycle.

- 1. Measure the period of the waveform using the procedure described above for time measurement.
- The frequency is then the reciprocal of the period measured.

Using the formula:

$$\mathsf{Freq} = \frac{1}{\mathsf{Period}}$$

[EXAMPLE]

For the example, the period measured is 40.2 μ s, making the frequency simply. (See Fig. 35)

Substituting the given value: Freq = $1/(40.2 \times 10^{-6}) = 24.88 \text{ kHz}$

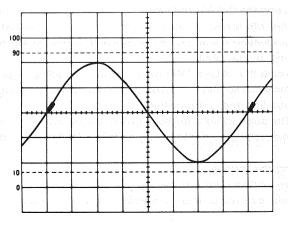


Fig. 35

PULSE REPETITION TIME

Using the delayed sweep feature, reliable time measurements can be made.

- Apply a signal to the INPUT jack and set the vertical MODE to the channel to be used.
 Adjust the VOLTS/DIV to obtain a normal easy to view
- display of the waveform are displayed.

 2. Adjust the A SWEEP TIME/DIV so that at least two cycles of the waveform are displayed.

 Set the HORIZ MODE to ALT and set the B TRIG MODE

to affect the AFTER DELAY mode of operation. Set the B SWEEP TIME/DIV as fast a sweep speed as possible.

Using the DELAY TIME MULT, adjust the intensified portion to coincide with the first pulse.
 Set the HORIZ MODE to ALT and use TRACE SEPARATION to adjust the waveforms for easy viewing.

- 4. Using the DELAY TIME MULT, set the pulse to coincide with one of the vertical graduation lines and record the dial setting at this point.
- 5. Again using the DELAY TIME MULT, adjust the second pulse in the same manner to the vertical line used in step 4, recording this dial setting as well. The pulse repetition time is the second dial reading minus the first dial reading multiplied by the A SWEEP TIME/DIV control setting.

Using the formula:

Pulse repetition time = (2nd dial reading - 1st dial reading) \times Delayed sweep time (A SWEEP TIME/DIV setting)

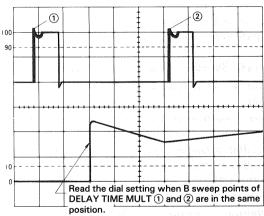


Fig. 36

[EXAMPLE]

For the example, the first dial reading is 0.76 and the second is 6.22 with the A SWEEP TIME/DIV set at 2 μ s/div. We have, substituting the appropriate values. (See Fig. 36)

Pulse repetition time = $(6.22-0.76)\times 2$ (μ s/div) = 10.92 μ s

USING DELAYED SWEEP FOR MEASUREMENT OF RISETIMES AND FALLTIMES

Risetimes and falltimes are generally measured by using the 10% and 90% amplitude points as reference starting and ending points for the rise or fall.

- Apply the signal to the INPUT jack and set the vertical MODE to the channel to be used.
 - Use the VOLTS/DIV and VARIABLE controls to obtain a normal 6 divisions vertical amplitude waveform.
 - Using the ₱ POSITION control, set the waveform position in the central area of the screen vertically, that it to coincide with the 100% and 0% lines on the CRT screen. Set the SWEEP TIME/DIV control to as high a speed as possible consistent with observatin of both the 10% and 90% points.
 - Set the SWEEP VARIABLE to CAL position.
- Set the B TRIG MODE to initiate the AFTER DELAY mode of operation and HORIZ MODE to ALT and adjust the B SWEEP TIME/DIV for as short as possible an intensified section of waveform.
- Using the DELAY TIME MULT, adjust the waveform such that the 10% point is intensified and record the dial reading.
- Similarly, using the DELAY TIME MULT, adjust the 90% point so that it is intensified and record that dial reading as well.
 - The pulse risetime (or falltime) is simply the difference between the two dial settings times the A SWEEP TIME/DIV control setting.

Using the formula:

Risetime = $(2nd dial reading - 1st dial reading) \times Delayed sweep time (A SWEEP TIME/DIV setting)$

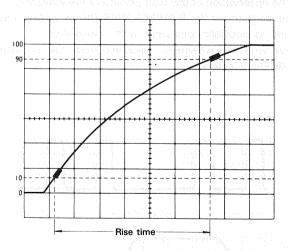


Fig. 37

[EXAMPLE]

For the example, the first dial reading is 1.20 (10% point) and the second is 7.38 (90% point) with the A SWEEP TIME/DIV set at 2 μ s/div. (See Fig. 37)

Substituting the given value: Risetime = $(7.38 - 1.20) \times 2 \ (\mu \text{s/div}) = 12.36 \ \mu \text{s}$

TIME DIFFERENCE MEASUREMENTS USING DELAYED SWEEP

Synchronized waveforms which are skewed in time can be accurately measured using the delayed sweep.

- Apply the two signals to the CH1 and CH2 INPUT jacks setting the vertical MODE to DUAL and selecting either ALT or CHOP display.
- Set the SOURCE to the signal that is leading in phase and adjust VOLTS/DIV and SWEEP TIME/DIV for easy waveform observation.
 - Set the SWEEP VARIABLE control to CAL position.
- 3. Set the B TRIG MODE to initiate the AFTER DELAY mode of operation. Set the HORIZ MODE to ALT and adjust the B SWEEP TIME/DIV and DELAY TIME MULT to make the intensified portion coincide with the rising edge or falling edge of the waveform that is to be used as the reference.
- Set the HORIZ MODE to ALT and use the TRACE SEPA-RATION control to adjust the B sweep for easy observation.
- Using the DELAY TIME MULT adjust the pulse to any convenient vertical graduation line and record the dial reading at that point.
- 6. Using the DELAY TIME MULT adjust the corresponding point on the second signal to the same vertical line and record the reading of the dial at this point as well. The time difference or skew of the two waveforms is then the second dial reading minus the first dial reading multiplied by the A SWEEP TIME/DIV control setting.

Using the formula:

Time difference = (2nd dial reading - 1st dial reading) \times Delayed sweep time (A SWEEP TIME/ DIV setting).

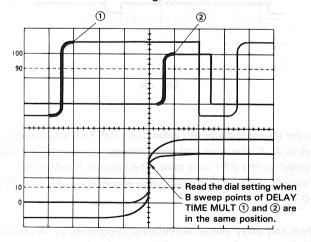


Fig. 38

[EXAMPLE]

The reference signal dial reading is 1.00 while the second dial reading is 5.34 with an A SWEEP TIME/DIV setting of 2 μ s/div. (See Fig. 38)

Substituting the value:

Time difference = $(5.34 - 1.00) \times 2 \ (\mu s/div) = 8.68 \ \mu s$

TRIPLE-TRACE APPLICATIONS

The sensitivities of channel 1 thru channel 3 are calibrated and each channel has 60 MHz band width. (For CS-5155. 50 MHz) The trigger signal of channel 3 can be obtained from its preamplifier.

This unit can be used not only for external synchronization but also for checking triple-trace at a time.

Application

- 1. Checking logic signal timing.
- 2. Monitoring video signals.
- 3. Measuring audio signal gain and phase characteristics.

The details of the logic signal timing checking are described below.

Logic signal timing indication

Control setting Vertical MODE: TRI HORIZ MODE: A SOURCE: CH3

To obtain stable synchronization, synchronize with the longest period channel (in this case, CH3).

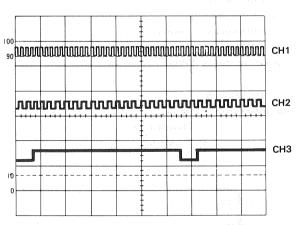


Fig. 39

In the above application, when the HORIZ MODE control is set to ALT, the main and delay sweep waveforms are displayed on the CRT at a time. The portion in which the intensity is modulated is enlarged to enable easy checking Fig. 40.

Control setting Vertical MODE: TRI SOURCE: CH3 HORIZ MODE: ALT

B TRIG MODE: AFTER DELAY

Main and delay sweep waveforms (magnified by 10 times)

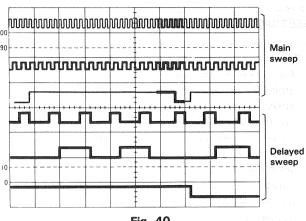


Fig. 40

OBSERVATION OF THE START PORTION OF THE IRREGULAR WAVEFORM

To observe the start portion of the irregular waveform, magnification of the start portion of the waveform can be made with the DELAY TIME ZERO.

Procedure:

- 1. Apply the signal to INPUT jack and set the vertical MODE to the channel to be used and adjusting the various controls for a normal display.
- 2. Use the A SWEEP TIME/DIV and HOLDOFF controls to adjust the display such that a number of cycles of waveform is observed. Next, set the B TRIG MODE to DELAY = 0.
- 3. Set the HORIZ MODE to ALT or B and use the ₽OSI-TION and TRACE SEPARATION controls to adjust the display such that the display is easily observed.
- 4. The observation of the start portion of the waveform can be made to set the B SWEEP TIME/DIV to as fast a setting as possible consistent with observation. For time measurement, calculate from the B SWEEP TIME/DIV setting.

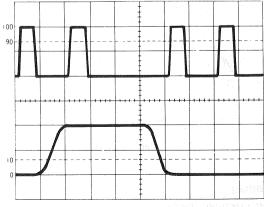


Fig. 41

X-Y APPLICATIONS

★ Phase Shift Measurement

A method of phase measurement requires calculations based on the Lissajous patterns obtained using X-Y operations. Distortion due to non-linear amplification also can be displayed.

A sine wave input is applied to the audio circuit being tested. The same sine wave input is applied to the vertical input of the oscilloscope, and the output of the tested circuit is applied to the horizontal input of the oscilloscope. The amount of phase difference between the two signals can be calculated from the resulting waveform.

To make phase measurements, use the following procedure.

- Using an audio signal generator with a pure sinusoidal signal, apply a sine wave test signal at the desired test frequency to the audio network being tested.
- 2. Set the signal generator output for the normal operating level of the circuit being tested. If desired, the circuit's output may be observed on the oscilloscope. If the test circuit is overdriven, the sine wave display on the oscilloscope is clipped and the signal level must be reduced.
- 3. Connect the channel 2 probe to the output of the test circuit.
- 4. Select X-Y operation by placing the HORIZ MODE switch in the X-Y position.
- 5. Connect the channel 1 probe to the input of the test circuit.
 - (The input and output test connections to the vertical and horizontal oscilloscope inputs may be reserved.)
- Adjust the channel 1 and 2 gain controls for a suitable viewing size.
- 7. Some typical results are shown in Fig. 43. If the two signals are in phase, the oscilloscope trace is a straight diagonal line. If the vertical and horizontal gain are properly adjusted, this line is at a 45° angle. A 90° phase shift produces a circular oscilloscope pattern. Phase shift of less (or more) than 90° produces an elliptical oscilloscope pattern. The amount of phase shift can be calculated from the oscilloscope trace as shown in Fig. 42.

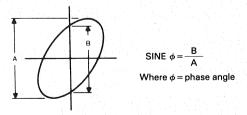


Fig. 42 Phase shift calculation

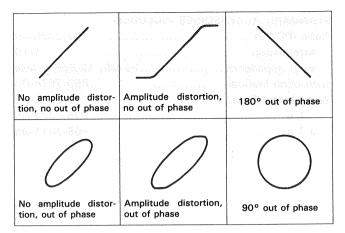


Fig. 43 Typical phase measurement oscilloscope display

★ Frequency Measurement

- Connect the sine wave of known frequency to the channel 2 INPUT jack of the oscilloscope and select X—Y operation. This provides external horizontal input.
- Connect the vertical input probe (CH1 INPUT) to the unknown frequency.
- 3. Adjust the channel 1 and 2 size controls for convenient, easy-to-read size of display.
- 4. The resulting pattern, called a Lissajous pattern, shows the ratio between the two frequencies.

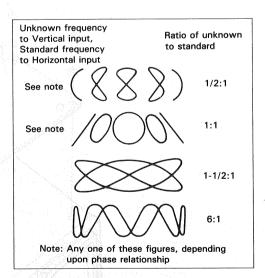


Fig. 44 Lissajous waveforms used for frequency measurement

ACCESSORIES

STANDARD ACCESSORIES INCLUDED

Probe (PC-39)	Y87-2370-00
Attenuation	1/10
Input Impedance	10 M Ω , 12.5pF or less
Instruction Manual	B50-7674-00
Replacement Fuse	
1 A	F05-1023-05
0.7.Δ	F05-7011-05

OPTIONAL ACCESSORIES

This soft vinyl pouch attaches to the top side oscilloscope housing and provides storage space for two probes and the operators manual. Install the probe pouch as follow;

- 1. Unsnap the probe pouch from the retainer plate.
- 2. Align the retainer plate with 4 holes on the top side of the case, with 4 snaps at the top.
- 3. Attach the 4 corners of the retainer plate to the oscilloscope case with the 4 nylon rivets supplied.
- 4. Attach the pouch to the retainer plate using the snap fastener.

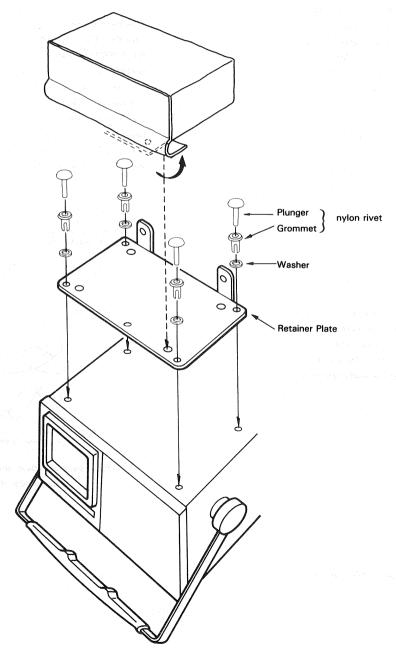


Fig. 45

MAINTENANCE



⚠ Caution: Read this page carefully to keep your safety.

For Electric Shock Protection:

Be sure to disconnect the power cable from the socket before conducting the following operation.

REPLACING THE FUSE

In case the fuse has blown, locate the cause. If the fuse itself is the cause, replace it as follows:

- 1. Pull the plug of the power cord from the power outlet.
- 2. Remove the fuse holder in the rear panel using a standard screwdriver (see Fig. 46).
- 3. Take out the blown fuse, and in its place, insert a new fuse
- 4. Set the label of your line voltage to the mark ▼, then plug the fuse holder containing the new fuse into the rear panel.

CHANGING THE SUPPLY VOLTAGE

Remove the fuse holder in the rear panel using a standard screwdriver. Then set the label of your line voltage to the mark ▼ and plug the fuse holder back into place. When changing the supply setting from 100/120 V to 220/240 V, change the 1 A fuse for a 0.7 A one. (see Fig. 46)

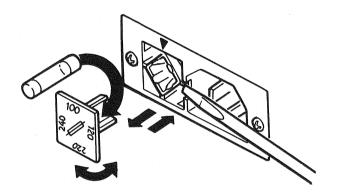


Fig. 46

ran Santan and Angel and Angel and Angel Santan Santan Santan Angel and Angel and Angel and Angel and Angel and

and the state of the production of the state of the

and the control of th

December 1970 of the Community of the Co

And the second of the second o

under til som en skriver og skriv Det skriver og skriver Det skriver

eren en reger per responsable per la presentation de la presentation de la presentation de la presentation de La proposition de la presentation d

MENNOOD CORPORATOR