
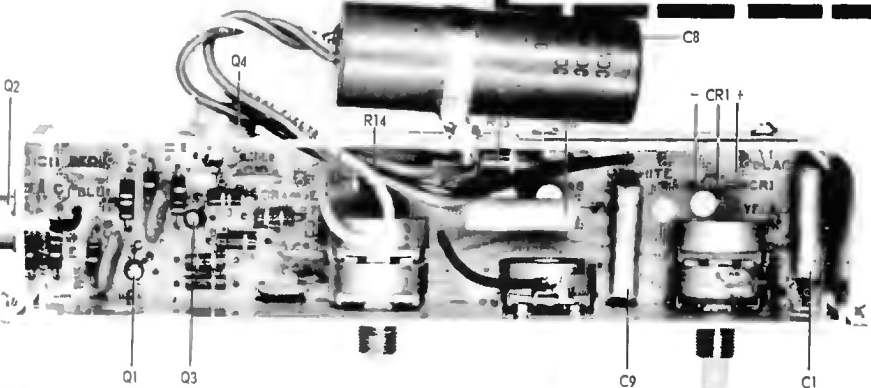


# PWS 714D401

**NOTES:**  
 ALL RESISTOR VALUES IN OHMS AND CAPACITOR VALUES IN MICROFARADS UNLESS OTHERWISE SHOWN. ALL VOLTAGES TAKEN WITH A VACUUM-TUBE VOLTMETER WITH RESPECT TO COMMON B-.  
 COMMON B-  
 CHASSIS GROUND.  
 DENOTES FRAME OF CONTROL IS GROUNDED TO CHASSIS.

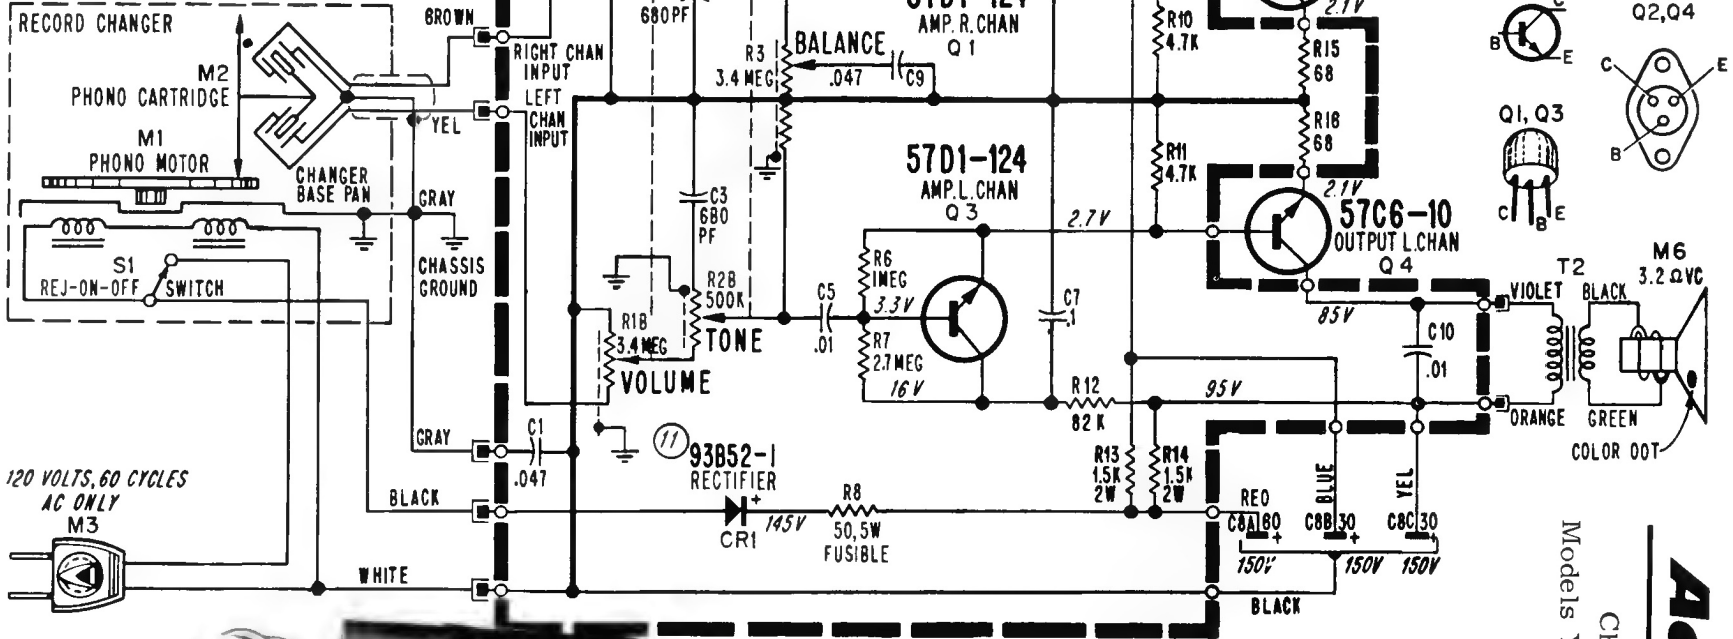

VIEW OF CHASSIS SHOWING COMPONENTS

## CHASSIS REMOVAL

1. Remove the four turntable hold-down screws.
2. Raise turntable front edge for access to chassis.
3. For chassis removal: Pull of knobs.
4. Remove the nuts on the tone and loudness shafts, while supporting escutcheon.
5. Set escutcheon and control cups off.
6. Pull "plug-in" wire connectors to chassis off.
7. Remove chassis.

Models YG1507, YG1527, YG1531

Chassis 4E4

# Admiral