



To phase speakers, place a 1.5-volt battery across the voice coil. When the speaker cone moves out I away from the magnet) the positive terminal of the battery is the plus (+) side of the voice coil as indicated on schematic.

FUNCTION SWITCH "S2" SHOWN IN POSITION 1.

POSITION	FUNCTION
1	PHONO
2	OFF
3	TUNER

- RC Network printed board contact points for Tone circuit.
- ◆ RC Network printed board contact points for Amplifier Circuit.
- * Denotes Components Located in RC Networks.

Capacitor values more than 1 in mfd.
 Capacitor values less than 1 in mfd unless otherwise noted.
 Resistors are 1/2 watt, unless otherwise noted.
 K=1,000; Meg=1,000,000
 Arrows on controls, indicate clockwise rotation.
 P = denotes pots; J = denotes jacks; plugs and jacks with like numbers connect.
 Voltage measured from B+ (gnd.) with 20,000 ohms-per-volt meter with no signal applied.

GENERAL ELECTRIC

GENERAL ELECTRIC

Models RC4640A, RC4641, RC4642, RC4650A,B, RC4651, RC4652, RC4660, RC4661, RC4662