



PHASING NOTE:
PLACE 1.5 VOLT BATTERY ACROSS
LOUDSPEAKERS WITH POTENTIAL AS
INDICATED. COMES TO MOVE OUTWARD

TO REMOVE RECORD CHANGER

1. Remove 2 screws holding ventilated interlock panel, remove panel and rest on top of main unit speaker compartment.
2. Remove 6 screws holding motor board, remove motor board and changer and rest back edge of the motor board in compartment.
3. Remove "twist caps" and label wires.
4. Label and remove signal wires from terminal board.
5. Remove record changer and motor board.

TO REMOVE CHASSIS

1. Follow steps 1 and 2 as under "To Remove Record Changer."
2. Remove Balance, Tone and Volume knobs.
3. Remove two (2) 5/16 inch nuts from control panel.
4. Remove two (2) screws holding interlock.
5. Remove three (3) 5/16 inch nuts from chassis.
6. Remove screw holding lead dress on signal leads.
7. Remove screw holding electrolytic.
8. Remove two (2) nuts holding auxiliary speaker jack.
9. Unsolder speaker leads.

MODEL RP1150A

GENERAL ELECTRIC