

 
CHASSIS REMOVAL

1. From rear of cabinet, remove four (4) screws along rear of handle and four (4) screws across cabinet back.
2. Remove two (2) control knobs. Carefully pull cabinet front forward and remove three (3) screws which secure chassis to cabinet front.
3. If necessary, disconnect all cables (speakers, etc.).

1. Open changer drawer to operating position.
2. Screw changer hold down screws fully into record changer base.
3. Raise the front of the changer enough to clear drawer edge and carefully slide record changer forward until it clears changer supports.
4. Lift up changer, disconnect power plug and unsolder audio leads from terminal strip on underside of the changer.

NOTE:

VOLTAGES - MEASURED FROM POINT INDICATED TO B- WITH VTVM ± 10% NO SIGNAL INPUT



MOTOROLA

MODEL MP100B
CHASSIS HS-2348