


# MOTOROLA

## MODELS

## CHASSIS

SK28B, M, W  
SK29B, M, W  
SK30B, M, MC, W  
SK31B, CW, M

HS-768, HS-774  
HS-793, HS-769  
HS-768, HS-774  
HS-768, HS-774

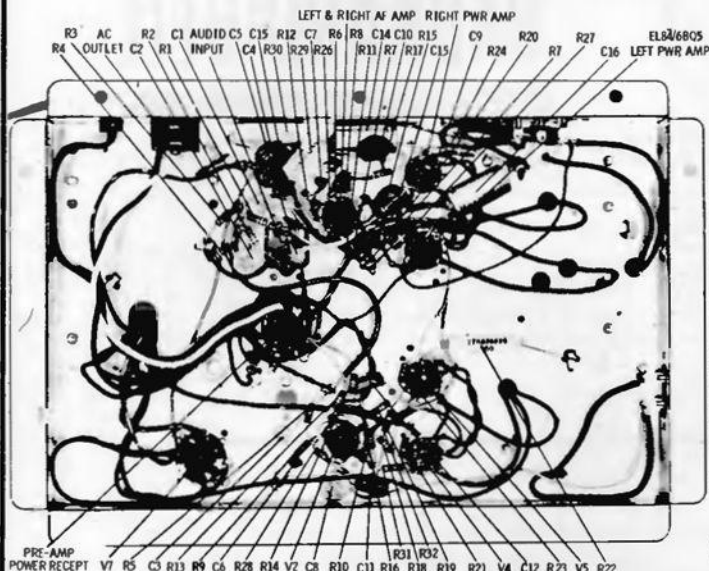

### PRE-AMP CHASSIS REMOVAL (Models SK28, SK30, SK31)

1. Remove control knobs, cabinet back cover and sounding board (on SK31 it is not necessary to remove board) located inside cabinet at base of record changer; board is held in place by 4 machine screws.
2. Disconnect all pre-amp connecting leads and remove pre-amp; pre-amp is held in place by 2 hex nuts.

### PRE-AMP CHASSIS REMOVAL (Model SK29)

1. Remove control knobs and cabinet back cover.
2. Disconnect all pre-amp connecting leads to power amp, record changer and pilot lights; open front cabinet doors and remove pre-amp panel (located at upper left-hand corner of cabinet - panel is held in place by 6 screws); unplug remaining pre-amp connecting leads and remove pre-amp after removing the 2 hex mounting nuts.

### POWER AMP CHASSIS REMOVAL (All Models)

Remove cabinet back cover, disconnect all power amp chassis connecting leads, remove 6 power amp mounting machine screws and remove power amp chassis

