 



SK3




SK1

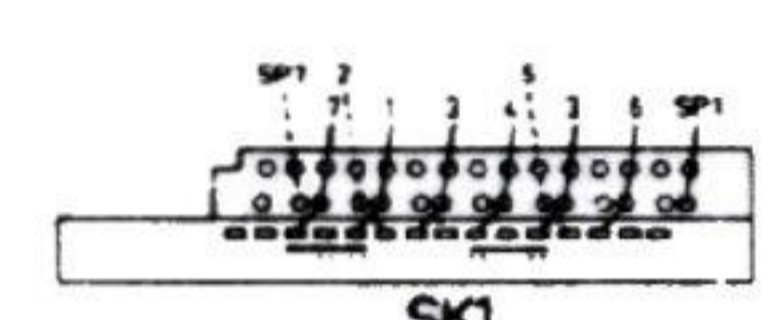

 
B1-B5

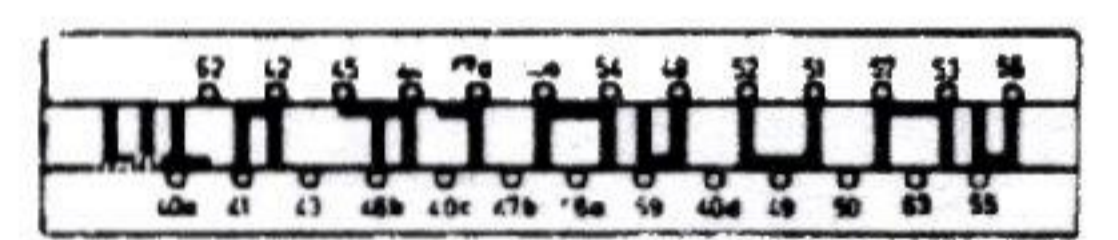


SK3
POSITION:
STOP

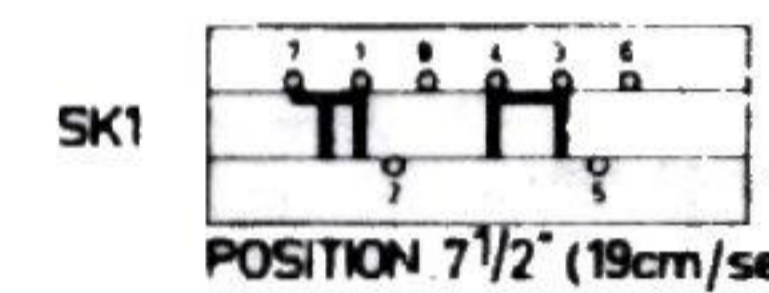 


SK1
POSITION 7 1/2 (19cm/sec)

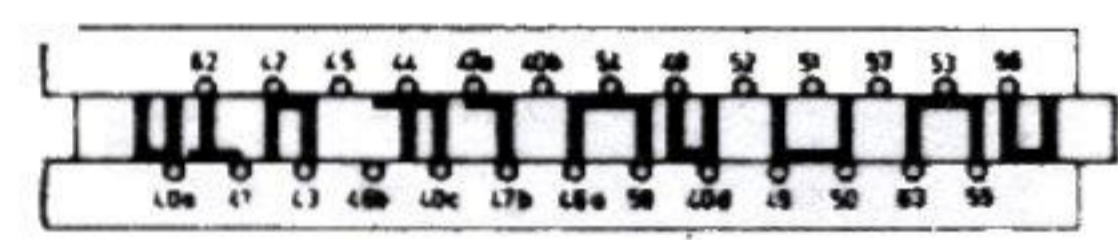 


SK3
POSITION:
PLAY BACK

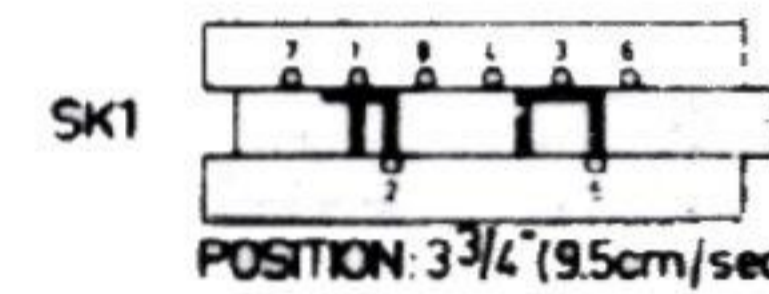 


SK1
POSITION: 3 3/4 (9.5cm/sec)

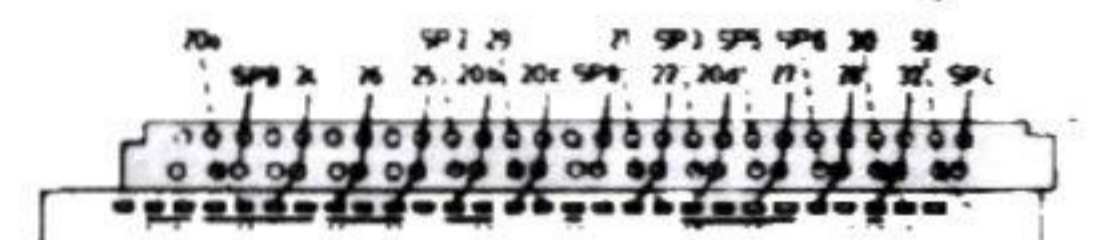 


SK2

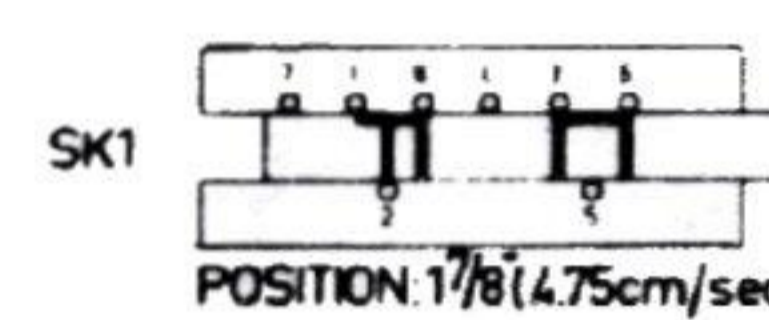 


SK1
POSITION 1 7/8 (4.75cm/sec)

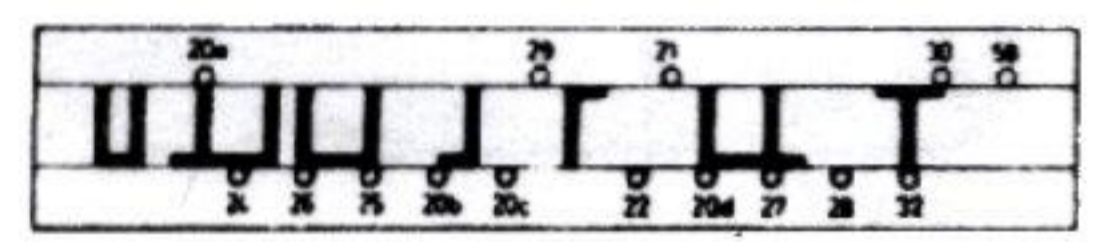 


SK2
POSITION:
STOP

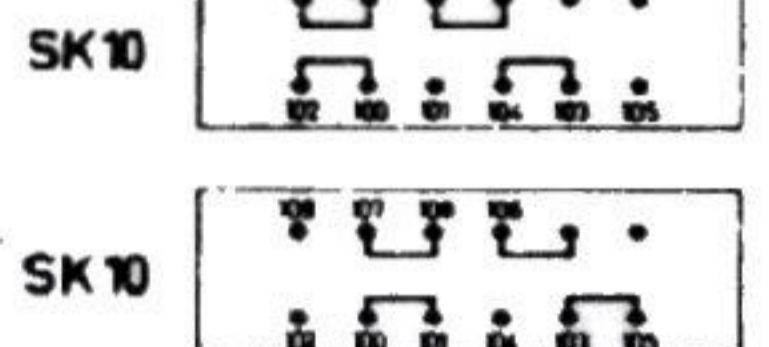 


SK10

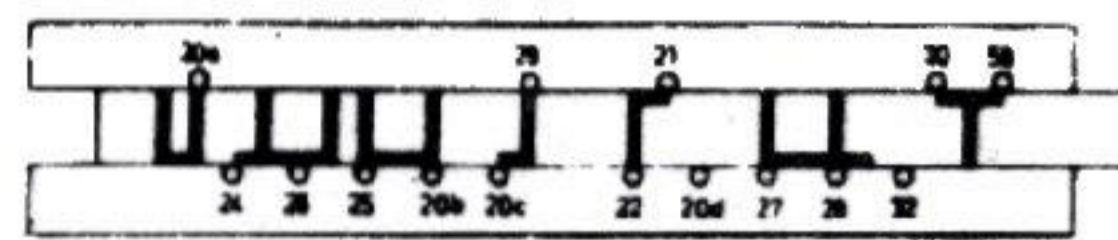 

SK2
POSITION:
RECORDING

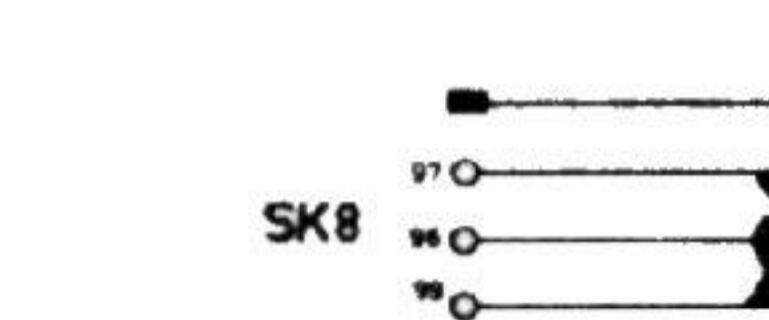 


SK8

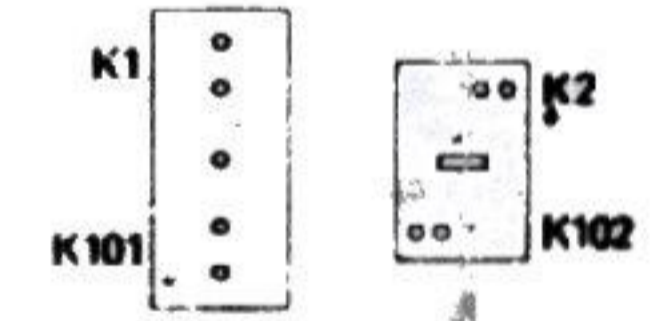 


K1

 K2

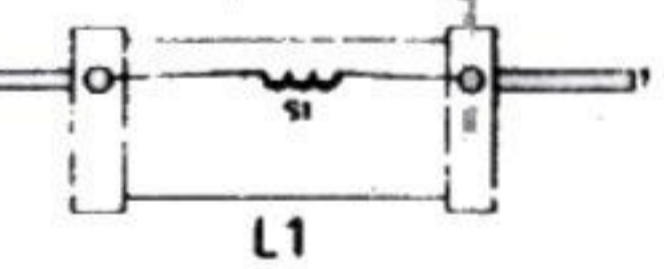

L1

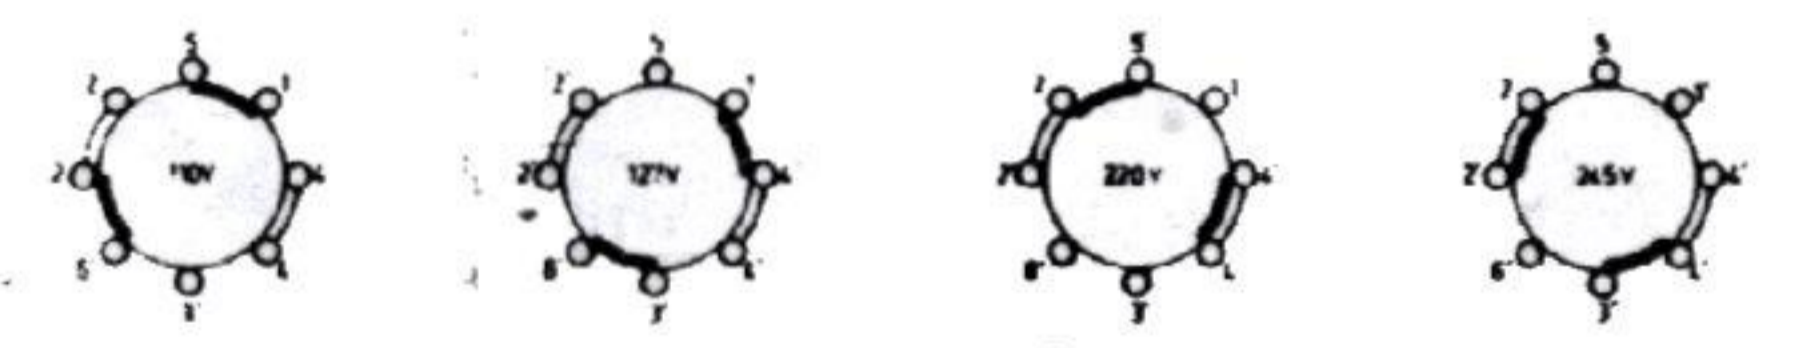 

10V


17V

28V

245V

S1	S1'	S1''	S2	S2'	S2''	S3	S3'	S4	S4'
110	11	23	110	11	33	285	285	375	375
			40				1080	0.27	


S1	S1'	S2	S2'
35	76	122	93
		.773	

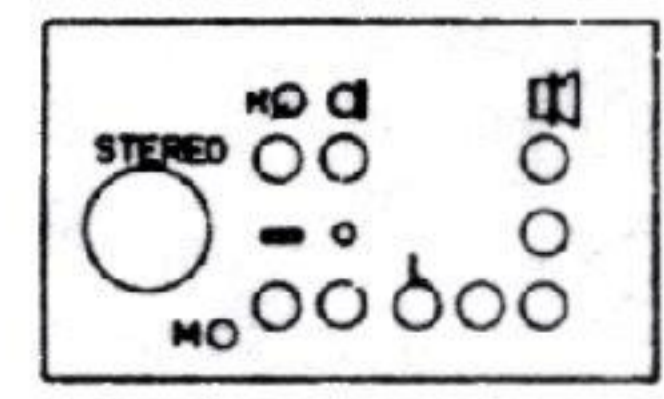 


STEREO

MONO

 - PAPER CAPACITOR 40V 10% 905/
- CERAMIC CAPACITOR 700V 2% 904/
- WIRE TRIMMER 907/
- CARBON RESISTOR 1W 10% 900/
- CARBON RESISTOR 1/2W 2% 901/
- CARBON RESISTOR 1/2W 10% 902/

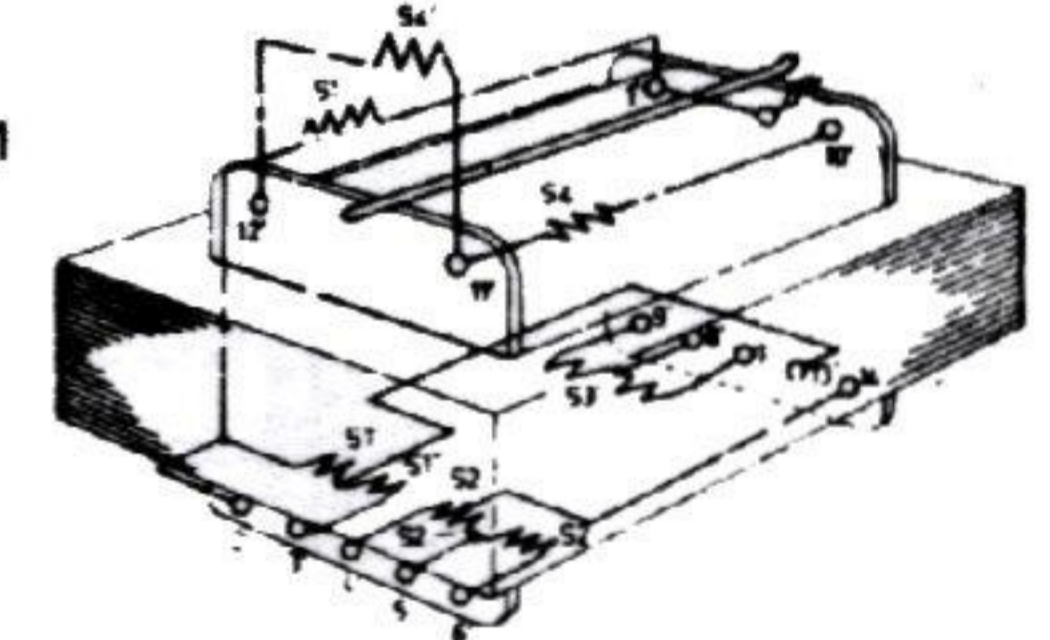

T1

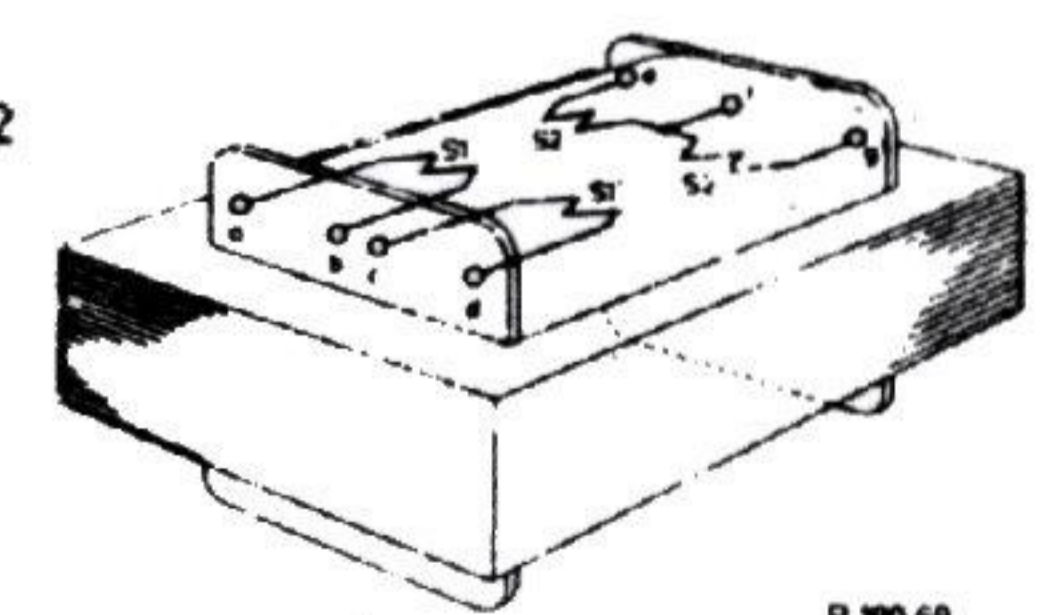 

T2

R 190 68

PHILIPS S.p.A. Sezione RADIO TV MILANO

Schema di principio REGISTRATORE EL 3542

TAVOLA VI — Schema del registratore magnetico a quattro piste, con due testine magnetiche per registrazione stereofonica, Philips mod. EL 3542.