



VOLTAGES AND CURRENTS READINGS

- ↖ : DC VOLTAGE
- ⊕ : DIRECT CURRENT
- ⊖ : INPUT VOLTAGE TO ACQUIRE 35W / 16Ω OUTPUT
- ⊖ : NO INPUT SIGNAL AT THE SELECTOR PHONO POSITION
- ALL VOLTAGES ARE MEASURED WITH VTVM

SLIDE SWITCHES

- SL-1 TAPE/MONITOR (NORMAL-RECORDER)
- SL-2 HIGH FILTER (ON-OFF)
- SL-3 LOUDNESS CONTOUR (ON-OFF)
- SL-4 LOW FILTER (ON-OFF)
- SL-5 SPEAKER - HEAD PHONE
- SL-6 SPEAKER PHASE (NORMAL-REVERSE)
- SL-7 AC LINE VOLTAGE (100V-117V)
- PUSH SWITCH
- PS-1 POWER (ON-OFF)

- VR<sub>1a-2a</sub> TREBLE
- VR<sub>1b-2b</sub> BASS
- VR<sub>3</sub> VOLUME
- VR<sub>4</sub> BALANCE
- VR<sub>5,6</sub> PROTECTION CIRCUIT ADJUSTMENTS

POS. NO.	S <sub>1</sub> SELECTOR	S <sub>2</sub> MODE
1	TUNER	STEREO REV.
2	PHONO	STEREO NORM.
3	TAPE	MONO CH-A
4	MIC	MONO CH-B
5	AUX	MONO A+B

SECTION	ITEM NO.
1 excepting Printed circuit	R <sub>1</sub> - F <sub>41</sub> , C <sub>1</sub> - C <sub>34</sub>
Printed circuit A (AM 9115)	R <sub>101</sub> - R <sub>126</sub> , C <sub>101</sub> - C <sub>120</sub>
- B (AM 9116)	R <sub>201</sub> - R <sub>239</sub> , C <sub>201</sub> - C <sub>278</sub>
- C (AM 9117)	R <sub>301</sub> - R <sub>332</sub> , C <sub>301</sub> - C <sub>316</sub>
- D (AM 9118)	R <sub>401</sub> - R <sub>412</sub> , C <sub>401</sub> - C <sub>403</sub>

