



### STYLUS REMOVAL AND REPLACEMENT

The stylus assembly is held to the cartridge either by a screw or by a plastic button.

To remove the stylus when held by a screw—loosen, but do not remove the screw, and slide the stylus assembly out from under it. To replace the stylus—slide the spade end of the stylus assembly under the head of the screw, making certain that it is fully seated, and tighten screw. Check that stylus saddle is seated on the yoke.

To remove the stylus when held by a plastic button—grasp the stylus assembly with a pair of tweezers or needle nose pliers and pull it out from under the plastic button. To replace the stylus—push the spade end of the assembly under the plastic button making certain that it is fully seated. Check that the stylus saddle is seated on the yoke.

#### STYLUS ASSEMBLY

