

WESTINGHOUSE Chassis V-2537-2

Models H-105ACS1, A, H-106ACS1

CHASSIS REMOVAL

1. Remove the VOLUME knobs.
2. Remove the six screws from the baffle.
3. Remove the escutcheon and the two screws under it.
4. Pull out the baffle. The chassis is fastened to the baffle by two speed nuts.

| TRANSISTOR COMPLEMENT | | | |
|-----------------------|--------------|------|-------------|
| | FUNCTION | TYPE | PART NO |
| Q1 Q2 | DRIVER | NPN | 297VD59MD1 |
| Q3 Q4 | AUDIO OUTPUT | NPN | 797VDE6DM01 |

SEE NOTE 3



NOTES

★ EARLY PRODUCTION ONLY.

1. VOLTAGE MEASUREMENTS MADE WITH A VTVM FROM POINTS INDICATED TO GROUND, VOLUME CONTROLS AT MINIMUM, LINE VOLTAGE AT 120 VAC
2. UNLESS OTHERWISE INDICATED ALL CAPACITANCE VALUES LESS THAN 1 ARE IN PF & VALUES GREATER THAN 1 ARE IN PF, ALL RESISTANCE VALUES ARE IN OHMS, 1/2 MATT.
3. IF EITHER RIGHT OR LEFT CHANNEL DRIVER OR OUTPUT TRANSISTOR BECOMES DEFECTIVE, ORDER AND REPLACE BOTH DRIVER OR BOTH OUTPUT TRANSISTORS.

