
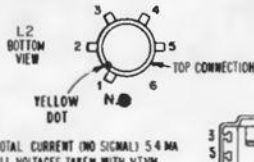


CHASSIS 5E5 • 5E5A

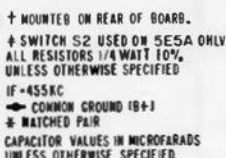

View of Etched Wiring Board. Gray area represents etched wiring; block symbols and lines represent components on opposite side.

REMOVING CHASSIS FROM CABINET

To remove cabinet back, simply insert a small coin into one of the slots on the bottom edge and twist.

To remove chassis from cabinet, first remove the knobs by pulling them off. Remove the back cover as instructed above. Remove the four screws at the corners of the etched board. Lift entire chassis (etched board with all components) out of the cabinet front.

Later Production Battery Holder Showing Ordinary and Mercury Type Batteries in Correct Positions.