
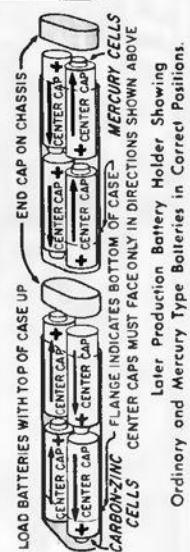
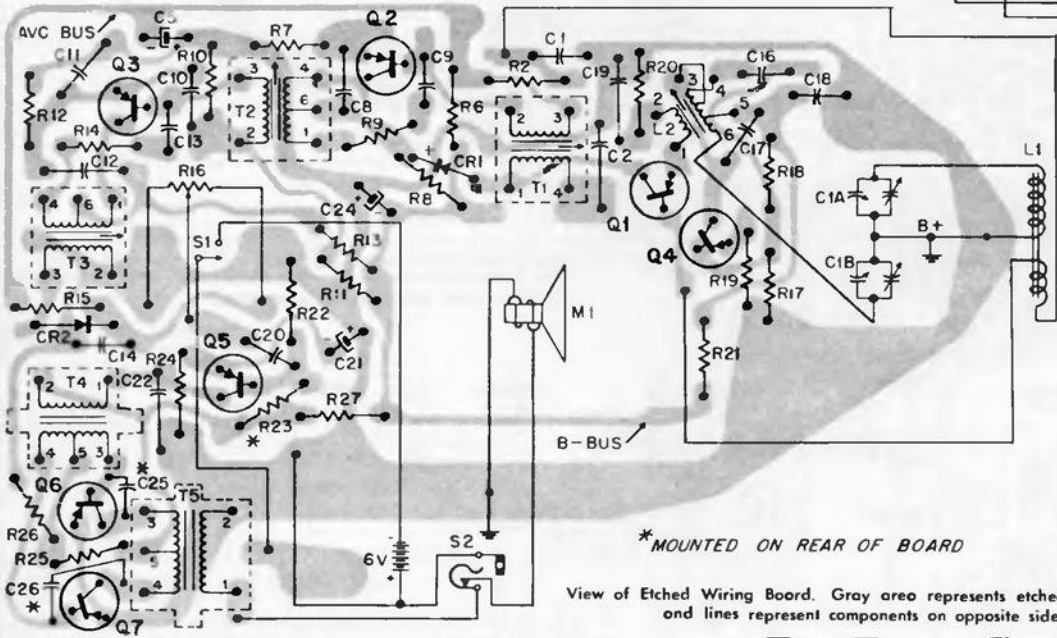


Admiral

Chassis 7P1, Models 703 and 708

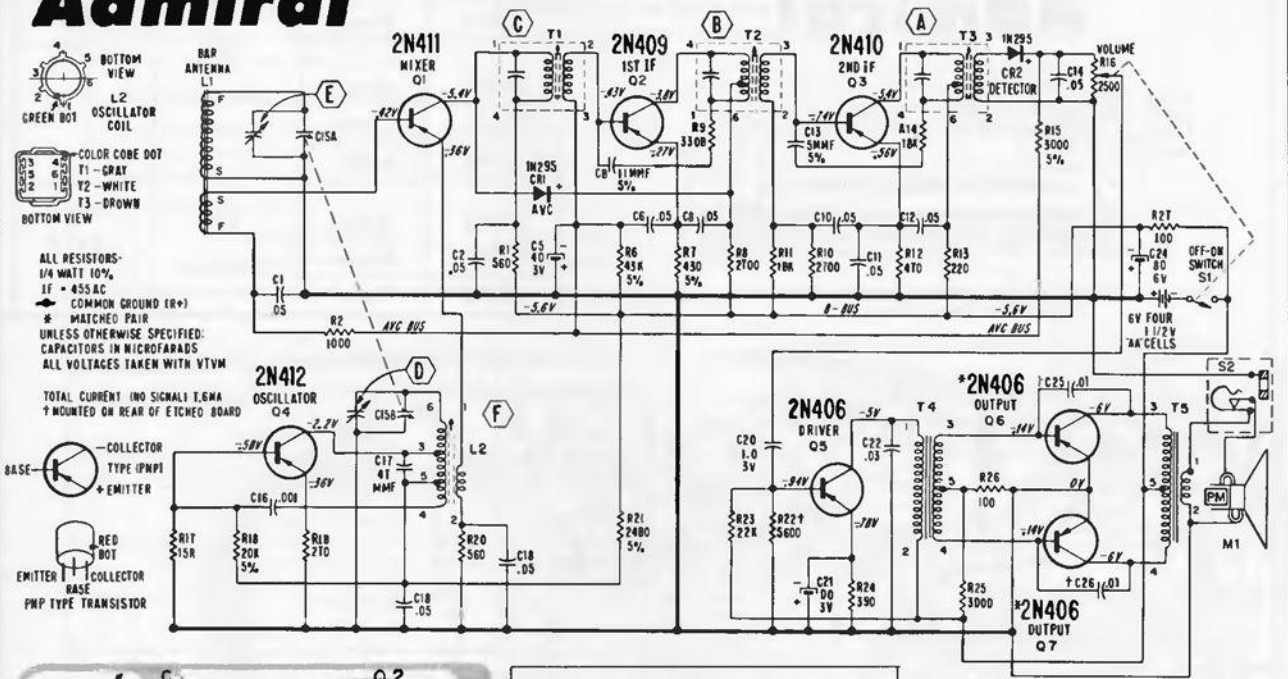

* MOUNTED ON REAR OF BOARD


View of Etched Wiring Board. Gray area represents etched wiring; black symbols and lines represent components on opposite side.

INTERMEDIATE FREQUENCY: 455 KC.

REMOVING CHASSIS FROM CABINET

To remove cabinet back, simply insert a small coin into one of the slots on the bottom edge and twist.

To remove chassis from cabinet, first remove the knobs by pulling them off. Remove the back cover as instructed above. Remove the four screws at the corners of the etched board. Lift entire chassis (etched board with all components) out of the cabinet front.

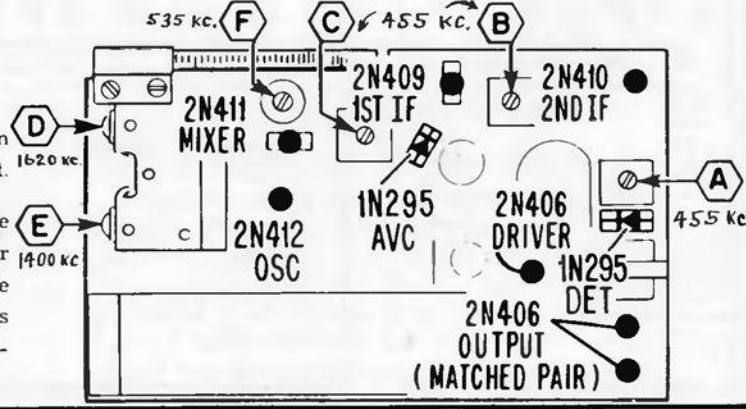

Transistor and Alignment Locations.