


Admiral

Chassis 4N2

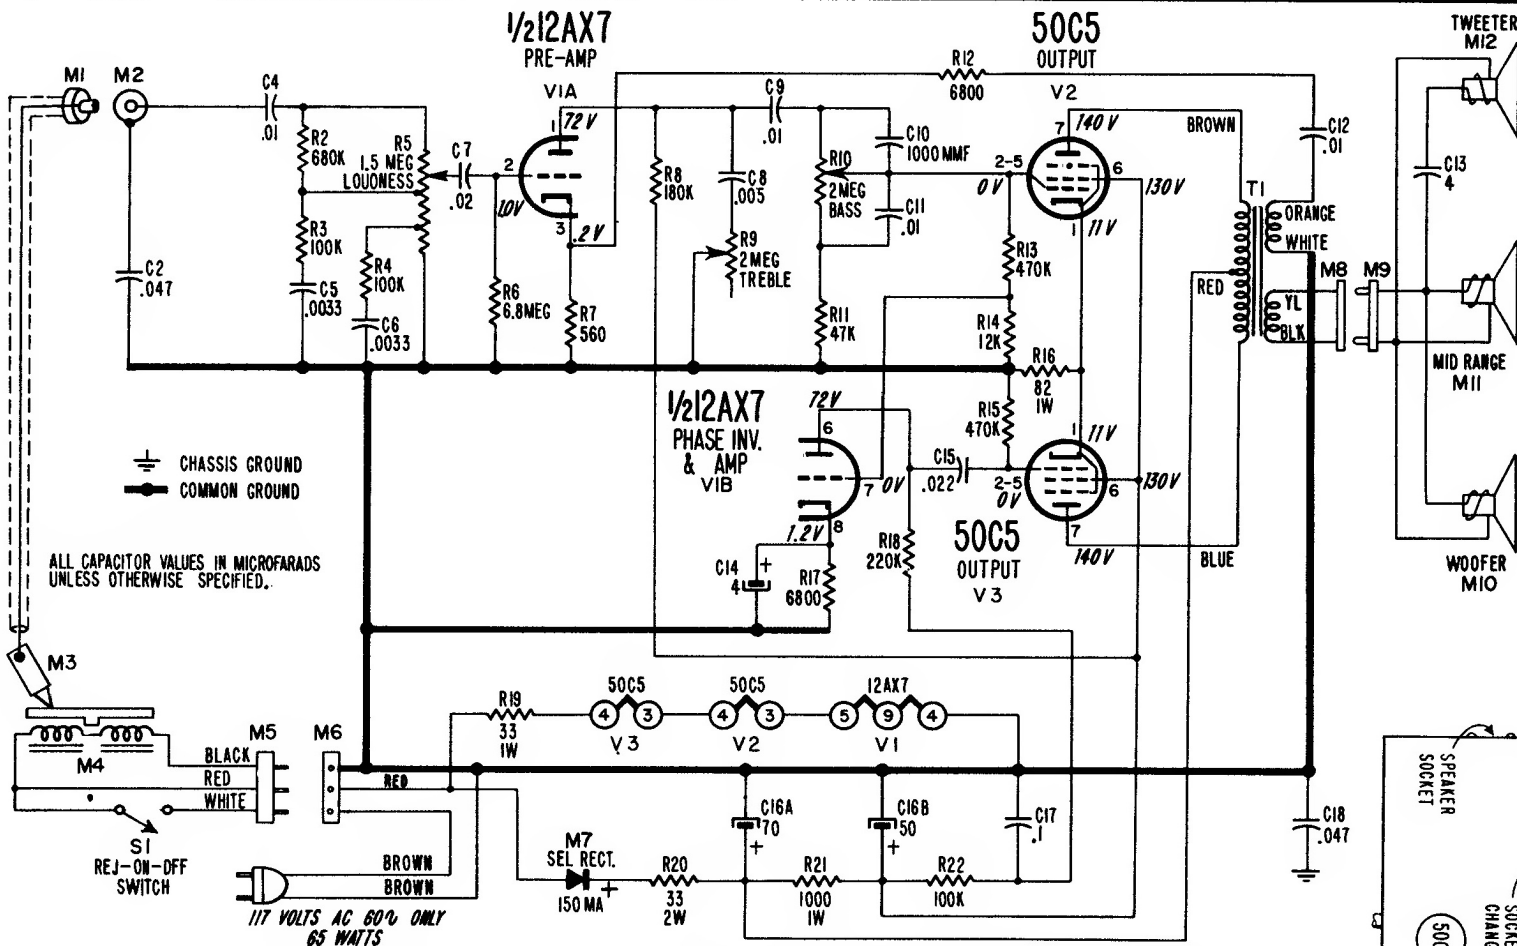

TO REMOVE THE CHASSIS

After removing the line cord plug from the wall outlet, clamp the TONE ARM to the tone arm rest. Carefully turn the phonograph upside down on a soft, padded surface. Remove the cabinet bottom mounting screws and lift the cabinet bottom and legs off the cabinet.


Disconnect the audio input plug (M1), the record changer motor plug (M5) and the audio

output plug (M9) from the chassis. Remove the Volume, Bass and Treble control knobs. Remove the four screws that mount the chassis and carefully lift the chassis

To Remove the Record Changer:

Disconnect the audio input plug (M1) and the record changer motor plug (M5) from the chassis. Remove the washer-head screws that mount the record changer while holding the record changer in place. Remove the record changer by lifting it free from the cabinet.

TUBE LOCATIONS

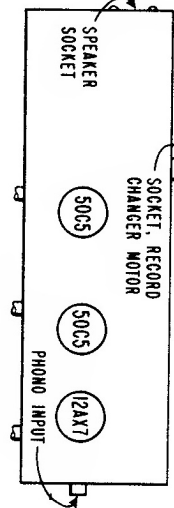

MODEL	COLOR	CHASSIS
HS3376	Mahogany	4N2
HS3377	Blond	4N2