

Arvin

Models 57R72, 57R75, 57R78


TR-2
599103
1ST I.F.

TR-3
599102
2ND I.F.


D-1
IN295
DETECTOR

TR-4
599201
AUDIO DRIVER


TR-5 B-6
599203
AUDIO OUTPUT

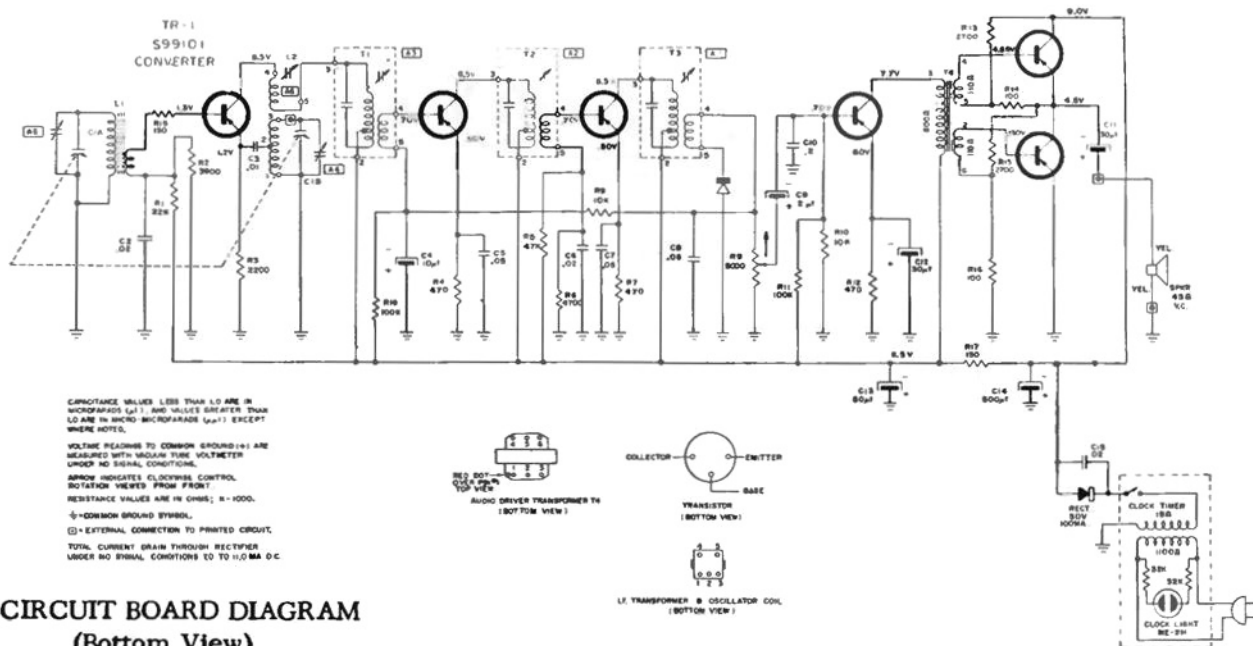

CIRCUIT BOARD DIAGRAM
(Bottom View)

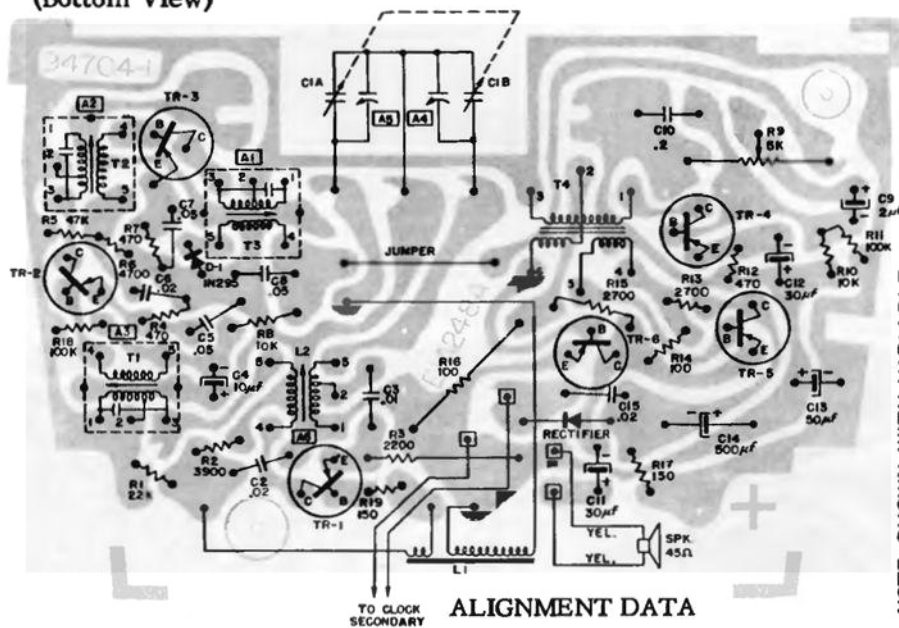

NOTE: SHOWN WITH VARIABLE IN EXTREME CLOCKWISE POSITION.

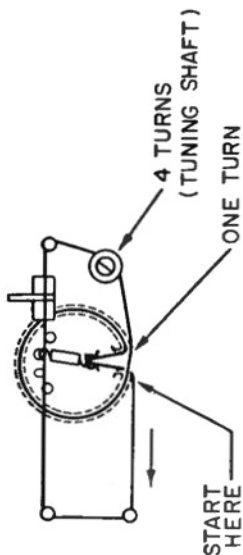

Position of Variable	Frequency of Generator	Dummy Antenna	Generator Output Connection	Trimmer Adj. in order shown for Max. Output	Functions of Trimmer
Open	455 Kc	.05 mf.	C1A	A1 (Top of T3) A2 (Top of T2) A3 (Top of T1)	I. F. I. F.
Open	1640 Kc		Test Loop	A4	Oscillator
1400 Kc	1400 Kc		Test Loop	A5	Antenna
600 Kc	600 Kc		Test Loop	A6 Check Point (LZ)	Oscillator
Recheck A4 at 1640 Kc after adjustment of A6.					