


Schematic circuit diagram Model 525 AC-DC Superheterodyne, with automatic volume control

Should it be necessary, at any time, to rebalance this set the procedure is as follows: Attach a 456 kilocycle oscillator to the grid of the 606 tube in back of the variable condenser and adjust the trimming condensers of the I. F. transformers to maximum deflection on an output meter connected across the primary of the speaker input transformer. While adjusting these trimmers, the variable condenser should be at the maximum capacity position—at the extreme right of its rotation.

Next disconnect the antenna wire and connect an oscillator in series with a 75 muf. condenser to the antenna coil. Rotate the condenser plates to the minimum capacity position—extreme left turn, and adjust the trimmer condenser of the rear section of the variable condenser to resonance with an oscillator set at 1725 kilocycles, then adjust the condenser of the front section of the variable condenser to resonance. Align at 1400—1200—100.0—800—600—520 kilocycles. Bend slotted plates of variable condenser if necessary.

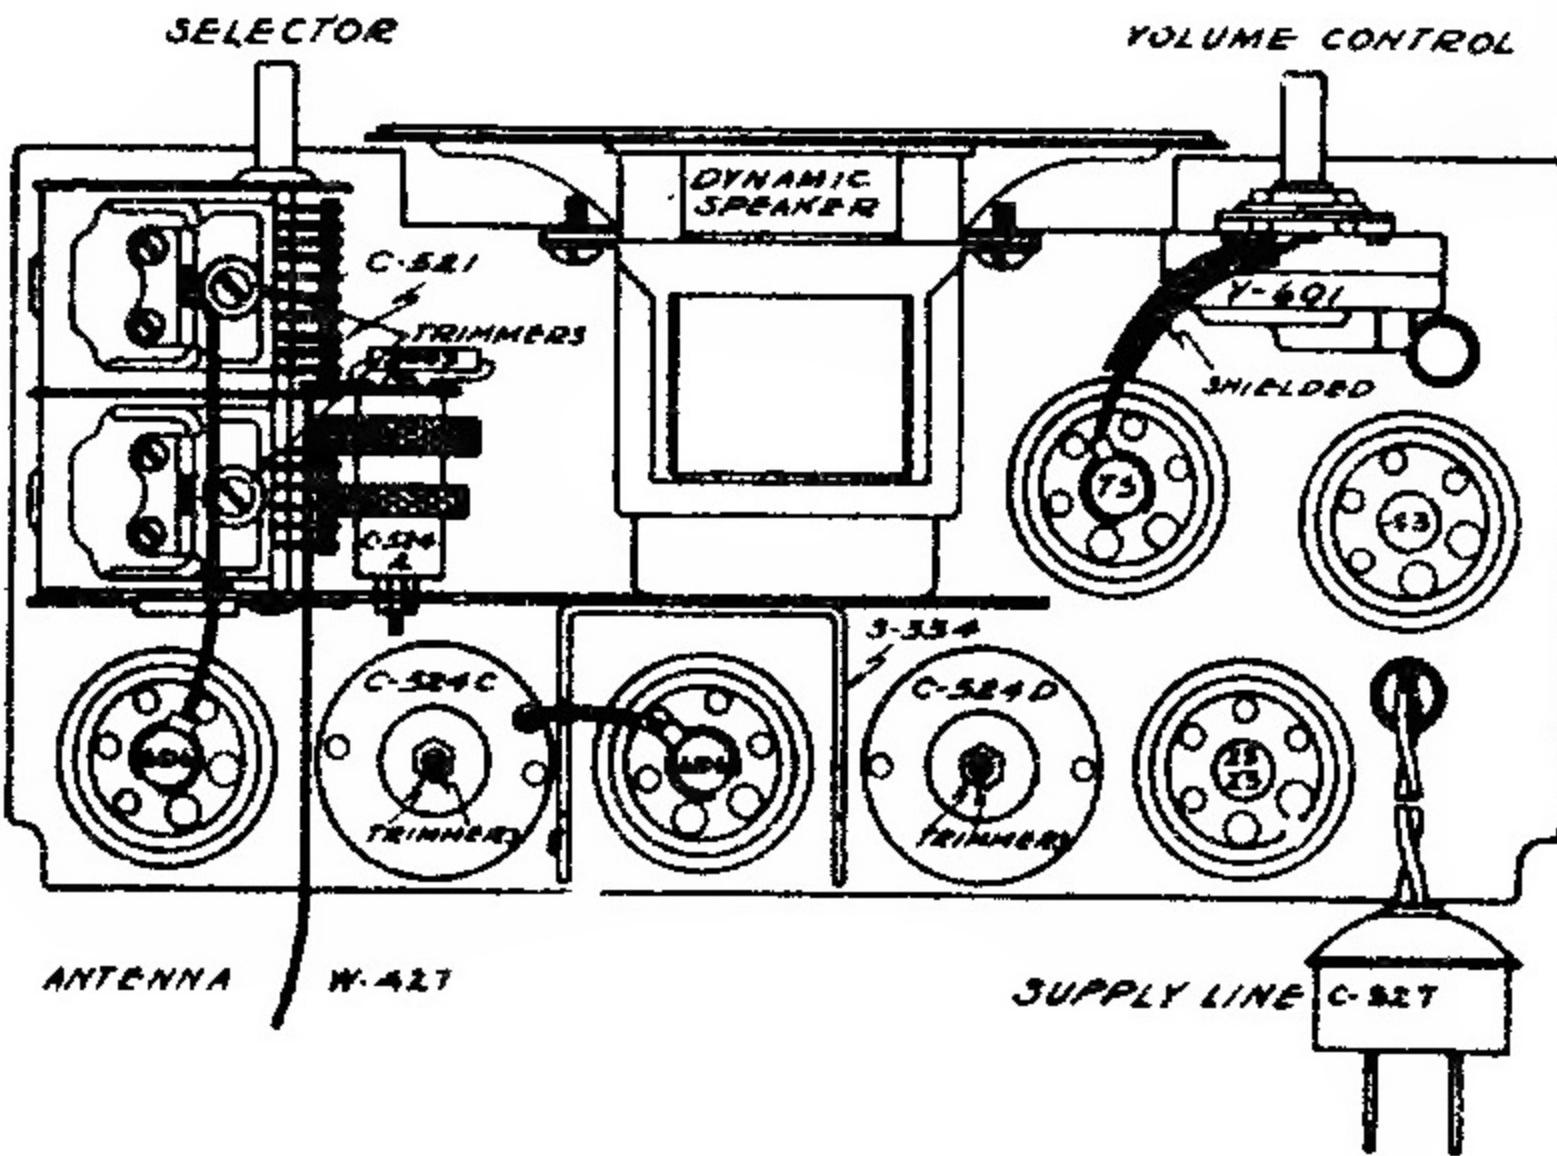

Belmont Radio Corp.

MODEL 525