


CAPEHART-FARNSWORTH

Model
3T55

Chassis
CR-150

Model
2T55

Chassis
CR-154

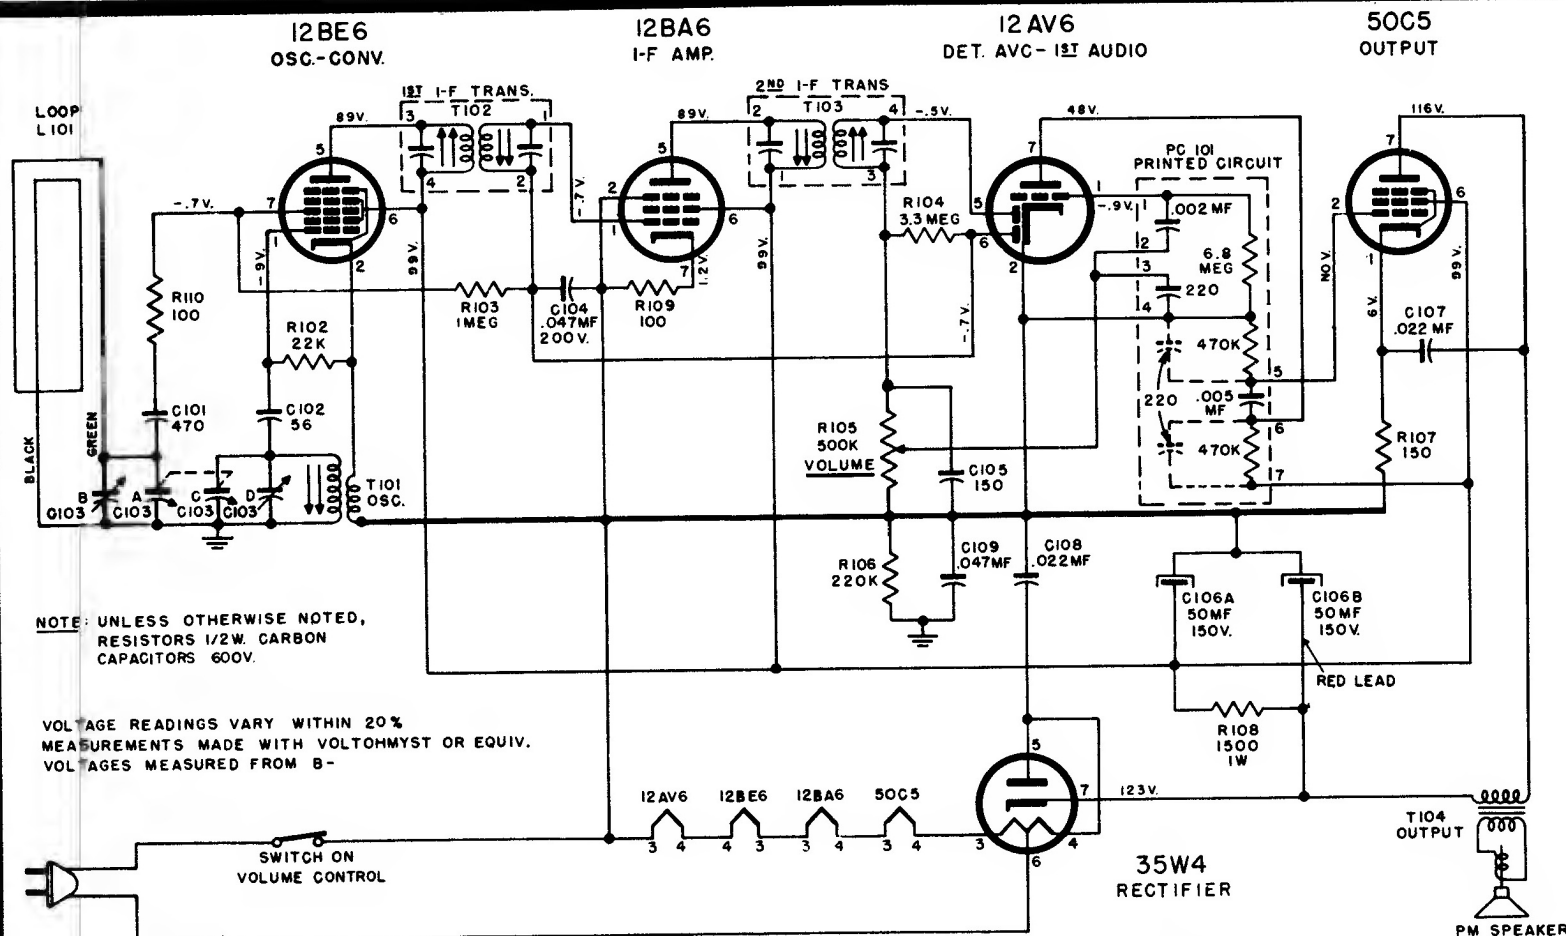

STEP	SET RF GENERATOR AT	SET CONDENSER GANG AT	ADJUST	TO OBTAIN
1	455KC	Fully Open at some quiet point	IF Slugs T103 T102	Maximum Output
2	1620KC	Fully Open	Osc. Trimmer C103D	Same
3	1500KC	1500KC	Ant. Trimmer C103B	Same
4	600KC	600KC	T101 Osc. Slug	Same

ALIGNMENT:

- Turn set on, adjust volume to maximum.
- See that dial pointer coincides with calibration marks at extremes of dial scale.
- Connect output meter across the speaker voice coil.
- Make a loop of the RF Generator leads (connect the leads together through a .01 mfd capacitor) and loosely couple to the Loop Antenna.