

ANTENNA CIRCUIT: The antenna circuit is directly coupled to the antenna. The antenna coil is tuned by means of an iron core and the circuit is adjusted for slight variations in antenna capacity by means of an antenna trimmer located on the bottom of the receiver case.