


CROSLLEY Chassis R103 Alignment Information

Models:
JC-6BN,
JC-6BK,
JC-6TN,
JC-6WE.

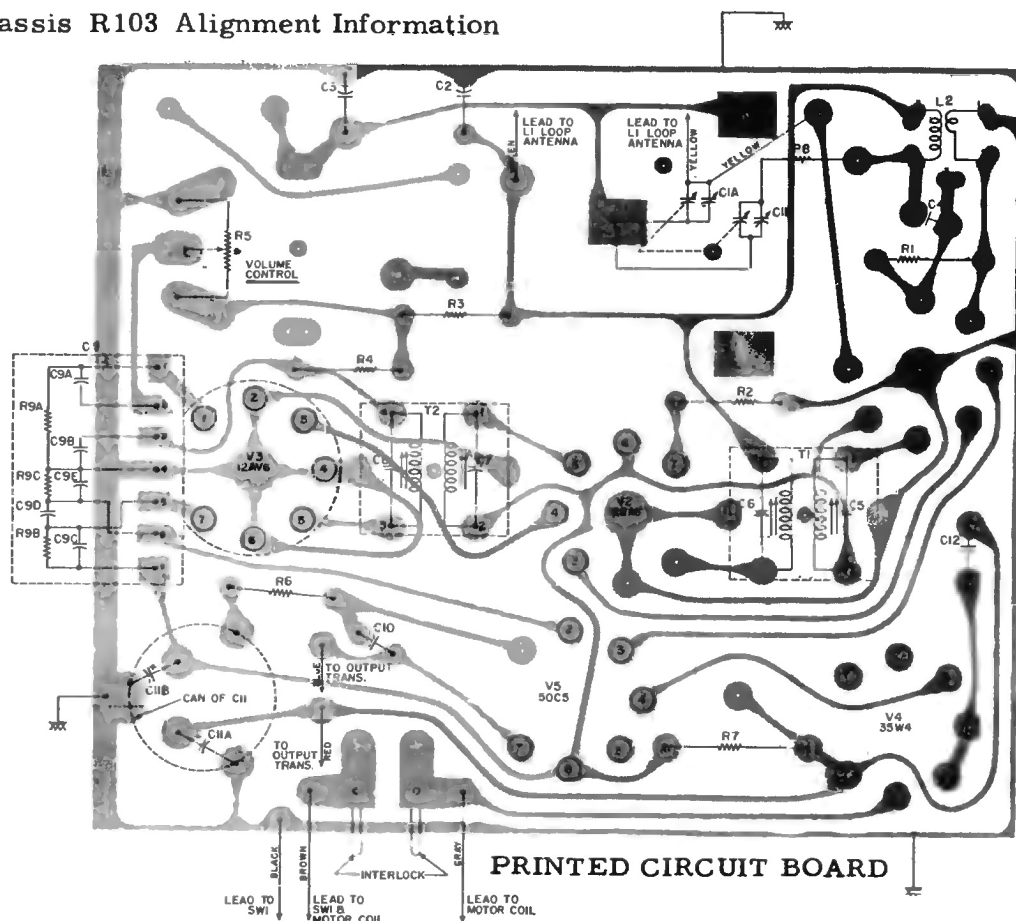

ALIGNMENT PROCEDURE

To operate set when it is removed from cabinet, connect switch leads (brown and black leads) together.

Turn the Volume Control to maximum clockwise position and adjust the signal generator output to produce approximately mid-scale deflection of the output meter, but maintain signal generator output as low as possible to prevent AVC action.

ALIGNMENT CHART

Alignment	Signal Generator Output			Position of Tuning Gang	Adjust for Max. Output	Remarks
	Freq. in KC.	In Series With	TO			
1	455	200 mmf.	Mixer grid pin 7 of V	Open	A & B	See note 1
2	455	200 mmf.	Mixer grid, pin 7 of V	Open	C & D	See note 1
3	Repeat steps 1 and 2 until maximum output is obtained.					See note 2
4	1620	Radiated Sig.	Antenna	Open	E	See note 3
5	1400	Radiated Sig.	Antenna	Tune in Signal	F	See note 3

1. Connect a 33,000 ohm resistor from mixer grid to B-. Disconnect loop to gang wire.
2. Connect loop to gang wire, remove 33,000 ohm resistor from mixer grid to B-.
3. The signal can be radiated to the antenna by placing the output lead of the signal generator close to the antenna