

DeWALD Radio-Phonograph Models J-540 and J-541

(The circuit below is exact for J-540. Model J-541 is the same except for a jack in the voice coil circuit.)

TO PLAY PHONOGRAPH; -Turn volume control-power switch "ON". Move Radio-Phonograph switch lever to Phonograph position. Allow approximately one minute for the tubes to heat up. Select desired speed by moving speed lever over number marked on cabinet. Pull needle guard off, but do not discard. Replace needle guard when phonograph is not in use.

Set motor lever to proper speed of record.

When phonograph or radio is turned off, it is advisable to place this lever in the off position.

