


Emerson Radio

MODELS: 511, 517, 541

CHASSIS MODEL: 120010

| TUBE | PIN NUMBER | | | | | | | |
|-------|------------|-------|-----|-----|-------|-------|------|-------|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| 12SA7 | | | 89 | 89 | *—10 | | | *—1.6 |
| 12SK7 | | | | | *—1.6 | | 89 | |
| 12SQ7 | | *—0.7 | | | *—1.6 | *—0.5 | 37.5 | |
| 50L6 | | | 110 | 89 | | | | 6.2 |
| 35Z5 | | | | 116 | | 116 | | 117 |

The following voltage readings are d-c measurements taken from B— (line switch) to the indicated tube-socket pin. A 1000 ohms-per-volt meter should be used for all readings except those indicated by an asterisk (*), which should be taken with a d-c vacuum-tube voltmeter. Line voltage for these readings was 117 volts, 60 cycles, a.c. Measurements made with 117 volts d.c. will be lower than those given below. Take readings with the volume control set at minimum and the variable condenser closed.

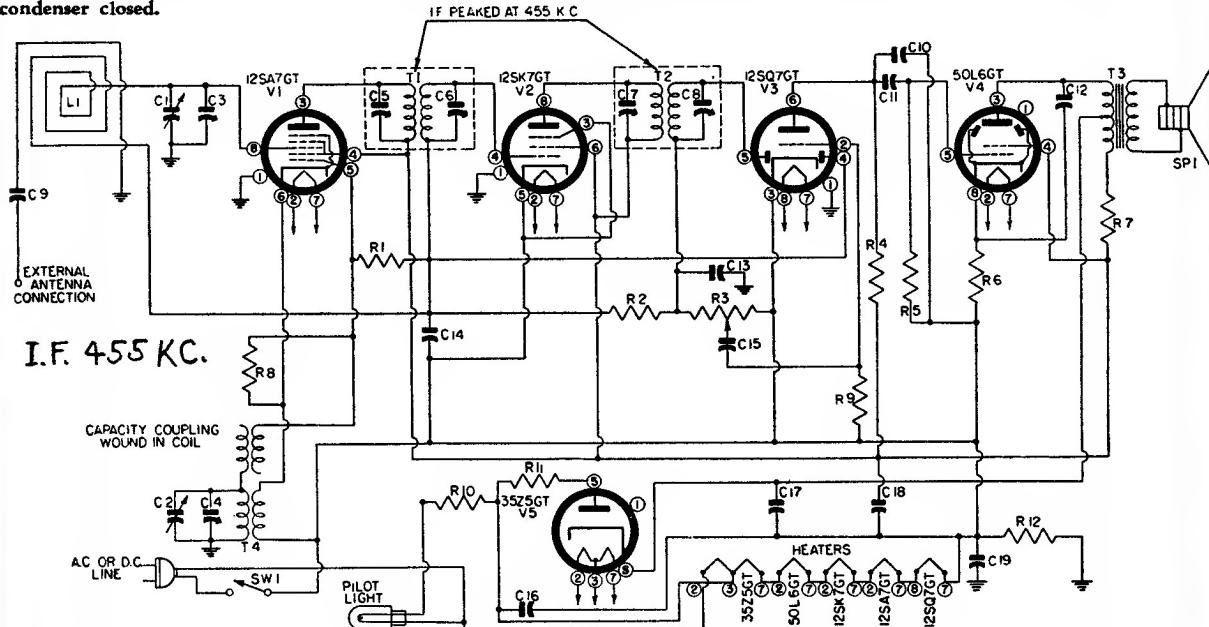

| Schematic Symbol | Part No. | DESCRIPTION | Schematic Symbol | Part No. | DESCRIPTION |
|------------------------|----------|--|------------------|----------|--|
| C1, C2 | 900160 | Two-gang variable condenser | R2 | 321330 | 3.3 meg., 1/4 watt carbon resistor |
| *C3, C4 | | Trimmers, part of variable condenser | R3 | 390000 | Volume control with line switch |
| *C5, C6, { C7, C8 } | | Trimmers, part of i-f transformers | R4, R5 | 321130 | 470,000 ohms, 1/4 watt carbon resistor |
| C9, C15 | 920010 | 0.002 mfd., 600 V. paper condenser | R6 | 340290 | 150 ohms, 1/2 watt carbon resistor |
| C10 | 920240 | 500 mmfd., 600 V. paper condenser | R7 | 370490 | 1000 ohms, 1 watt carbon resistor |
| C11, C12 | 920020 | 0.02 mfd., 400 V. paper condenser | R8 | 310810 | 22,000 ohms, 1/4 watt carbon resistor |
| C13 | 910000 | 220 mmfd., 600 V. mica condenser | R10 | 340010 | 6.8 ohms, 1/4 watt carbon resistor |
| C14 | 920040 | 0.1 mfd., 200 V. paper condenser | R11 | 397040 | 15 ohms, 1 watt wire-wound resistor |
| C16 | 920030 | 0.05 mfd., 400 V. paper condenser | R12 | 321050 | 220,000 ohms, 1/4 watt carbon resistor |
| C17, C18 | 925000 | Dual electrolytic condenser, 150 V.; C20—30 mfd., C21—50 mfd. | SP1 | 180000 | P.M. Speaker |
| C19 | 920050 | 0.2 mfd., 200 V. paper condenser | *SW1 | | Line switch, part of volume control |
| L1 | 700000 | Loop antenna assembly, or | T1 | 720000 | First i-f transformer |
| L1 | 700200 | Loop antenna assembly | T2 | 720100 | Second i-f transformer |
| R1, R9 | 397000 | 15 meg., 1/4 watt carbon resistor | T3 | 734000 | Output transformer |
| | | | T4 | 716010 | Oscillator coil |
| | | | | 583010 | Line cord |