

Emerson Radio



MODELS - 819B, 820B
CHASSIS - 120240-B

DISASSEMBLY INSTRUCTIONS


1. Remove four screws securing changer mounting board to cabinet. Lift mounting board with changer and disconnect plug P-3 from the control chassis.
2. Remove five screws securing inside perforated panel to cabinet and lift out panel. Disconnect plug P-2 from amplifier chassis and remove the changer.

3. Remove perforated back cover and remove screw securing chassis and shield assembly to rear of cabinet.
4. Remove two nuts and washers from threaded studs securing chassis and shield assembly to bottom of cabinet. Lift this assembly to clear studs, tilt forward and slide out.
5. Remove five screws securing chassis to shield assembly and remove shield so as to have access to underside of chassis.
6. To reassemble reverse procedure 1 through 5.

AMPLIFIER CHASSIS

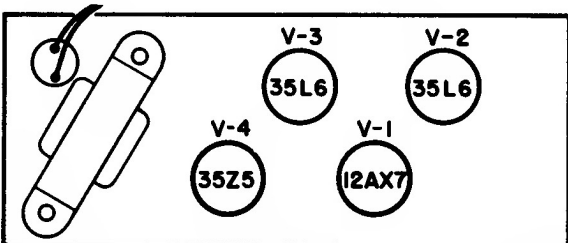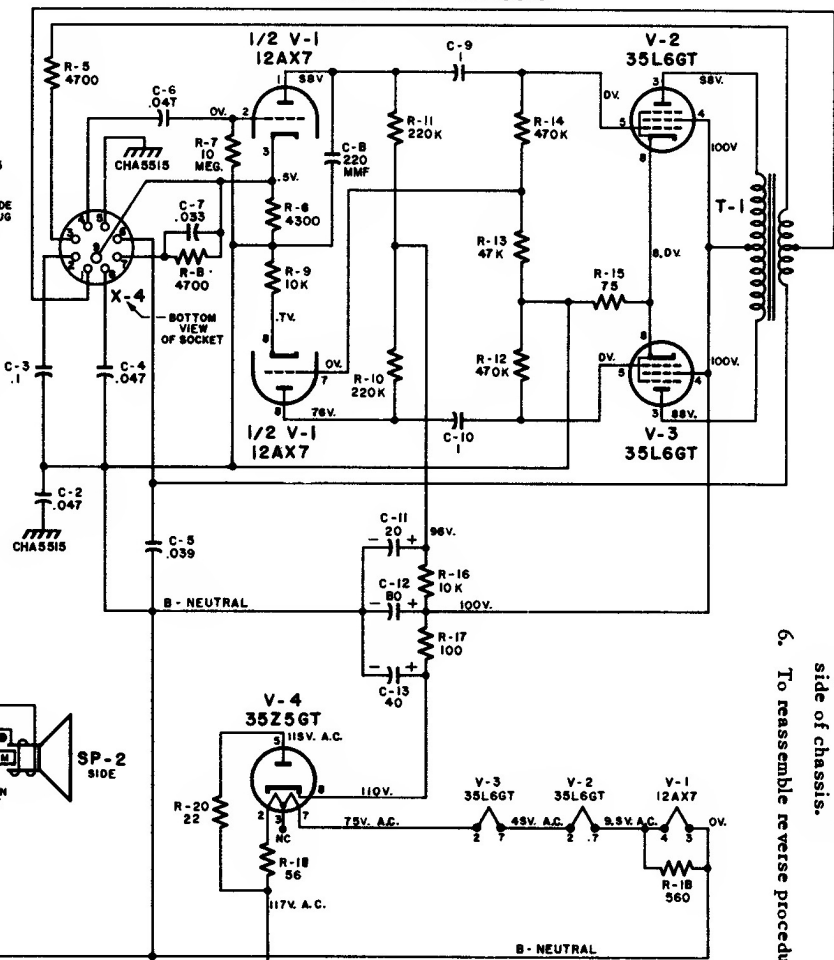

CONTROL CHASSIS

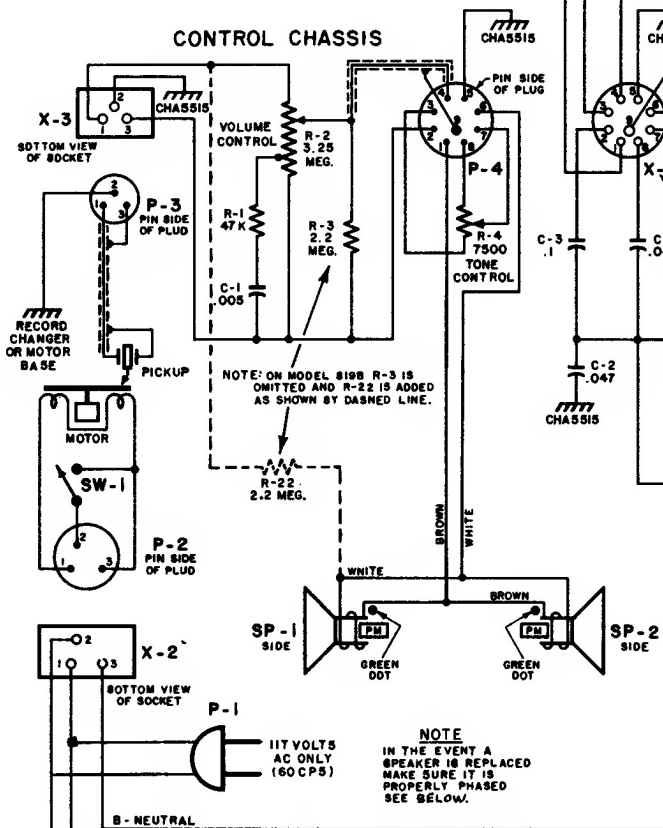

When it is necessary to replace a speaker use the following procedure.

Wire in the new speaker, then remove plug P-4 from amplifier chassis and momentarily apply 1½ volts from a flash light battery across pins 1 and 6 of plug P-4 observing the inward or outward motion of the speaker cones. If one cone moves in and the other moves out or vice versa, reverse the wiring polarity of one speaker so that both speaker cones move in or out together.

NOTE
IN THE EVENT A
SPEAKER IS REPLACED
MAKE SURE IT IS
PROPERLY PHASED
SEE BELOW.