
 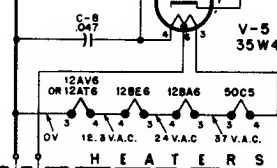



MODEL - 876B
CHASSIS - 120398B
MODEL - 881B
CHASSIS - 120373B
MODEL - 882B, 883B,
884B
CHASSIS - 120372B



**FIG. 1 - DIAL CORD STRINGING,
MODELS 882B, 883B, 884B**

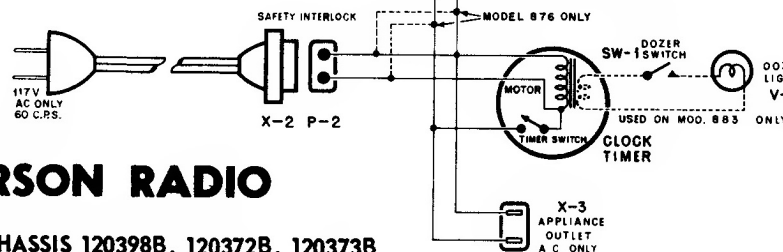

DIAL CORD STRINGING. MODEL 876B


CHASSIS - 120372B

ALIGNMENT CHART, CHASSIS 120398B, 120372B, 120373B


STEP	DUMMY ANTENNA	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	OUTPUT METER	ADJUST	REMARKS
1	.005 mfd.	High side to grid (pin 7) of V1 (12BE6). Low side to B-neutral (See Alignment Note)	455 KC	Variable condenser fully open.	Across voice coil.	T2, T1 (A3, A4, A1, A2)	Adjust for maximum output.
2		Form loop of several turns and radiate signal into receiver	1620 KC	Variable condenser fully open.	Across voice coil.	Trimmer C-TB (Osc.)	Adjust for maximum output.
3		Form loop of several turns and radiate signal into receiver	1400 KC	Tune for maximum output.	Across voice coil.	Trimmer CTA (Ant.)	Adjust for maximum output.

Emerson

MODEL: 876B
CHASSIS: 120479B
MODELS: 881B, 883B
CHASSIS: 120474B, 120475B
MODELS: 915B, 924B
CHASSIS: 120487B
MODELS: 916B, 917B, 918B
CHASSIS: 120484B


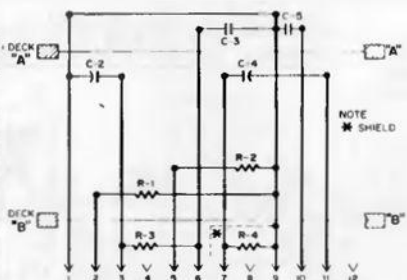


RF MODULE ("A") PART NO. 750140

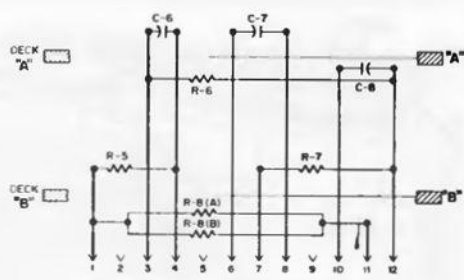


AUDIO MODULE ("B") PART NO. 750141

R-9 VOLUME CONTROL (ON-OFF, VOLUME CONTROL ON NON-CLOCK MODELS)

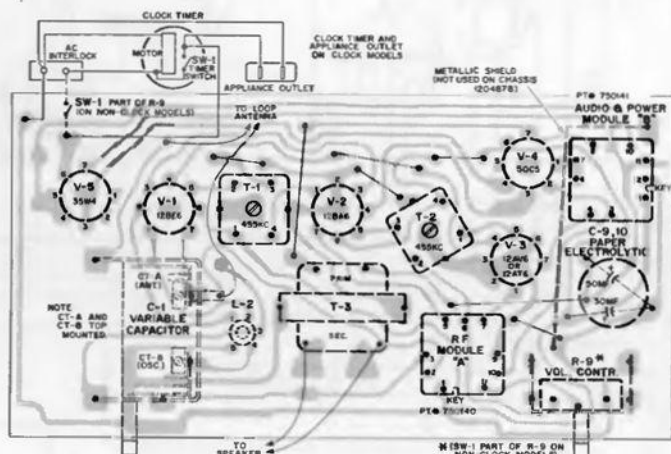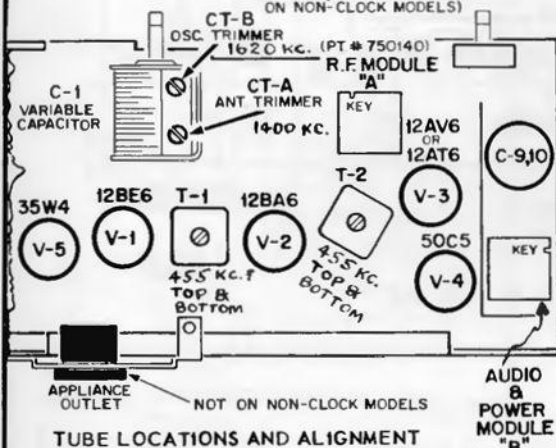

ETCHED PRINTED CIRCUIT CHASSIS

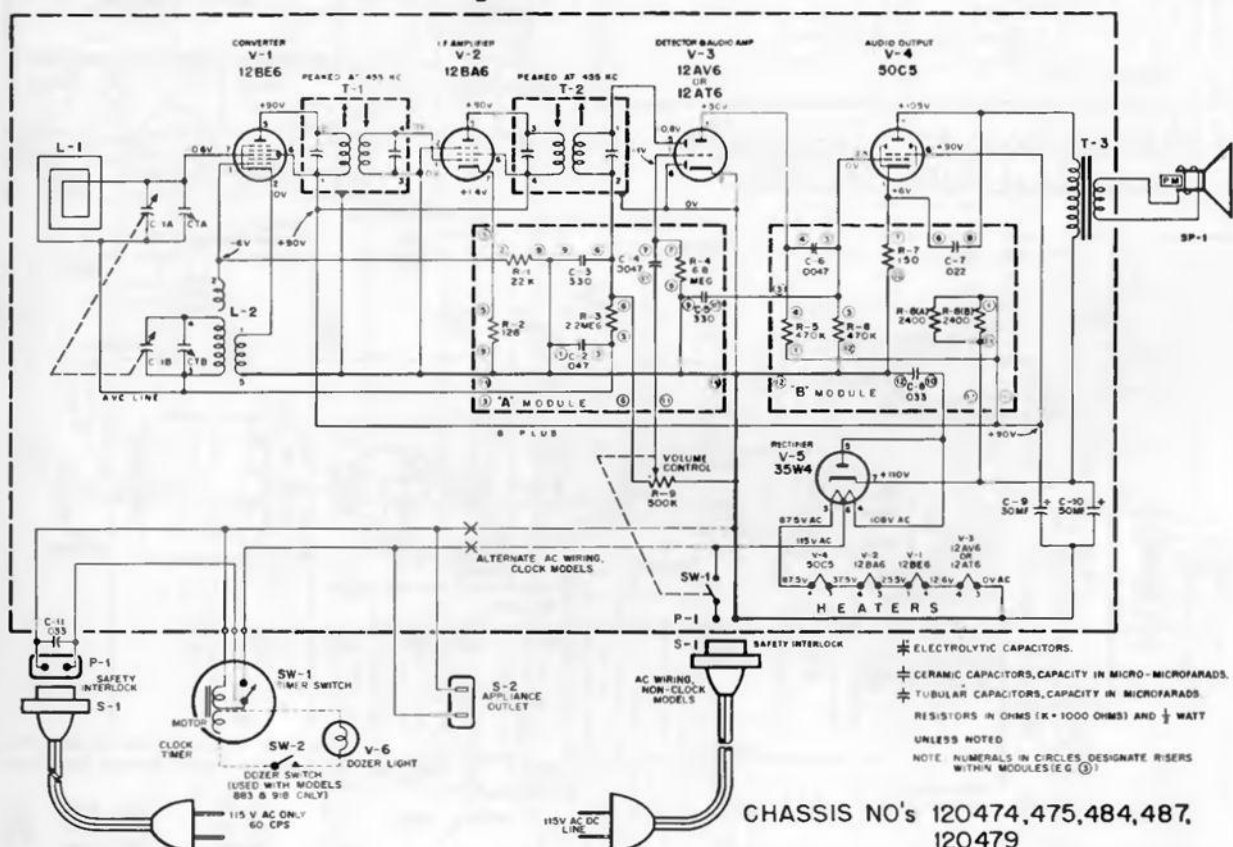

CHASSIS NO's 120474, 475, 484, 487,
120479