## EMERSON RADIO Model 937B, Chassis 120558B

## DISASSEMBLY INSTRUCTIONS

- 1. Remove 2 Phillips head screws used to secure record changer to cabinet.
- 2. Lift changer and cardboard mounting escutcheon up and tilt backwards. Do not disconnect any leads.
- 3. Remove both volume control knobs from cabinet front.
- 4. Disconnect leads for both the left and right channel loudspeakers from their respective output transformers. NOTE: Care should be taken to mark all speaker leads before disassembly to insure their proper connection during re-assembly.
- Remove two polnuts used to secure chassis to cabinet and free line cord from fishpaper harness stapled to cobinet.
- 6. Slide chassis to rear and lift both record changer and PICK-UP

P-I

(LINE CORO)

HSV.AC ORLY

60 CPS

7. Re-assemble in reverse order

\* B - INEVER TO SE SHORTED TO CHASSIS

RESISTORS IN CHMS I K = 1000) ARD WATT UNLESS NOTED.

CAPACITORS IN MICROFARADS

