

FIRESTONE TIRE

Stock No 4-A-92


Tuning Range - 540 to 1600 KC Intermediate Freq. - 455 KC

Loud Speaker - 3-1/2" P.M.


VOLTAGE TABLE

ALIGNMENT PROCEDURE

		TEST	OSCILLATOR		
Steps	Set Receiver dial to:	Adjust test oscillator frequency to:	Attach output of test oscillator to:	DUMMY AN TENN A	Refer to parts layout diagram for lo- cation of trimmers mentioned below:
1	Any point where no interfering signal is received.		High side to grid of con-, verter Tube. Low side to common negative.	1. MFD CONDENSER	Adjust 2nd I.F. (T2) and then each of the slugs of the 1st I.F. (T1) for max imum output.
2	Exactly 1620 KC	Exactly 1620 KC	DUMMY ANTENNA	(Placa approx. ona foot from & parallel	Adjust 1620 KC oscillator trimmer for maximum output.
3	Approx. 1400 KC	Approx. 1400 KC	DUMMY ANTENNA		Adjust 1400 KC antenna trimmer for maximum output.

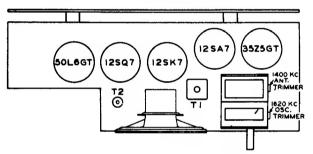



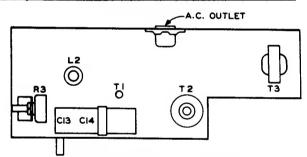

BOTTOM VIEW OF CHASSIS

