


MODELS 625 AND 626 PORTABLE RADIO RECEIVERS

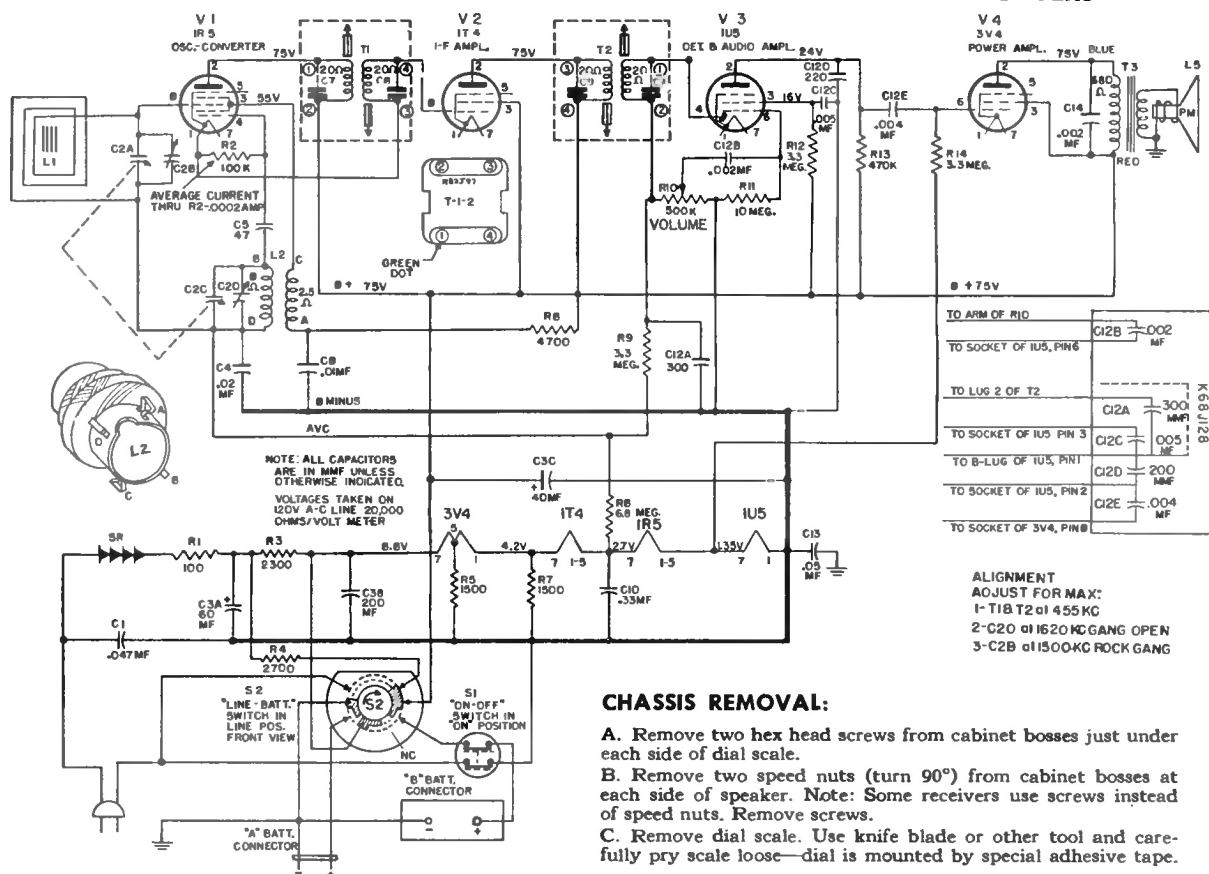

CHASSIS REMOVAL:

- A. Remove two hex head screws from cabinet bosses just under each side of dial scale.
- B. Remove two speed nuts (turn 90°) from cabinet bosses at each side of speaker. Note: Some receivers use screws instead of speed nuts. Remove screws.
- C. Remove dial scale. Use knife blade or other tool and carefully pry scale loose—dial is mounted by special adhesive tape.

BOTTOM SHIELD REMOVAL:

- A. Remove chassis.
- B. Remove six trimount studs:
3 across back of chassis
3 across front of chassis (2)
- C. Slide bottom down one inch

BATTERY INSTALLATION:

The "A" battery is placed in the bottom of cabinet to the left of the loudspeaker. The battery receptacle must face cabinet back. The "B" battery is installed to the right of "A" battery and behind loudspeaker. "B" battery connector buttons must face to the right.

