


GENERAL ELECTRIC

Models 930, 935, 936, Clock Radios
Models 455S, 456S, 457S, 875, 876, 877,
are electrically identical to this group but
omit clock motor and switch and incorpo-
rate a switch on R3.

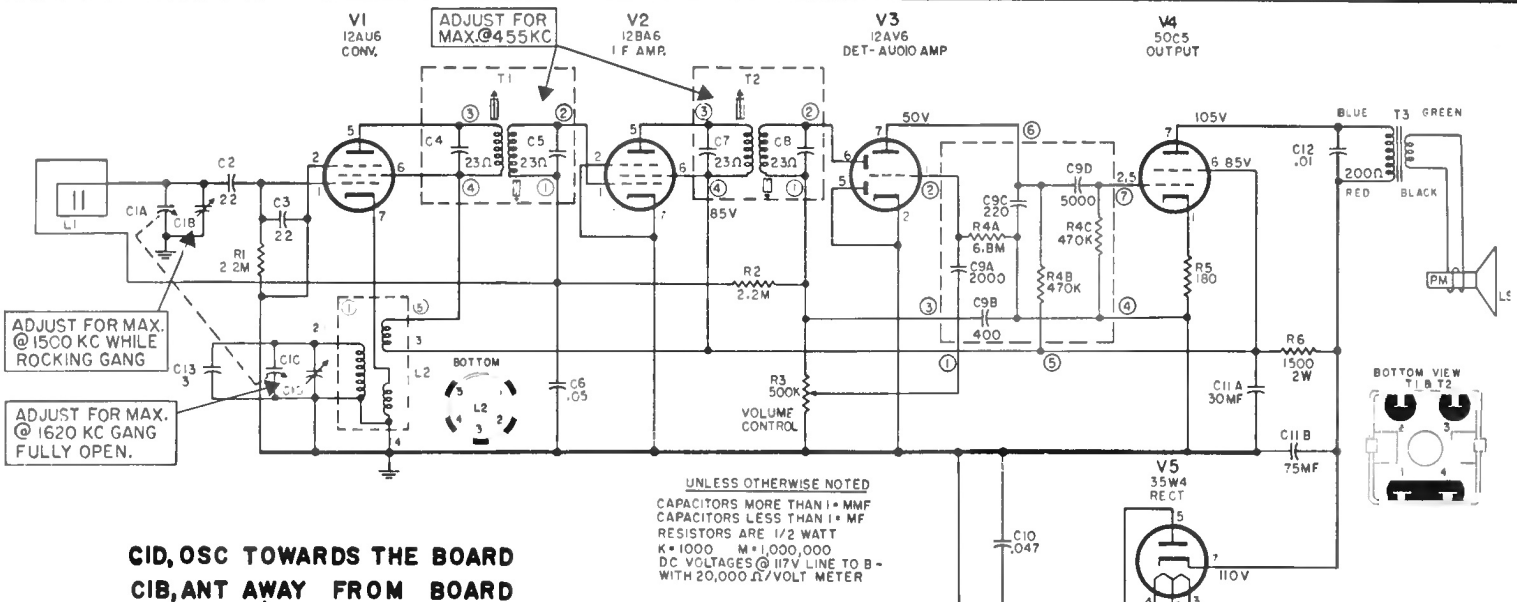

TO REMOVE CHASSIS FROM CABINET

Remove Volume Knob and cabinet back. Remove the four hexhead screws, one on each corner of the chassis and the single tuning capacitor, C1, by the thumb and forefinger of one hand and the tuning knob by the other hand and pull; thereby removing the chassis; tuning knob remaining on cabinet front.

The Tuning Knob is captivated to the cabinet and cannot be removed without first removing the chassis.

