


GENERAL ELECTRIC Model C-460A

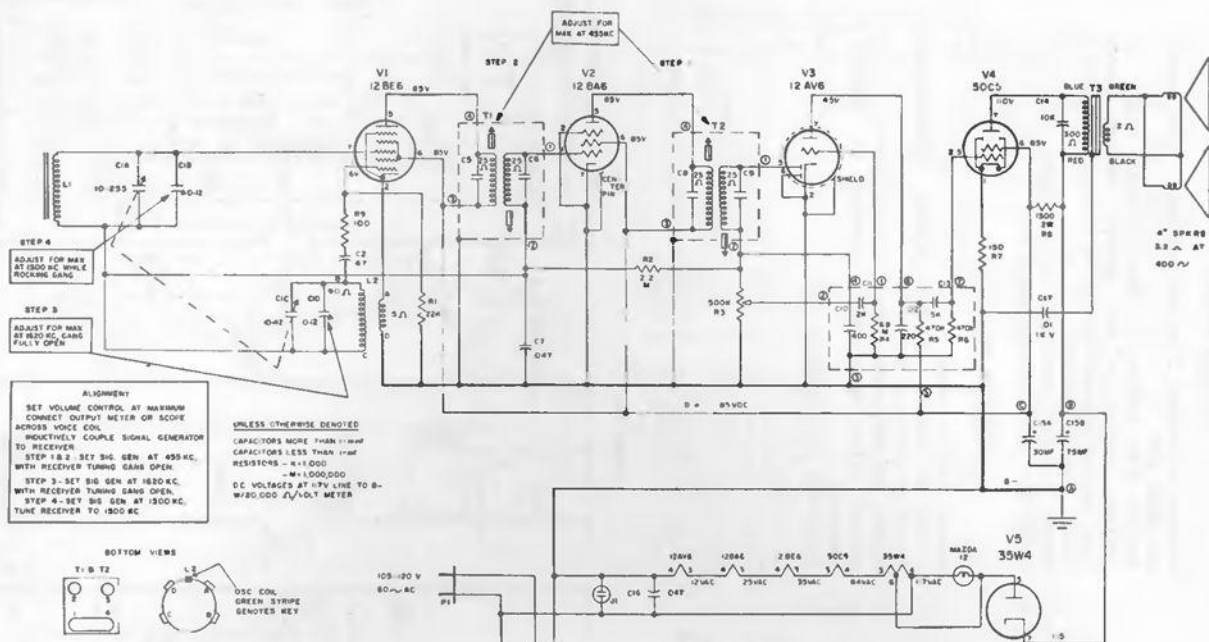

TO REMOVE FRONT PANEL

1. Pull off clock control levers.
2. Remove volume and tuning control knobs.
3. Remove screws fastening front panel to bottom of cabinet.
4. Lift panel out carefully to prevent scratching crystal on control shafts.

TO REMOVE CHASSIS

1. Follow steps one through four as above.
2. Remove two screws from top of masonite board and third screw beside line cord interlock.
3. Unscrew clock-set knob.
4. Unsolder speaker leads.

