
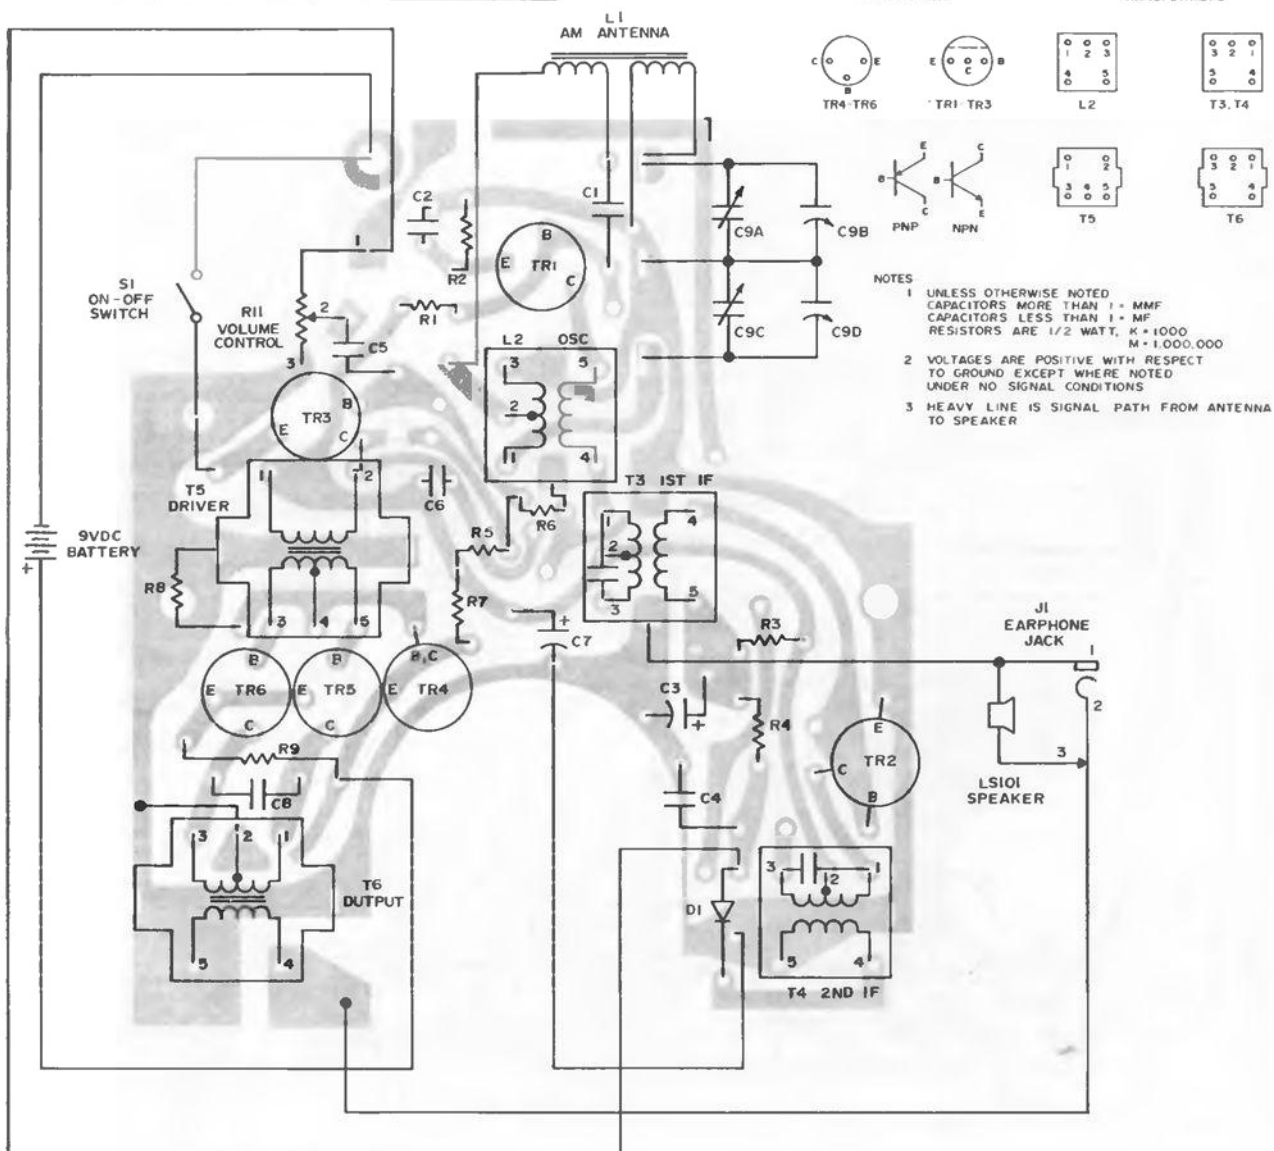


ALIGNMENT

- 1 SET VOLUME CONTROL AT MAXIMUM CONNECT OUTPUT METER OR SCOPE ACROSS SPEAKER INDUCTIVELY COUPLE SIGNAL GENERATOR TO RECEIVER
- 2 ADJUST FOR MAXIMUM 455 KC SIGNAL
- 3 DO STEPS 3,4,5 REPEATING FOR MAXIMUM SENSITIVITY

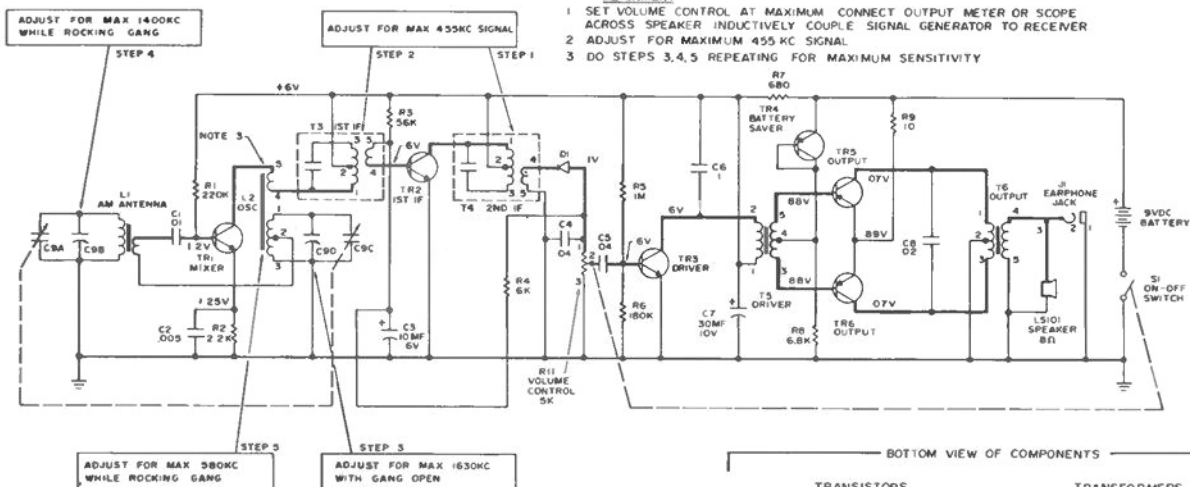

WIRING DIAGRAM (BOTTOM VIEW)