
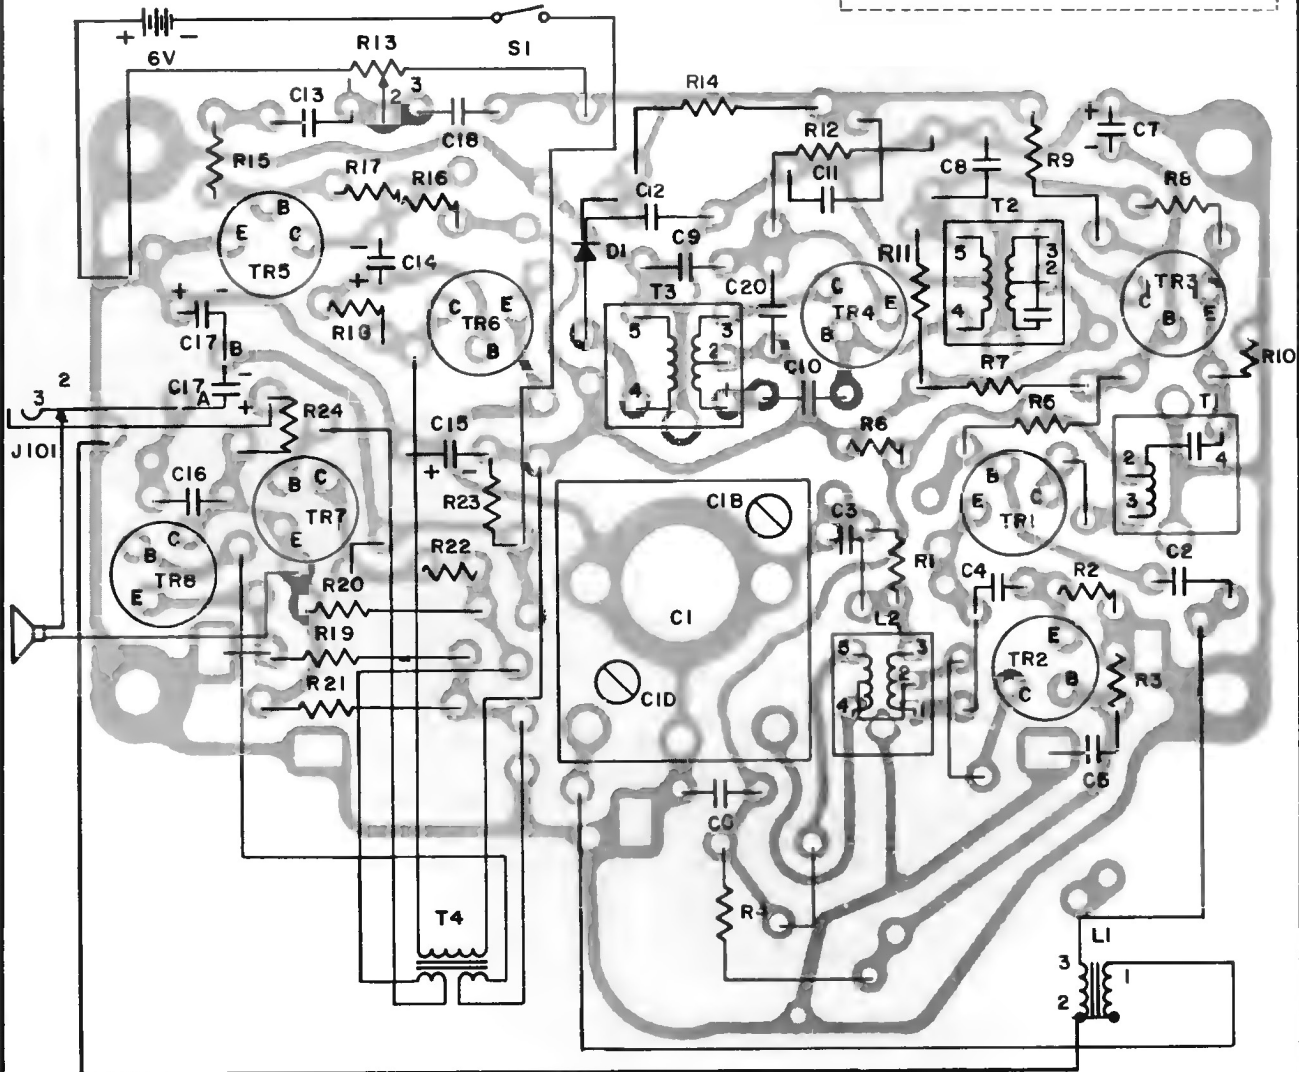


GENERAL ELECTRIC

Model P845A

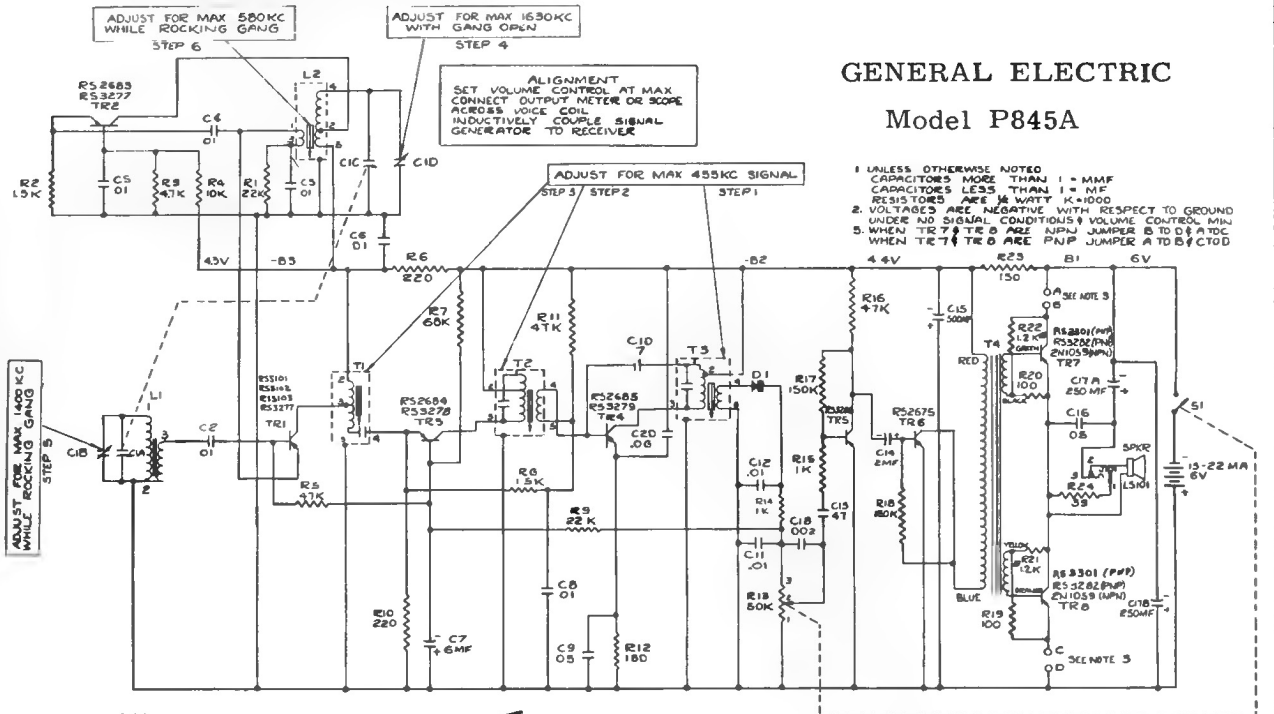


GENERAL ELECTRIC

Model P845A

CHASSIS REMOVAL

1. Remove two phillips head screws located on the cabinet back.
2. Remove the screw holding the battery compartment door and remove the penlite batteries.
3. Remove the two phillips head screws located beneath the extreme right and left batteries.
4. Lift off cabinet back and remove four 1/4" hex-head bolts from the circuit board.
5. Carefully lift out chassis from cabinet.

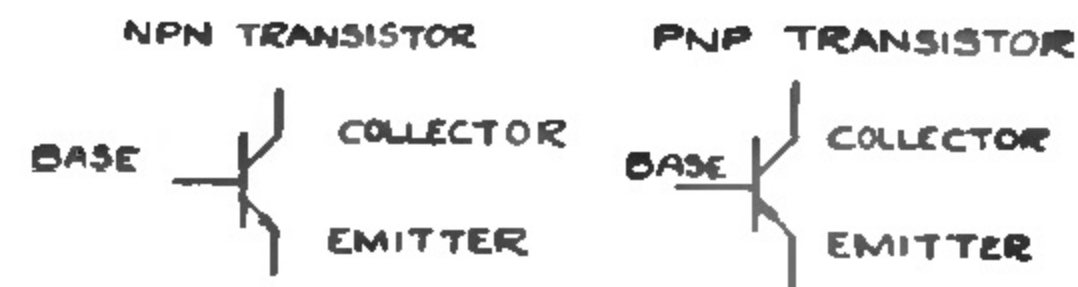

TRANSISTOR MOUNTING PATTERN



TABLE OF TRANSISTOR VOLTAGES				
	EMITTER	BASE	COLLECTOR	FUNCTION
TR1	.4	.45	4.8	MIXER
TR2	.95	.95	4.5	OSCILLATOR
TR3	25 to 45	42 to 55	4.4	1ST IF AMPLIFIER
TR4	2 to 4	55 to 5	4.4	2ND IF AMPLIFIER
TR5	0	.1 to .2	1 to 2.2	AUDIO AMPLIFIER
TR6	0	2	4.2	AUDIO DRIVER
TR7	NPN 2.9	2.7	0	PUSH PUSH AUDIO OUTPUT
	PNP 2.9	3.1	6	
TR8	NPN 6	5.8	2.9	
	PNP 0	.2	2.9	

IF TRANSFORMER OSC COIL

