


**MODEL TW-200 SERIES
BROADCAST RECEIVER, AC-DC BATTERIES**

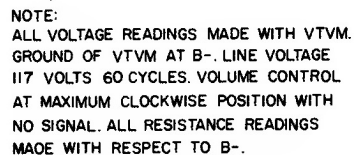

The chassis may be removed by removing the two Phillips screws at either end of the cabinet, and the Phillips screw which is underneath the tuning dial. Then lift chassis from cabinet, being careful not to damage stick loop and speaker both of which are part of the chassis assembly.