The Award Series



A 700

70 WATT INTEGRATED STEREOPHONIC AMPLIFIER

PLEASE READ THIS MANUAL... carefully before installing your new stereophonic amplifier. You have invested in a high quality electronic instrument and a few moments taken now to read this manual may save considerable time and effort later on.

Keep this instruction manual available at all times. It contains indispensable technical and service information.

UNPACKING

After unpacking the A700, inspect it carefully for signs of transit damage. The amplifier was subjected to numerous rigid quality control inspections and therefore should be in perfect operating condition. If damage is visible, notify your dealer at once. If the amplifier was shipped to you, notify the transportation company. Harman-Kardon will cooperate with you in such instances, but please note that only you can recover from the carrier for damages incurred during shipment.

Check the folds of the carton and packing materials before discarding. Your

package should contain the following items:

- I Award Series, Model A700 Integrated Amplifier.
- l Instruction Manual.
- 1 Warranty Card.
- 1 Mounting Template.

WARRANTY POLICY

We urge you to fill in your warranty card and mail it to the factory without delay to protect your rights under warranty. The Harman-Kardon warranty is not valid unless we have your card on file.

WARRANTY

We warrant each A700 to be free from defects in material and workmanship under normal use and service, and in accordance with the conditions herein below set forth, for a period of 1 year from date of delivery to the original purchaser, and agree to replace or repair any part or parts, with the exception of tubes, which are under the manufacturers 90 days warranty, returned to us within said 1 year, with transportation prepaid and which our examinations shall disclose to our satisfaction to have been thus defective. This warranty does not include free labor, nor is it applicable to any instrument which shall have been repaired or altered in any way so as in our judgement to affect its stability or reliability nor which has been subject to neglect, misuse, abuse, negligence or accident nor which has had the serial number altered, effaced, or removed. Neither shall this warranty apply to any instrument which has been connected otherwise than in accordance with instructions furnished by us.

This warranty is expressly in lieu of all other warranties, express or implied, and of all other obligations or liability on our part, and we neither assume nor authorize any representative or other person to assume for us any other liability

in connection with the sale of this instrument.

SERVICE POLICY

Harman-Kardon has established a special consumer division to answer all questions pertinent to the installation and operation of your unit. Please feel free to write us at any time and we will endeavor to offer prompt and complete advice.

If your problem cannot be resolved through our combined efforts then we may wish to refer you to one of our authorized warranty stations. The unit must be then shipped via Railway Express, Prepaid to the station designated, accompanied by a brief note describing the exact nature of the difficulty. <u>Under no circumstances should the set be shipped directly to the factory without prior authorization</u>.

INSTALLATION PROCEDURE

Ventilation:

The unit is well ventilated in itself, but sufficient space must be allowed around it to permit proper air flow. Install the amplifier in a manner to allow for unrestricted circulation. Do not place books or other objects on the cage or in the immediate vicinity of the instrument. Reducing the air flow will result in sharply reduced component and tube life. Allow at least 4 inches above the unit for cabinet installation.

Power Requirements


Plug the AC line cord into any outlet furnishing 117 volts 50 or 60 cycles AC current. The voltage may vary between 105 and 125 volts. An AC convenience receptacle is located on the rear of the amplifier. Any auxiliary equipment may be plugged into this outlet and will be controlled by the push button on/off switch on the front panel. The current rating of this equipment should not exceed 1 ampere.

Speaker Connections:

Your two speakers should be identical if possible to obtain optimum results. Experts agree that a perfectly matched system offers the best stereophonic reproduction. The speakers should be placed along the same wall (or if the Citation X speakers are used, facing one another) approximately 8 to 15 feet apart depending upon room size and furniture placement. It may be necessary to experiment with speaker placement until best results are obtained.

Use regular lamp cord or any high quality grade of heavy wire to connect the speakers to the A700. Be careful not to drive staples or tacks through the center of the wire as this may short out the two sections causing decreased volume, distortion or a complete short, cutting out the speaker entirely. It is permissible to use approximately 100 feet of speaker connecting wire (not less

than #18 ga.) for each speaker without loss of volume.

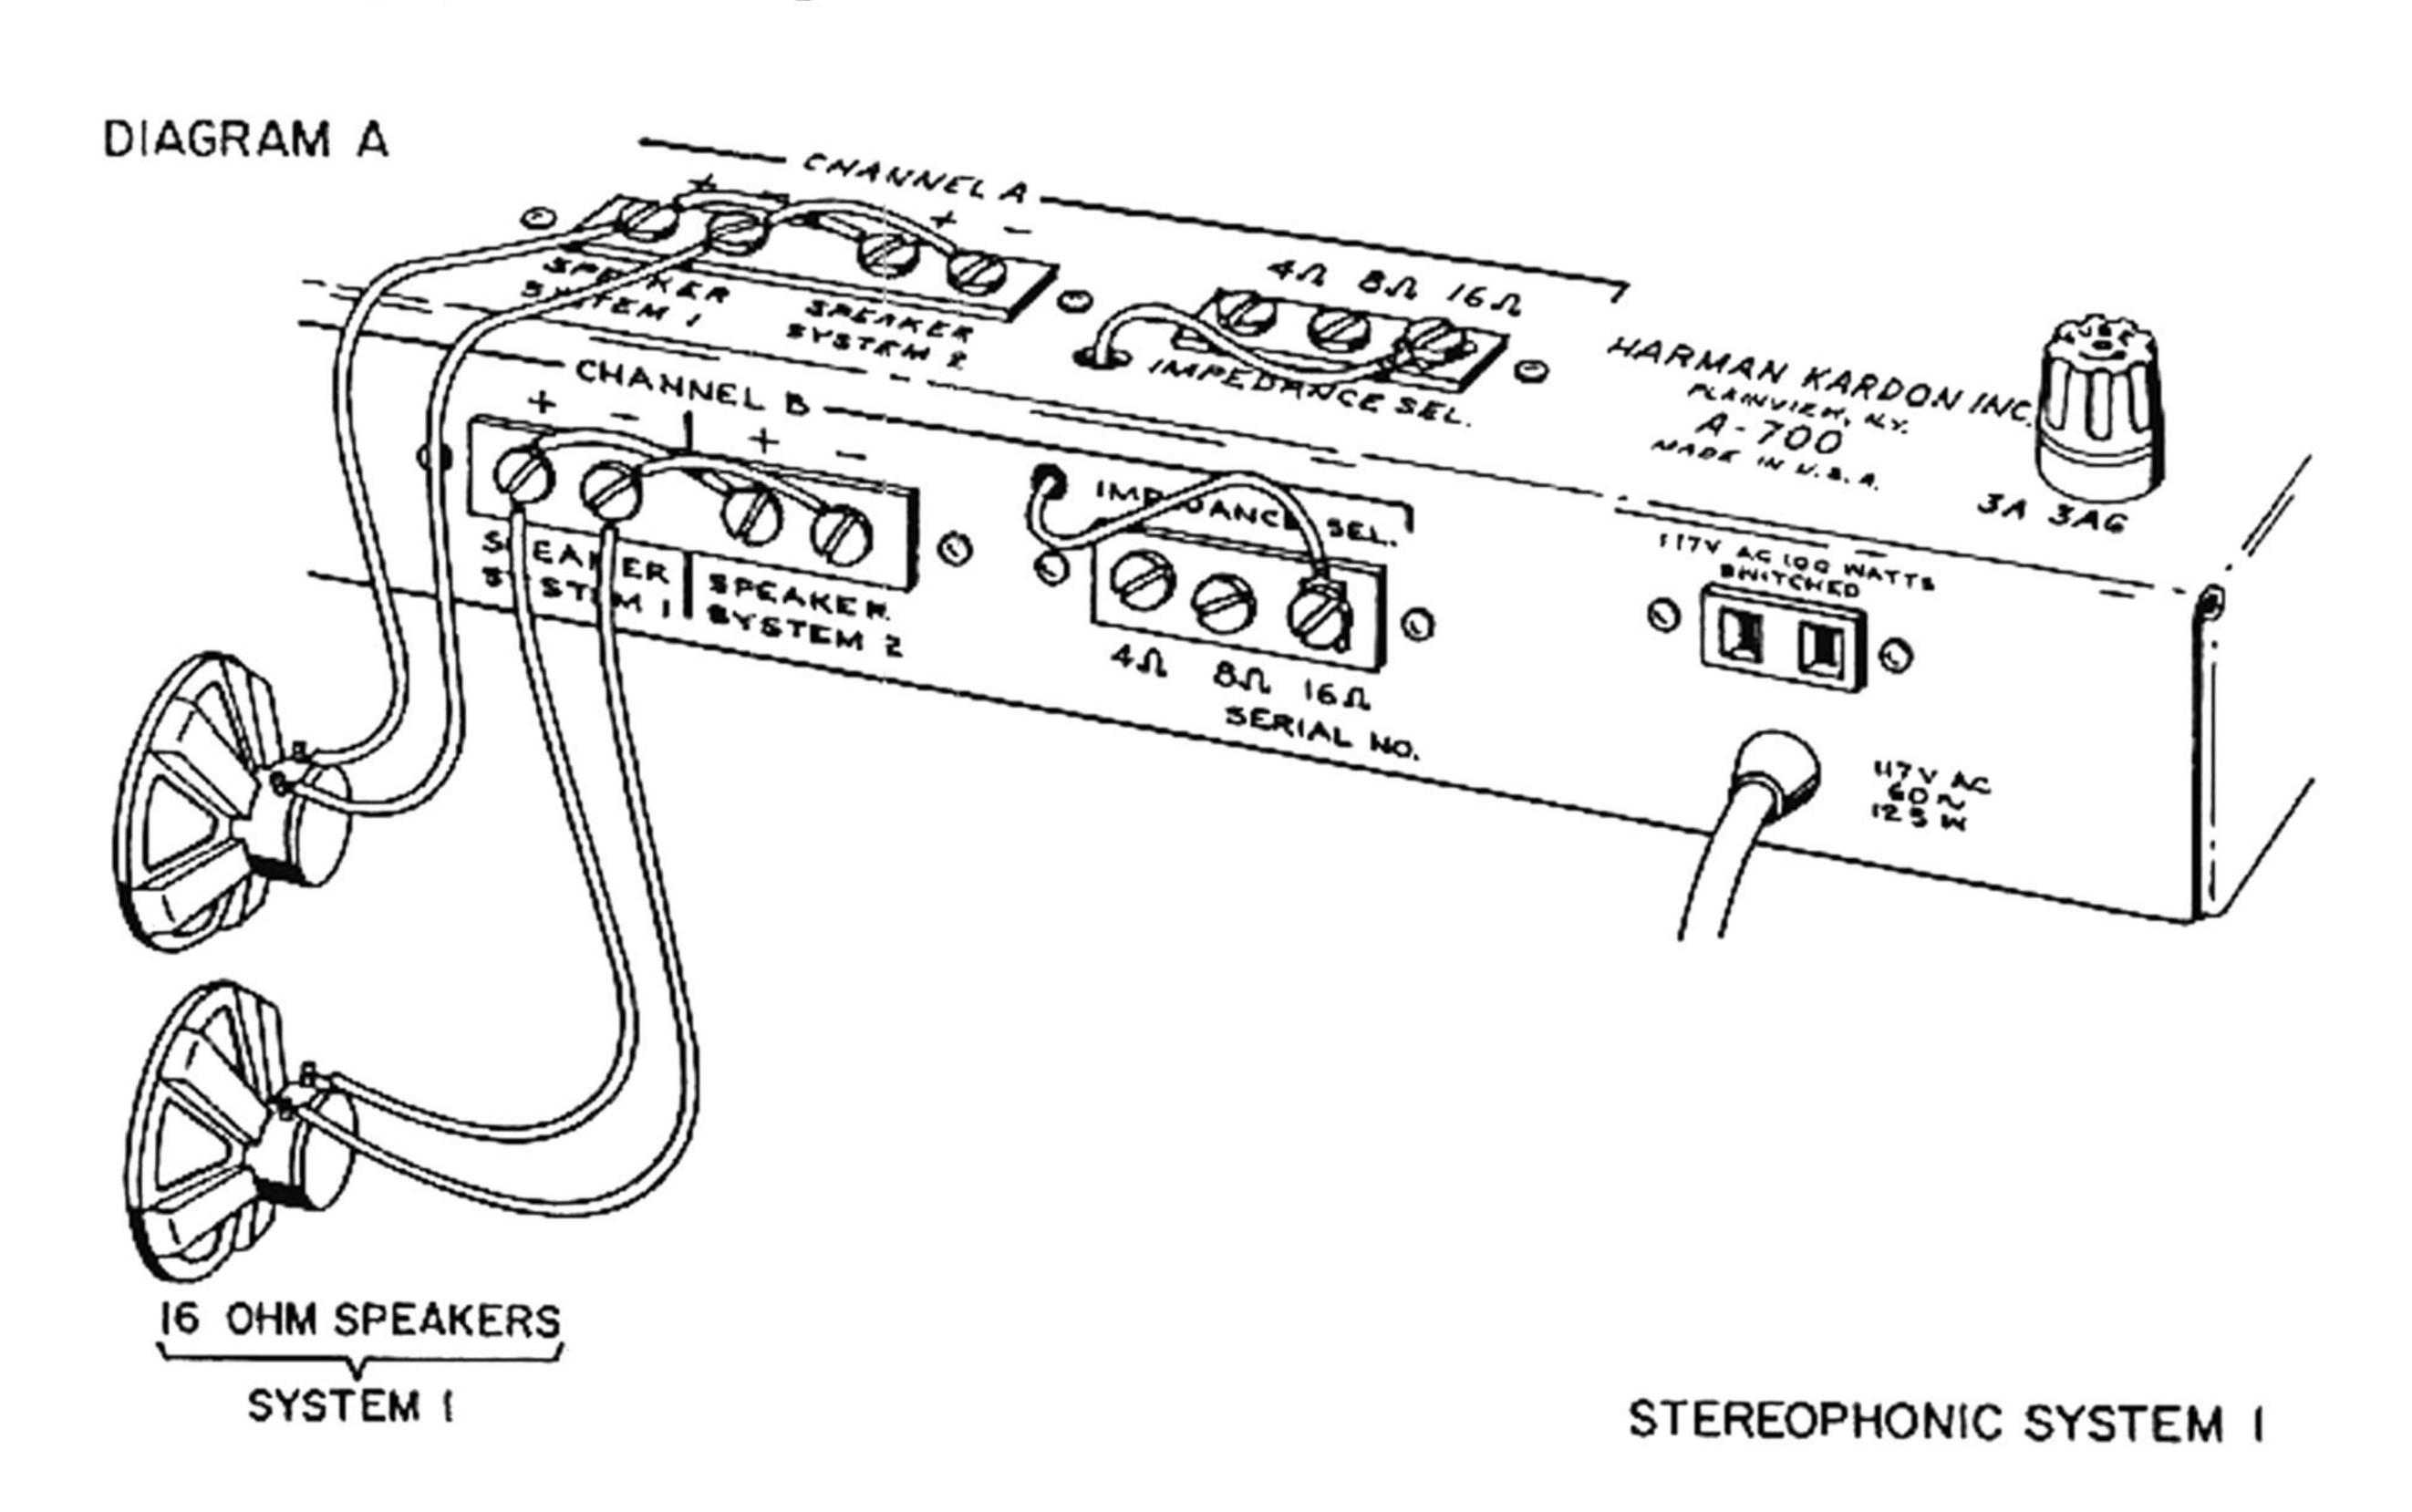


Stereophonic Speaker Connection (System 1):

Connect one length of wire to one speaker and attach the other end to the CHANNEL A, SPEAKER SYSTEM 1 terminal strip located on the top rear of the A700 chassis. Similarly connect another length of wire to your other speaker and attach the other end to the CHANNEL B, SPEAKER SYSTEM 1 terminal strip located on the rear of the A700 chassis. (See Diagram A). Your speakers are now connected for stereophonic operation when the speaker selector switch (located on the front panel) is in the SYSTEM 1 position. The SYSTEM 2 output terminals must also be terminated to prevent damage to the output tubes and transformer should the speaker selector switch be inadvertently switched to the SYSTEM 2 position. This is accomplished by paralleling the two speaker systems as shown in Diagram A. This connection defeats the operation of the speaker selector switch and allows 1 system stereophonic operation regardless of the position of this switch.

If your speakers have an impedance of 3-5 ohms, connect the IMPEDANCE SELECTOR wires to the 4 ohm terminals on the rear speaker terminal strips. If your speakers have an impedance of 6-10 ohms, connect the IMPEDANCE SELECTOR wires to the 8 ohm terminals. If your speakers have an impedance of 12-20 ohms, connect the IMPEDANCE SELECTOR wires to the 16 ohm


terminals.

Carefully dress the speaker leads away from audio input cables and power lines. Keep the wiring neat and away from transformers and tubes to reduce hum pickup.

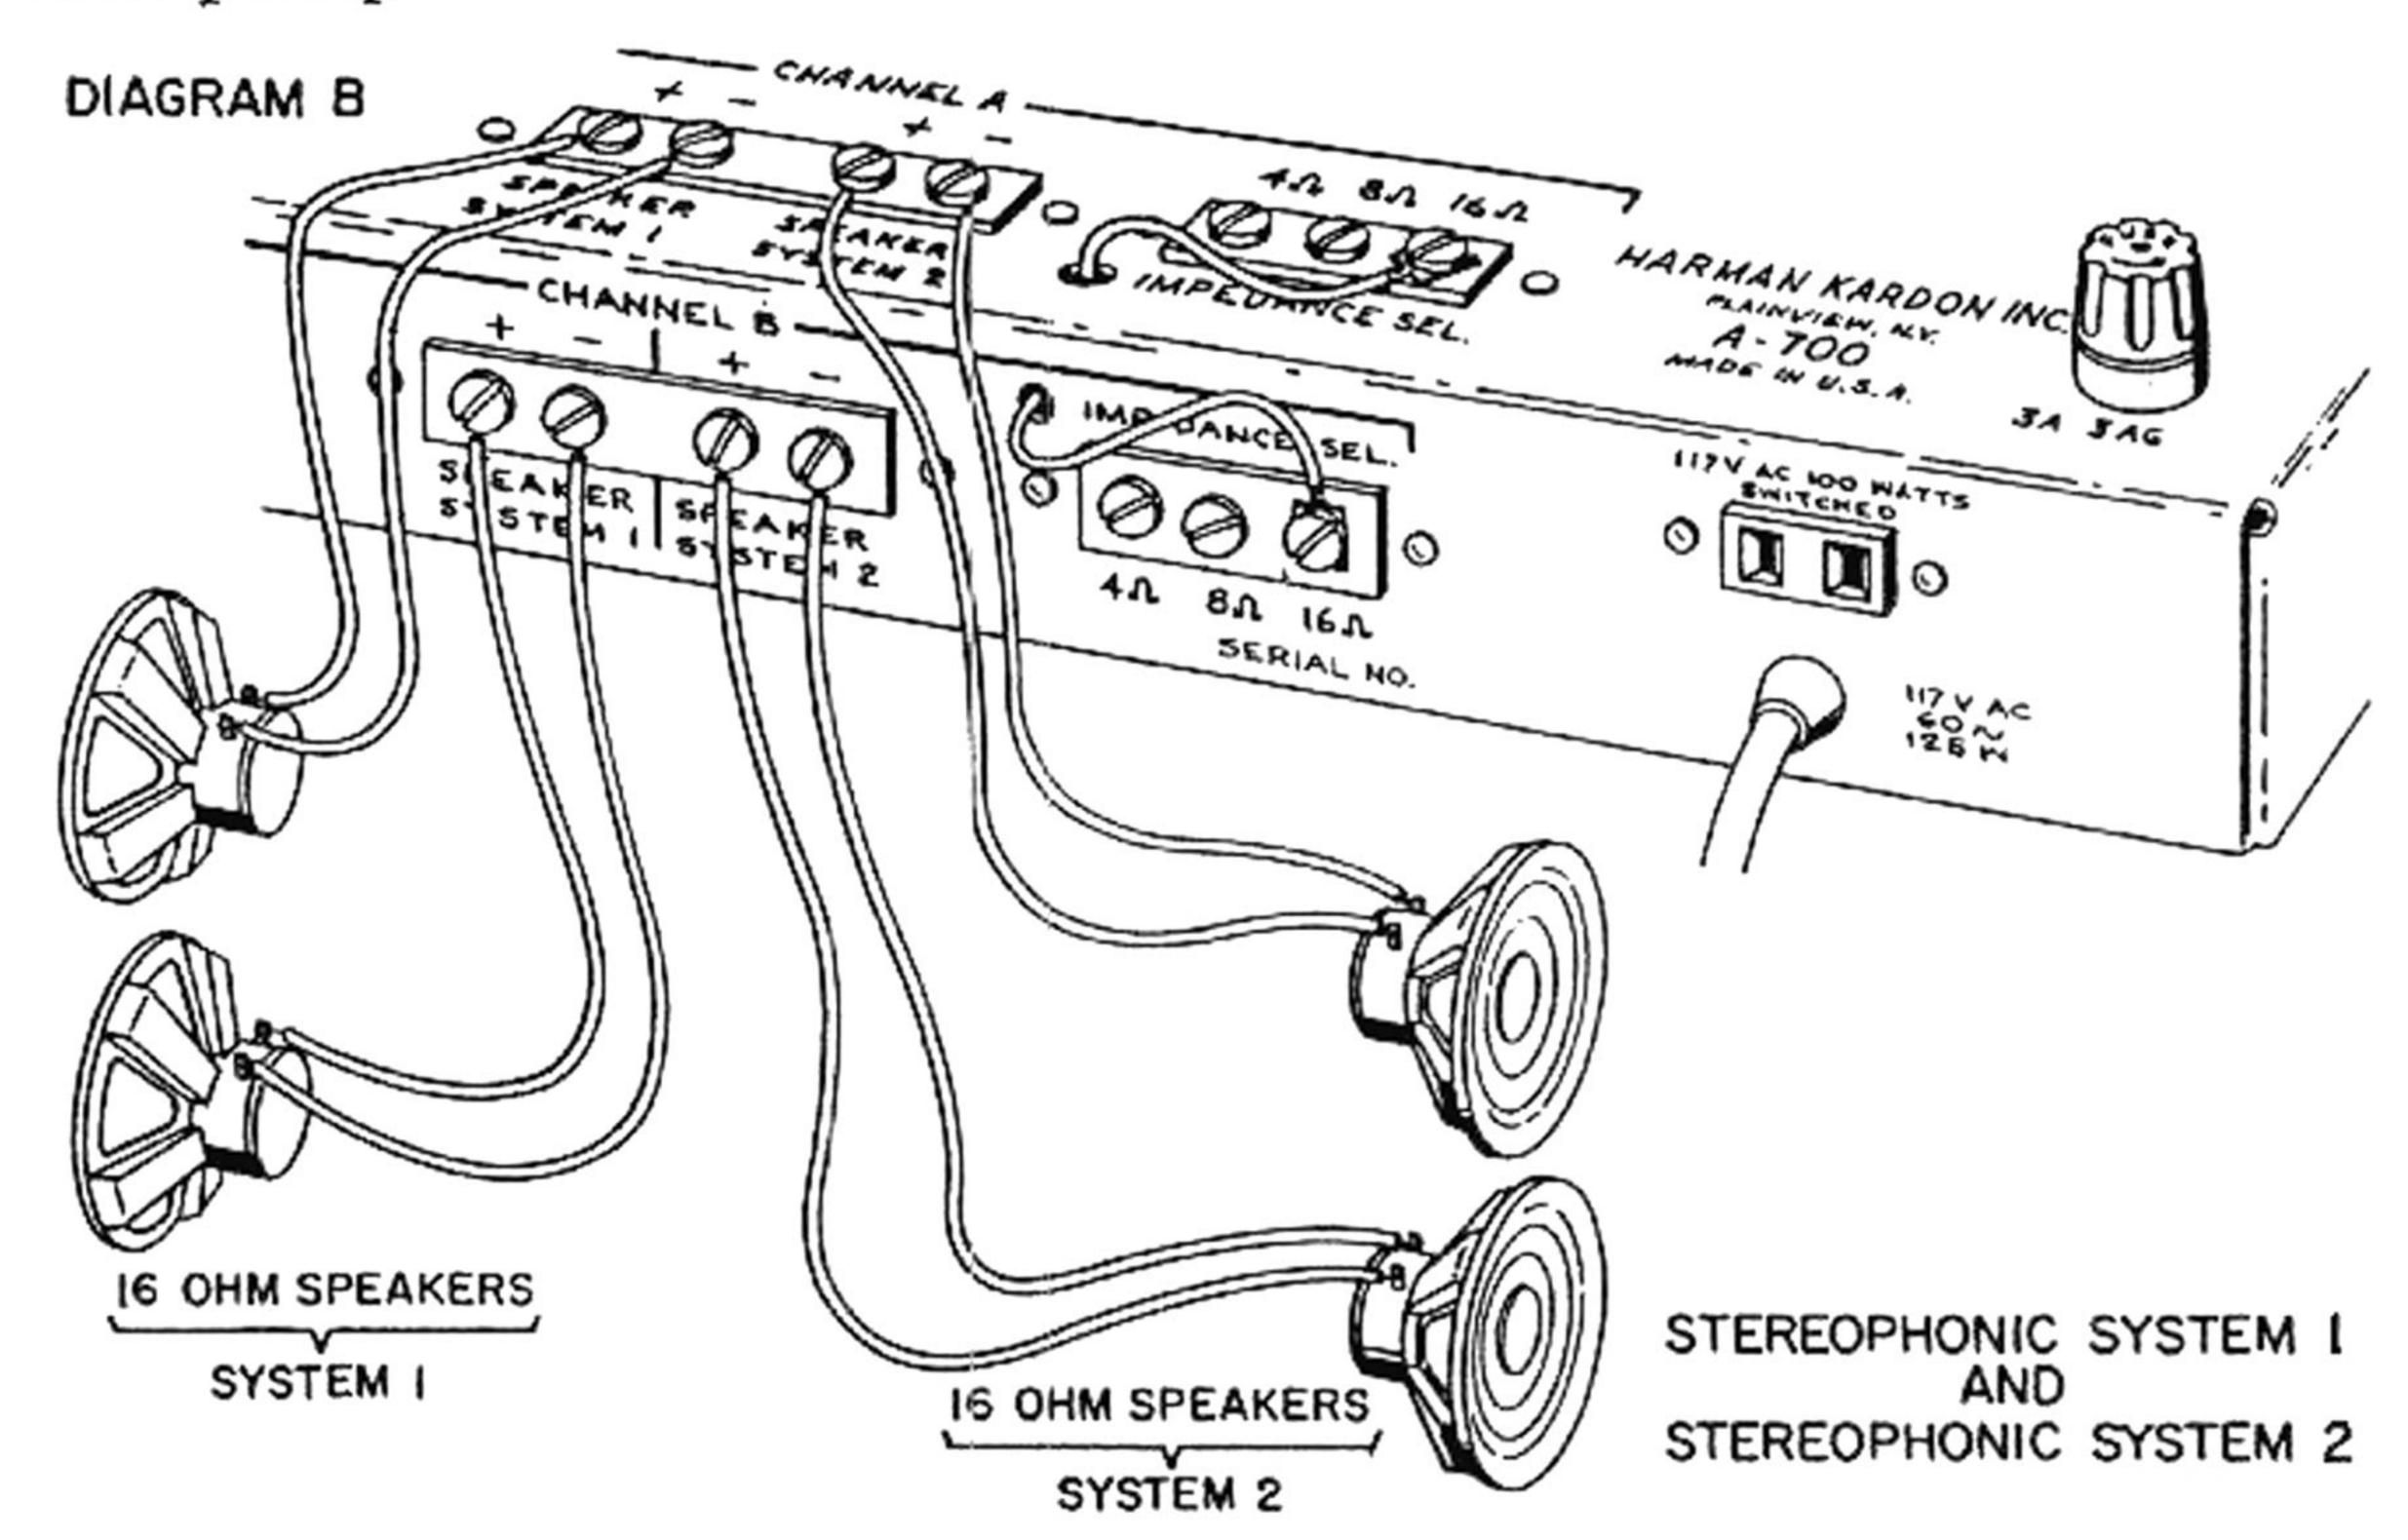


Stereophonic Speaker Connection (System 1 and System 2):

The model A700 stereophonic amplifier incorporates a unique switching arrangement enabling the user to operate two independent stereo speaker systems located in different rooms. With the use of the speaker selector switch this will enable you to select either SYSTEM 1 independently, SYSTEM 2 independently, or both systems simultaneously. Connect all four speakers as shown in diagram B and then connect the IMPEDANCE SELECTOR wires as described in the previous paragraph.

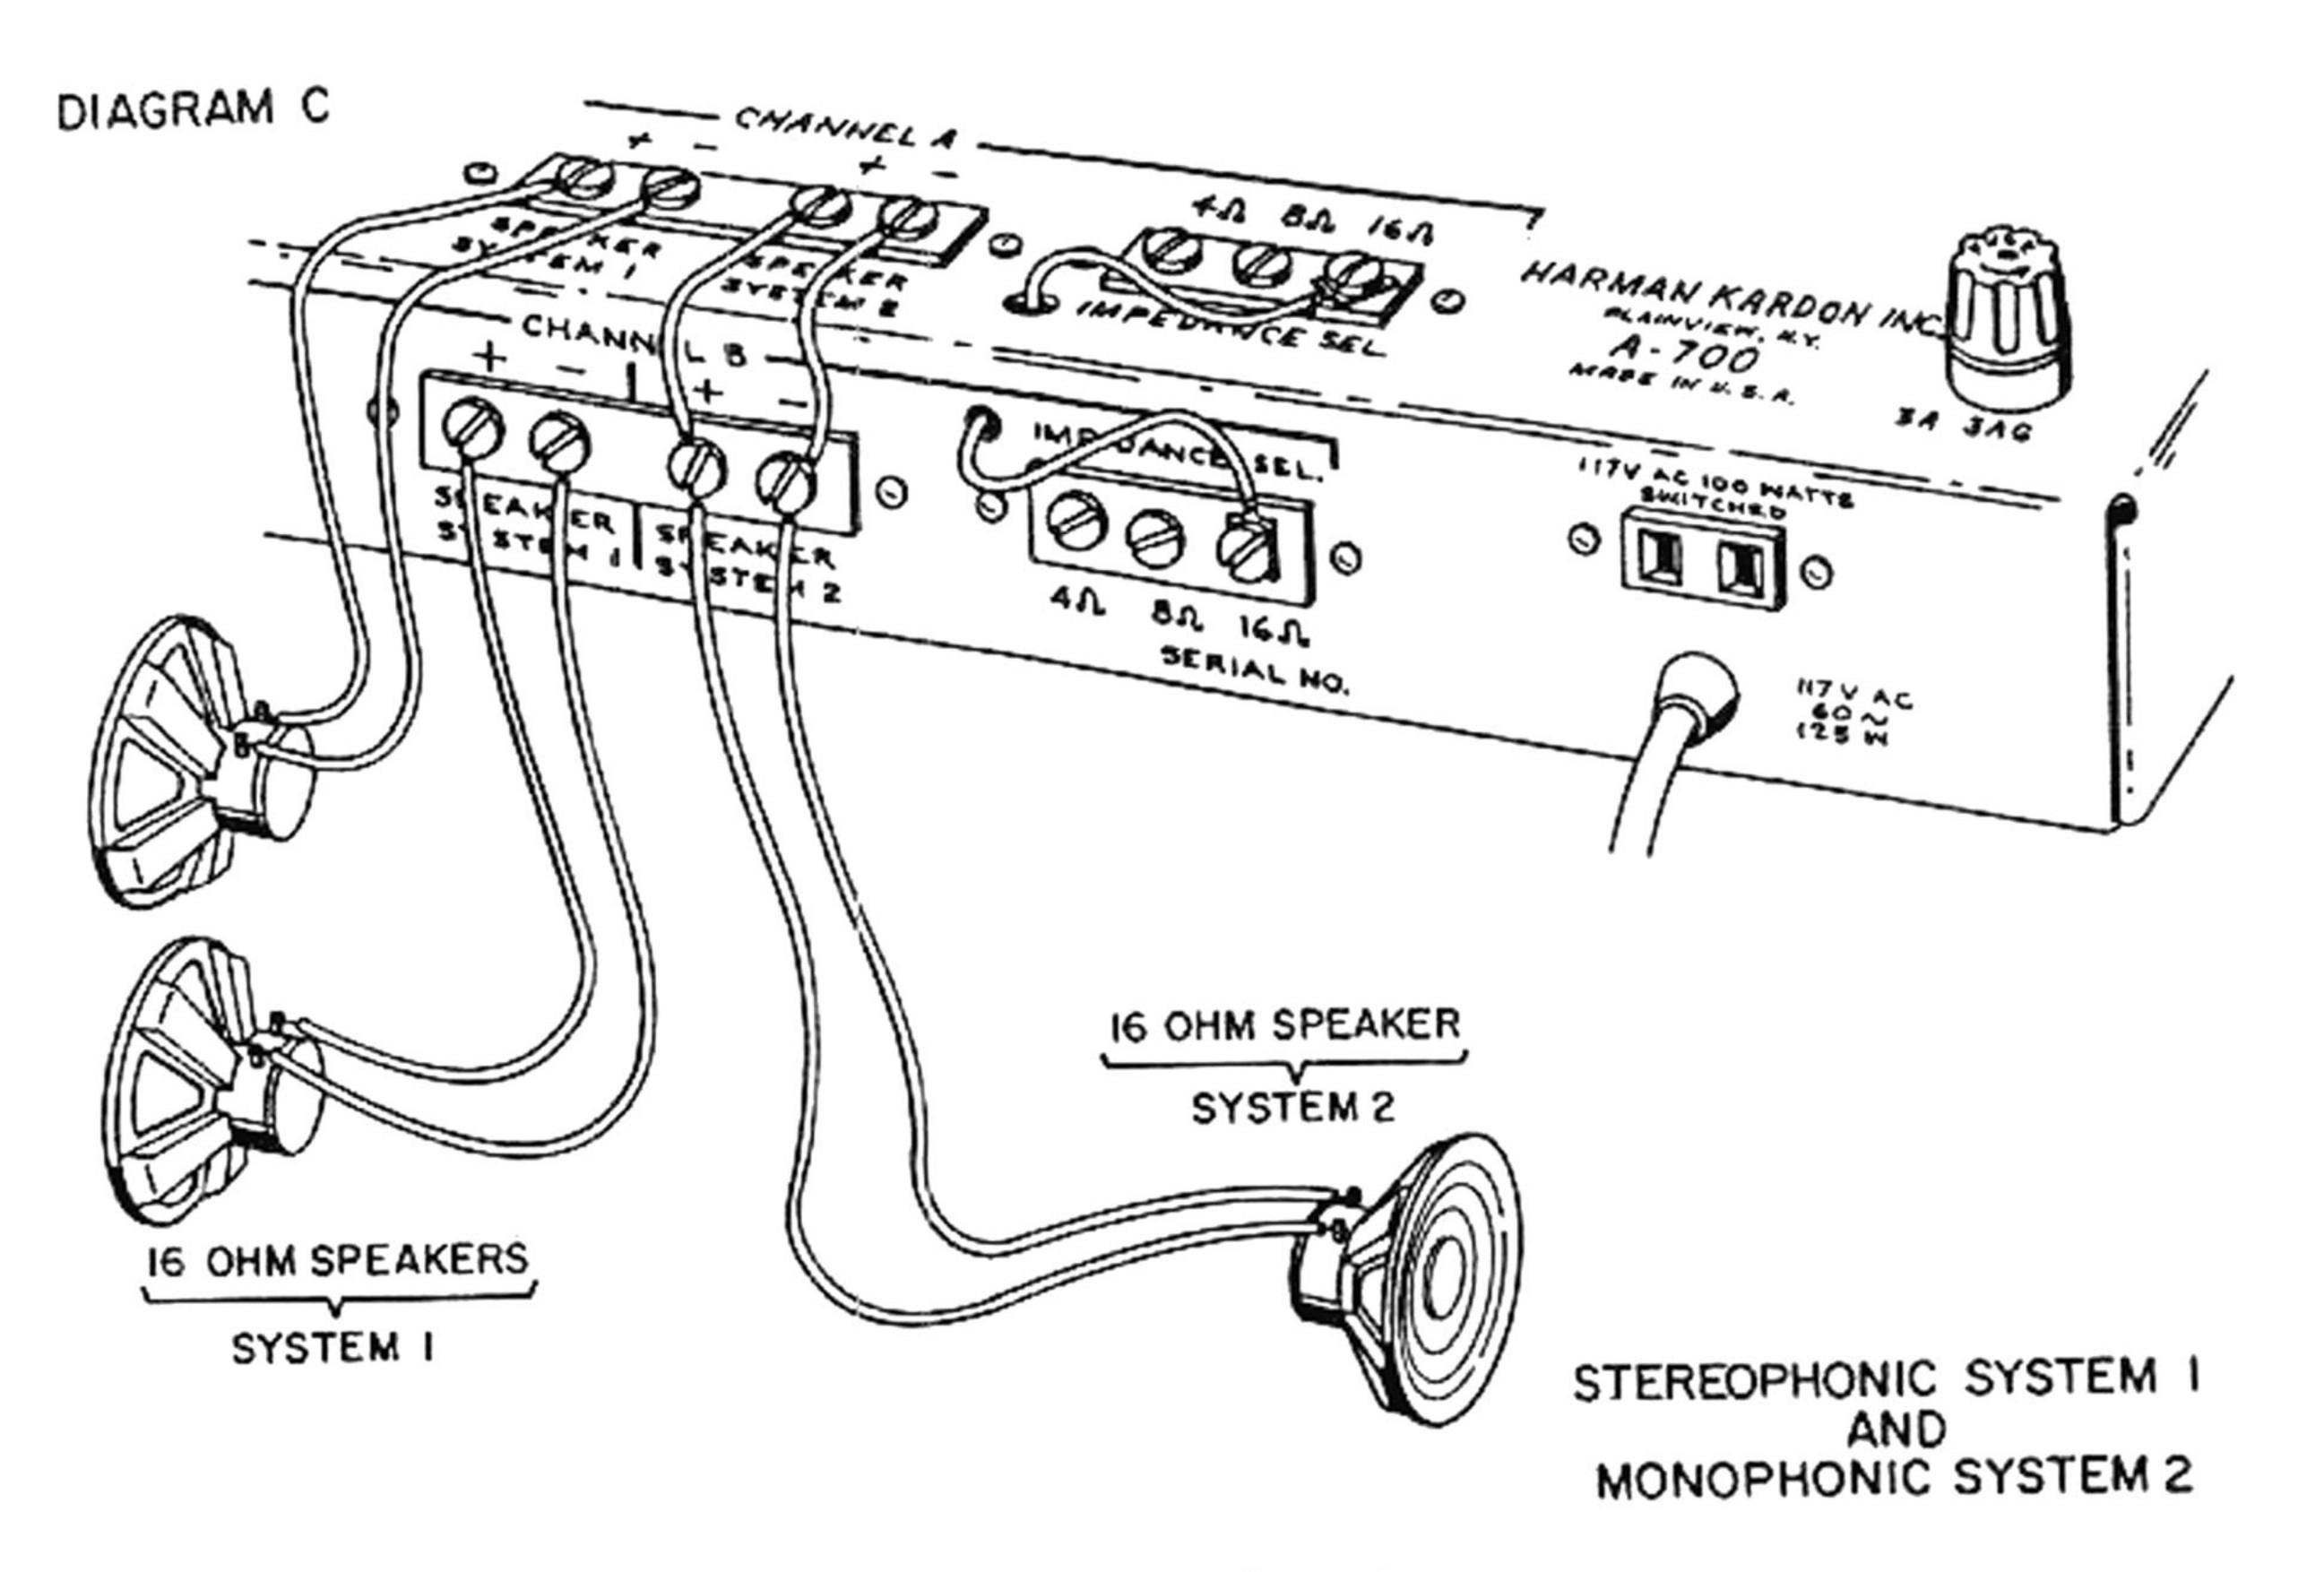

Stereophonic Speaker Connection (System 1) and Monophonic Speaker Connection (System 2):

Should you desire to operate your model A700 as a stereophonic amplifier in one room and as a monophonic amplifier in another room, connect your speakers as described in Diagram C. The IMPEDANCE SELECTOR leads should then be connected as previously described.

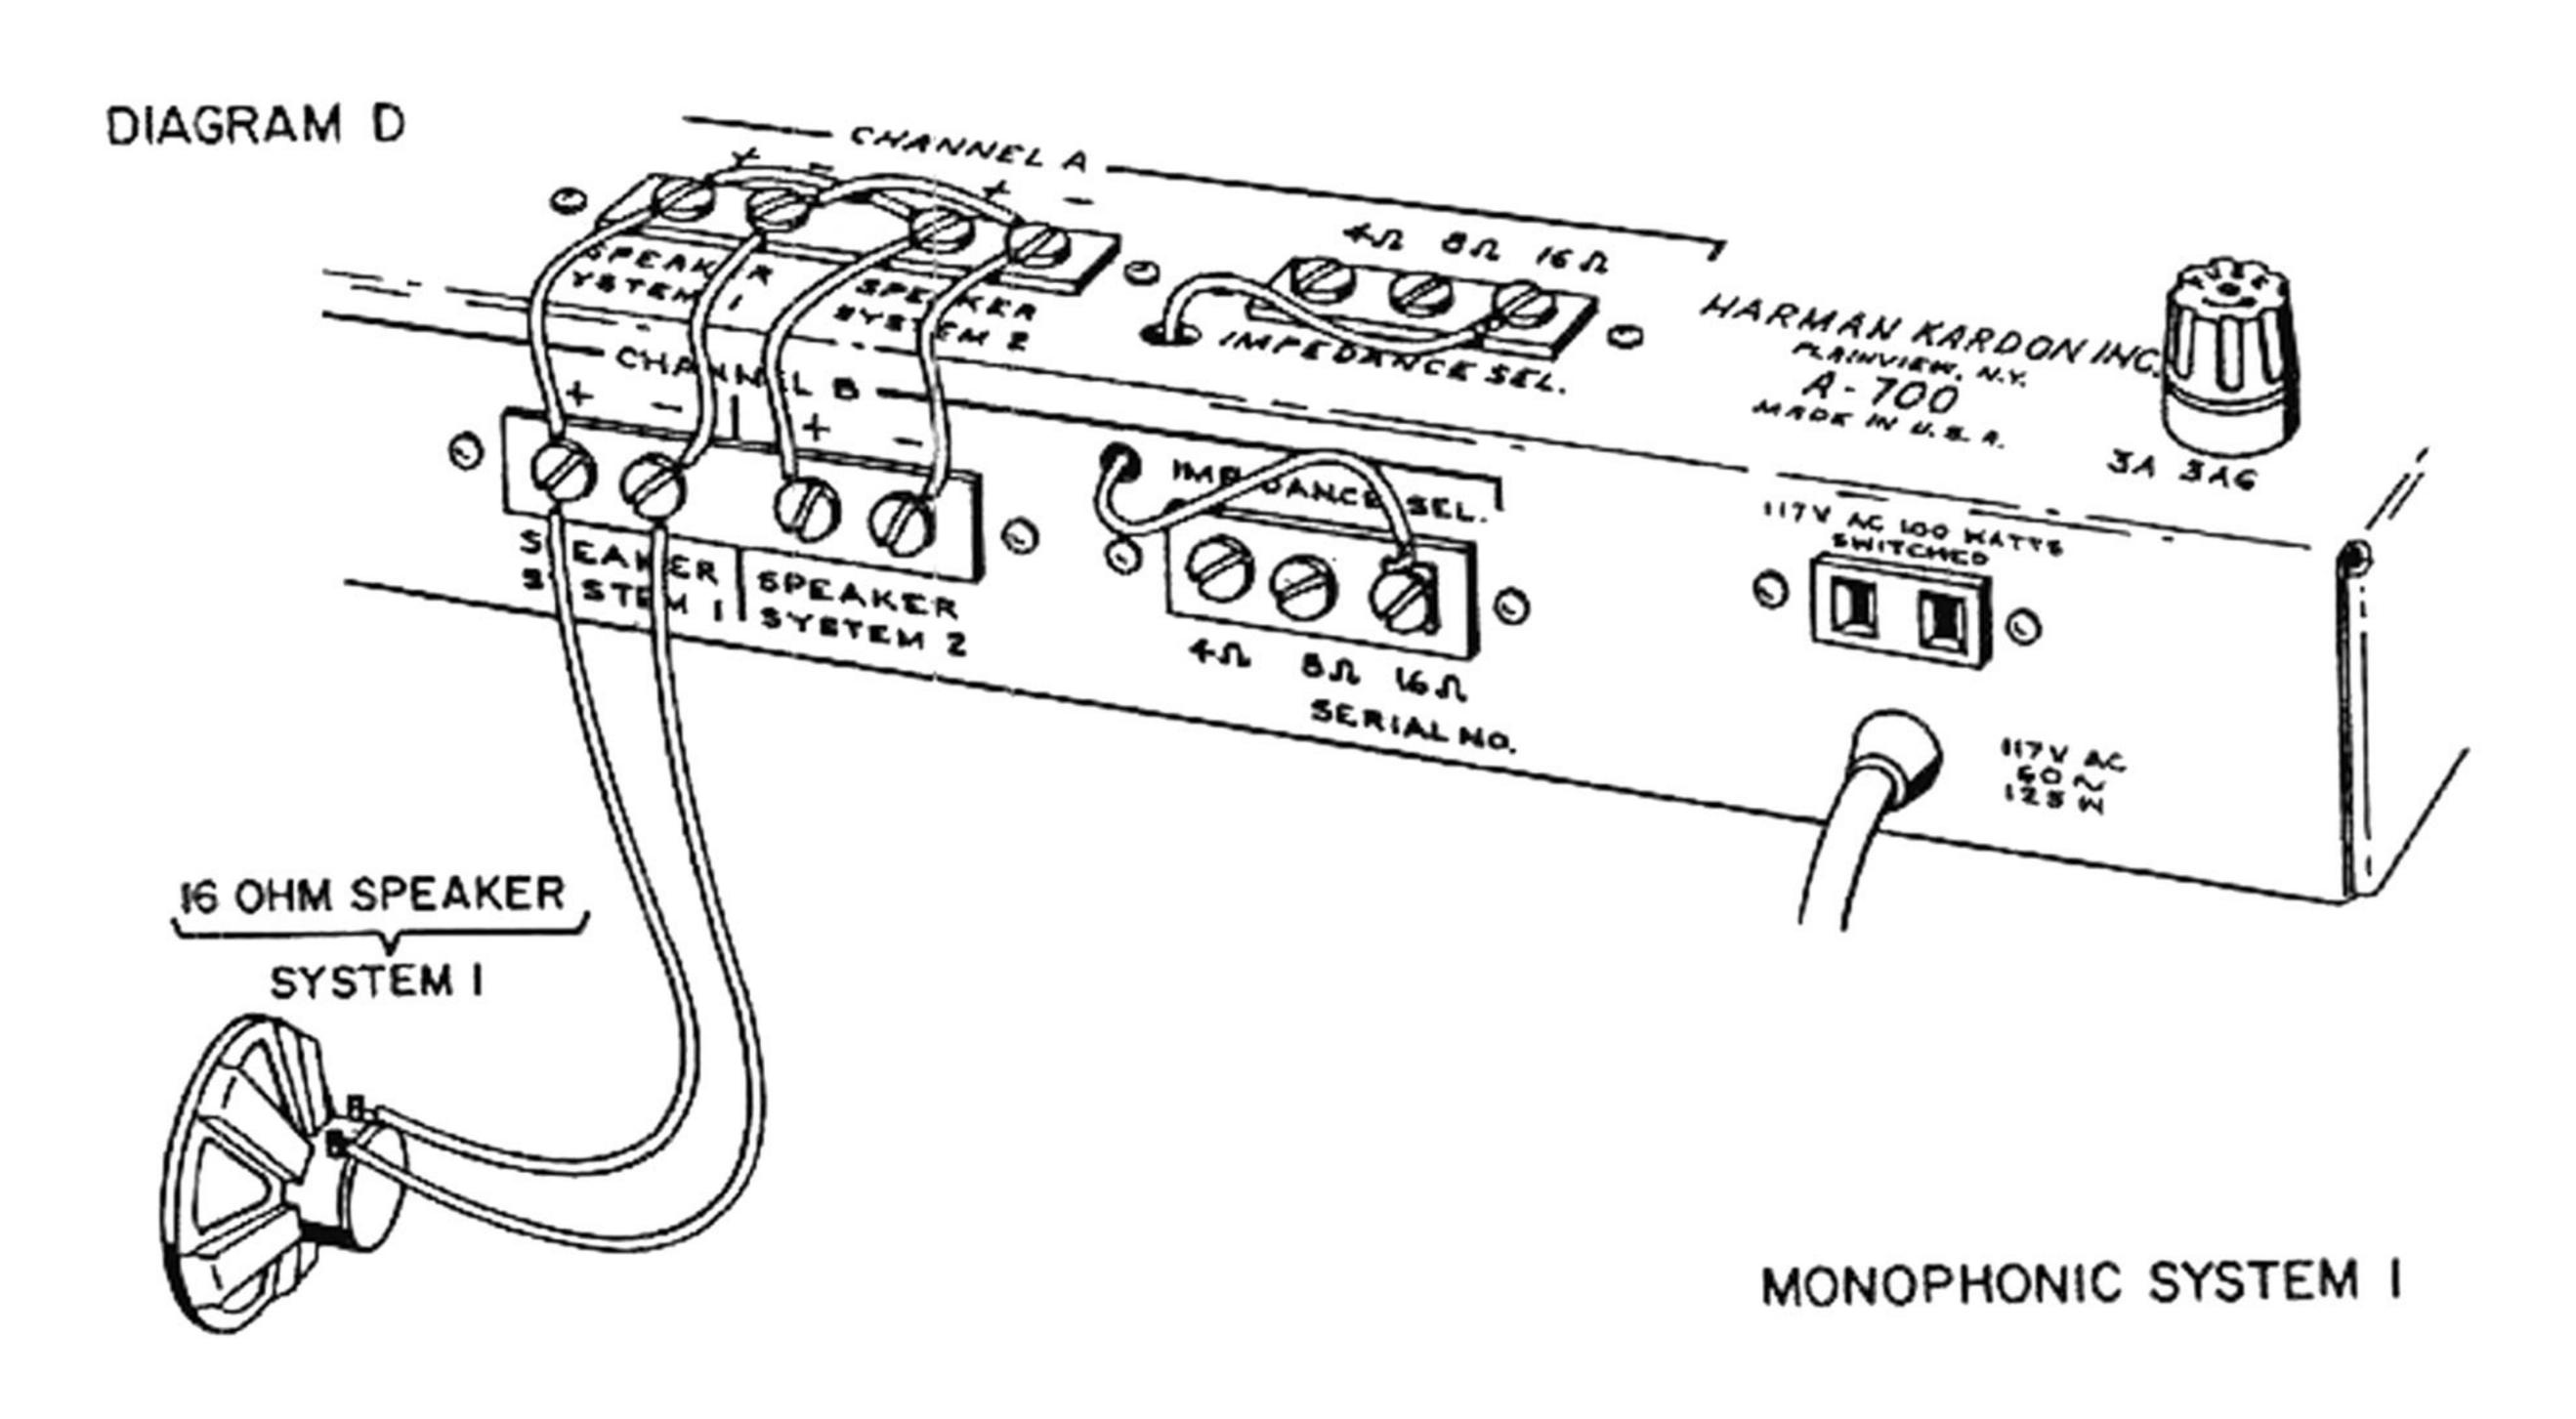

Monophonic Speaker Connection:

When the A700 is used for monophonic operation and stereo is to be added at a later date, it is essential that all four speaker output terminals are terminated. For example, if you have only one speaker and you wish to operate monophonically in one room only connect this speaker to both Channel A and Channel B System 1 terminals as described in Diagram D. Then parallel Channel A System 2 to Channel B System 2 and also parallel Channel A System 2 to Channel A System 1 as described in Diagram D. This will again defeat the operation of the speaker selector switch. Should you wish to connect one speaker on each system for monophonic operation disregard the connection between Channel A System 2 and Channel A System 1 and connect a 2nd monophonic speaker to the Channel B System 2 terminals.

Stereo Headphone Output Jack:

A unique feature of the A700 is a special jack located on the front panel for plugging in a set of stereo headphones. This jack will accept headphones with the same impedances as are available for speakers. Simply connect the speaker IMPEDANCE SELECTOR wires to the 4, 8 or 16 ohm terminals in accordance with the impedance rating of your phones.

The headphone plug required for this jack is the Switchcraft 230F, or equivalent. It is important to use the correct plug for proper operation.

Connecting Your Stereo Record Player:

A stereophonic cartridge uses two output plugs. Provision has been made on the A700 to accommodate any of the three types of phono pickups available.

MAGNETIC CARTRIDGE: Connect the two output leads of your stereo magnetic cartridge to the Channel A and B PHONO LO input receptacles on the rear of the amplifier.

<u>CERAMIC CARTRIDGE</u>: Connect the two output leads of your stereo ceramic cartridge to the Channel A and B PHONO HI input receptacles on the rear of the amplifier. There are several stereo ceramic cartridges available which offer low output and are to be plugged into the PHONO LO input receptacles instead of the usual PHONO HI receptacles. Follow your cartridge manufacturer's recommendations.


<u>CRYSTAL CARTRIDGE</u>: Connect the two output leads of your stereo crystal cartridge to the Channel A and B PHONO HI input receptacles on the rear of the amplifier.

Connecting A Monophonic Record Player:

Since a monophonic cartridge uses only one connecting lead, it may be connected to either the Channel A or B input receptacle. If your cartridge is a magnetic type, connect it to the PHONO LO input. If it is a ceramic or crystal type, connect it to the PHONO HI input.

Connecting Your Stereo Tape Deck:

A stereophonic tape playback deck utilizes two playback heads usually contained within one head assembly. Each head has its own output plug. Connect both plugs from your deck to the Channel A and B TAPE HD input receptacles. These are extremely sensitive receptacles and offer 2.5 mv gain.

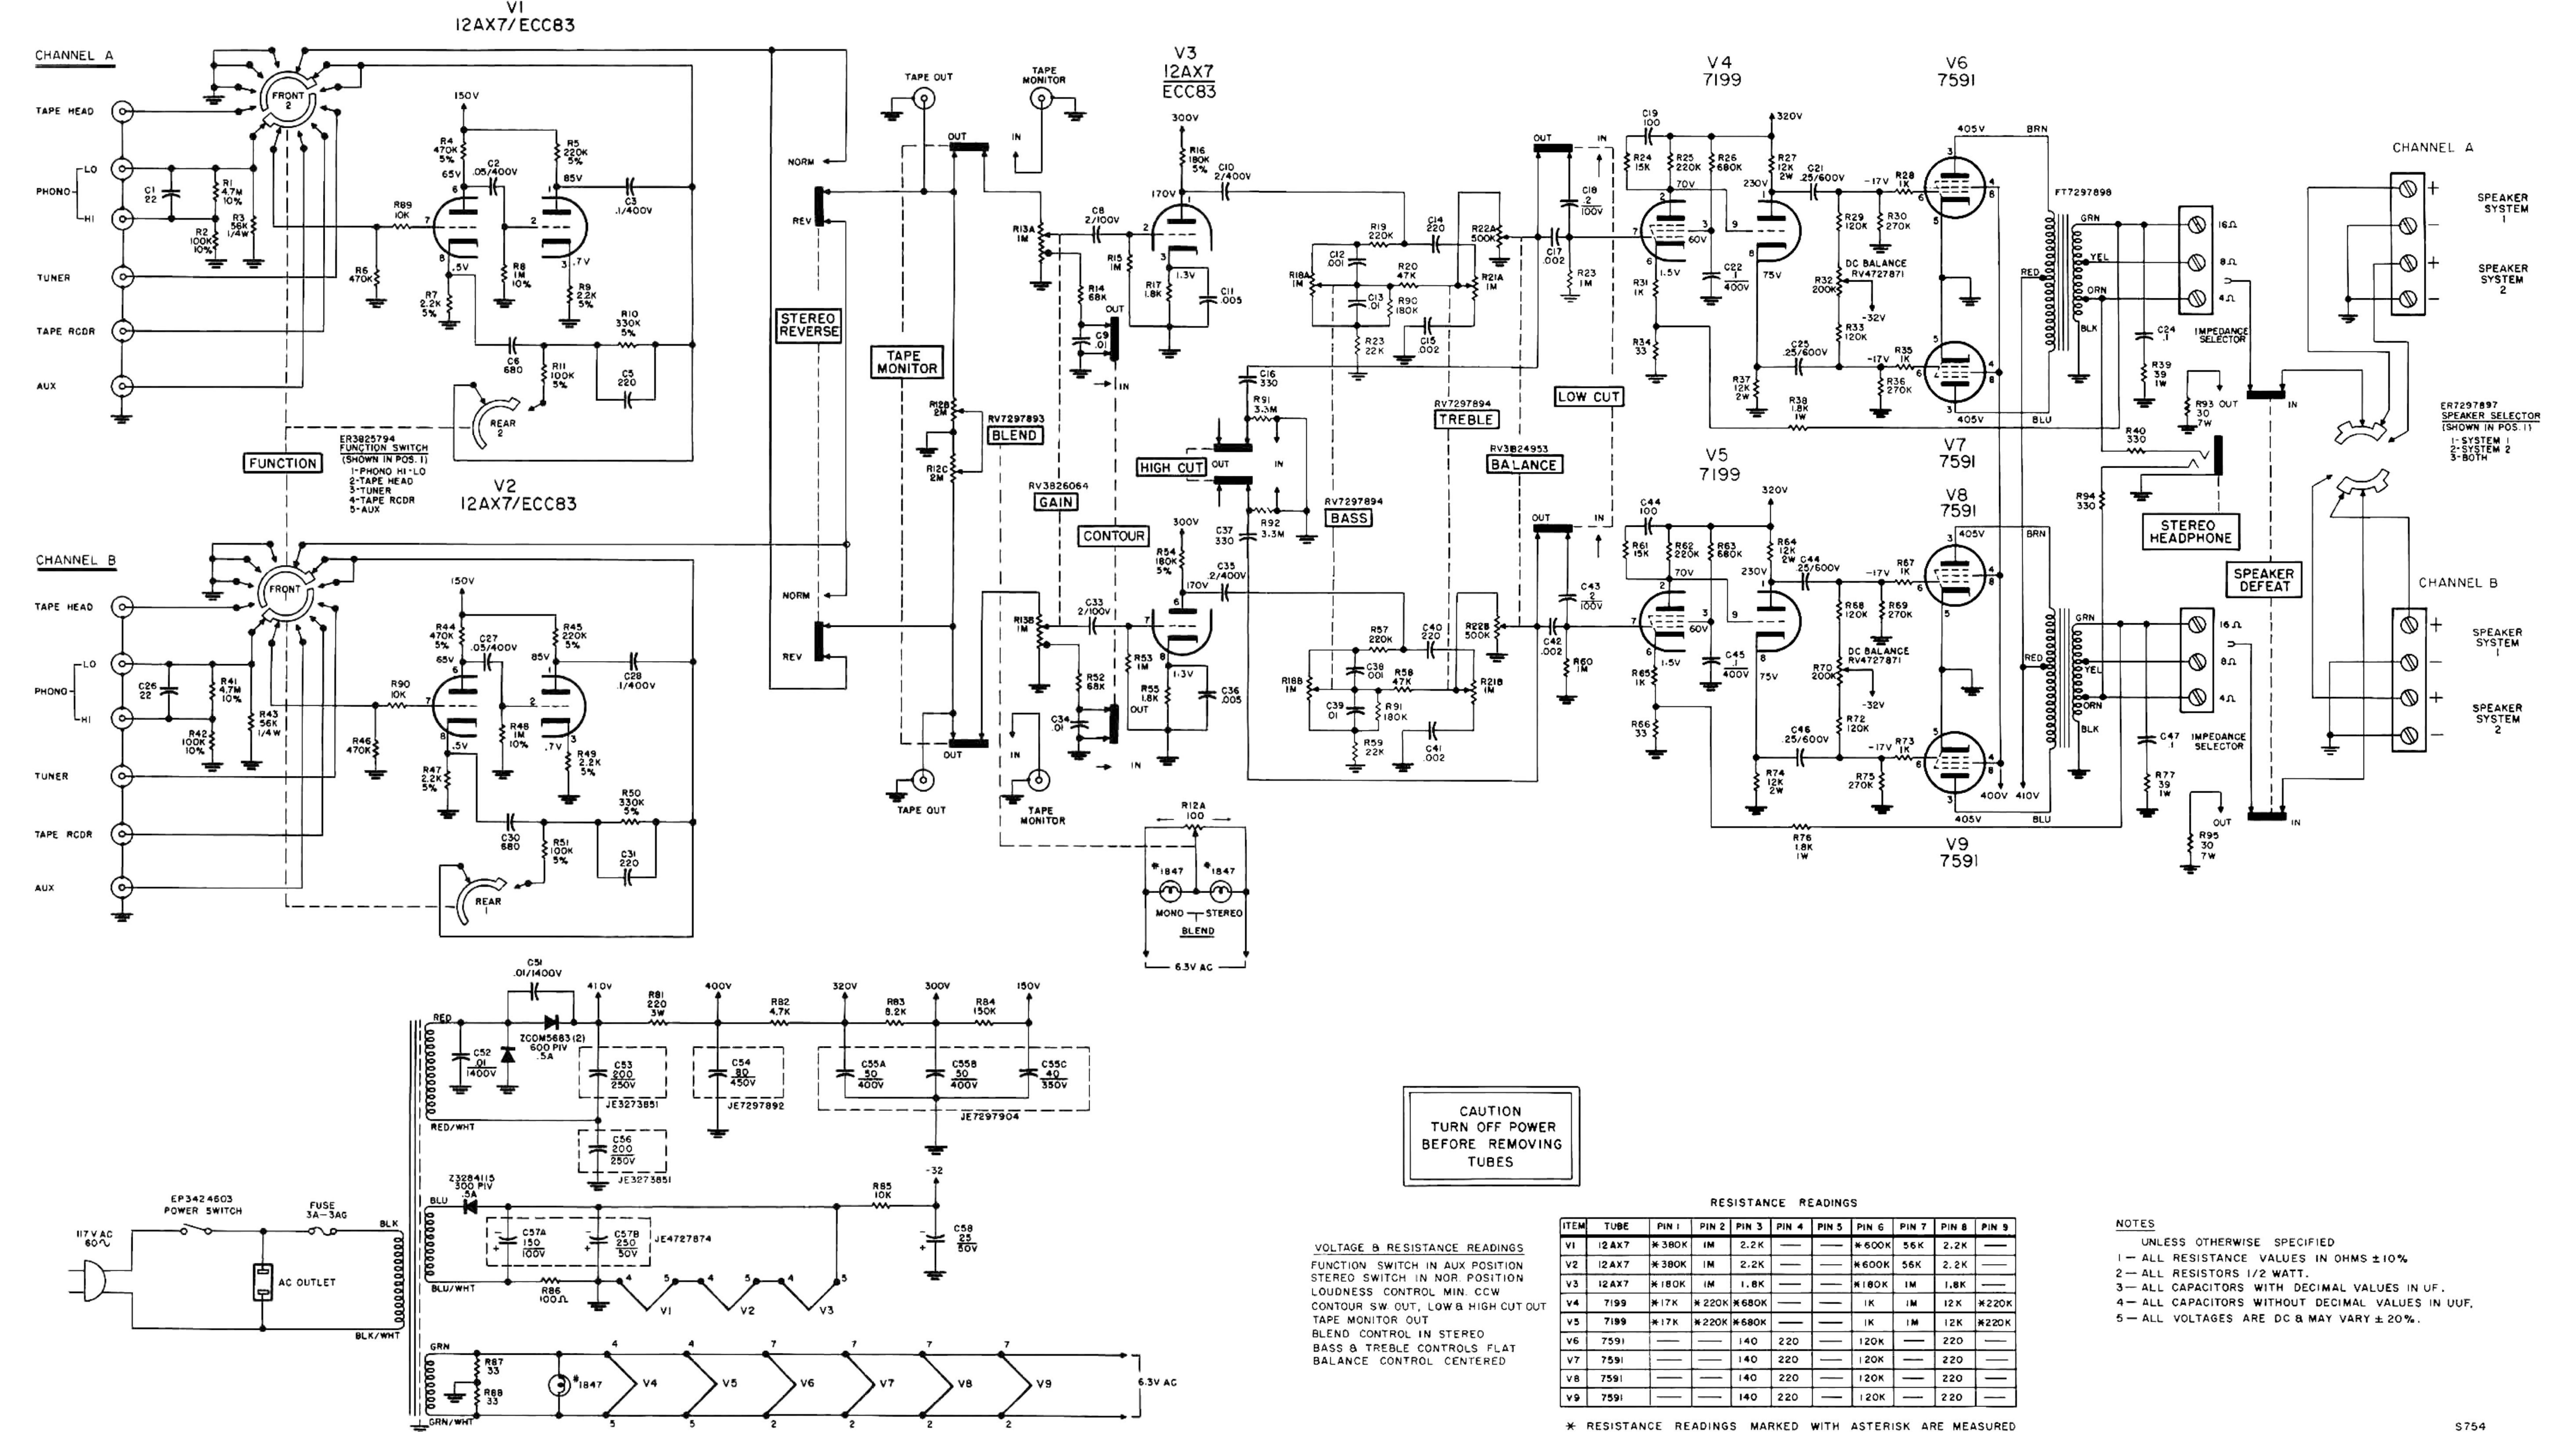

FROM THE JUNCTION OF R81 8 C53.

S754 S768 S7297955B

Connecting Your Monophonic Tape Deck:

A monophonic tape deck has only one shielded lead coming from the single tape playback head. Attach this lead to either the Channel A or B TAPE HD input receptacle.

Connecting Your Stereophonic Tape Recorder:

Since most stereo tape recorders have their own recording and playback preamplifiers, it is not desirable to connect the output of the recorder into the low level TAPE HD input receptacles. This could result in overloading of the input stage and cause distortion.

Connect one tape recorder output lead to the Channel A TAPE AMP input and the other output lead to the Channel B TAPE AMP input receptacle.

These connections will enable you to play back your stereo tapes. To make a stereo recording connect your recorder as follows: Connect one input of your tape recorder to the Channel A TAPE OUT receptacle. Similarly connect the other input of your tape recorder to the Channel B TAPE OUT receptacle. This will enable you to make a stereophonic recording with the proper recording equalization as determined by your recorder, while simultaneously monitoring the program with the proper tone control, contour and loudness setting. The program material you wish to record is selected by the FUNCTION SELECTOR switch on the front panel.

The recording signal from the TAPE OUT receptacles is one half volt and is unaffected by the loudness controls to assure a "flat" recording signal.

Connecting Your Monophonic Tape Recorder:

If you are using a monophonic tape recorder with the A700, connect the recorder output to either the Channel A or B TAPE AMP input receptacle. This will enable you to play back your monophonic tapes.

If your tape recorder is a stereo playback-monophonic record, connect the output as described in the previous paragraph, but connect the input as described below.

Connect the input of your monophonic tape recorder to either the Channel A or B TAPE OUT receptacle on the rear of the amplifier chassis. This will enable you to make a monophonic recording with the proper equalization as determined by your recorder.

To Monitor Your Tapes While Recording:

Connect the monitoring head of your tape recorder to the TAPE MON receptacles on the rear of the amplifier chassis. Connect in accordance with the instructions supplied by the recorder manufacturer.

OPERATING THE A700 STEREOPHONIC AMPLIFIER

Since a stereophonic amplifier is actually two separate amplifiers in one, the number of operating controls would normally be doubled. This would make operation unnecessarily cumbersome. For convenience several of the duplicate controls are mechanically tied together, or ganged, to be operated by one knob.

Individual Bass and Treble Tone Controls:

The BASS and TREBLE tone controls on the A700 provide the full range of tone adjustment necessary for stereo listening. The tone control range is

considerable and can adjust the low and high frequencies in accordance with your listening preference, speaker characteristics and room acoustics. The controls are flat when placed in the vertical position.

Gain Control:

The GAIN CONTROL is a mechanically ganged control and controls both channels simultaneously. It adjusts the volume level of any program material fed into the A700 amplifier. Its effect can be modified by the CONTOUR switch.

Contour Switch:

One of the limitations of human hearing is its tendency to lose sensitivity to the very low pitched sounds, as the program sound level is reduced. It is this characteristic (known as the Fletcher-Munson effect) which causes one to play music programs at high listening level in order to experience the full rich tone available from fine modern recordings. The Harman-Kardon CONTOUR switch compensates for the Fletcher-Munson effect thus eliminating high listening levels as a requisite for full enjoyment of reproduced music.

For low level listening throw the CONTOUR switch to the "IN" position. You will note that the low frequencies become more apparent while the volume

level remains unchanged.

Balance Control:

The nature of stereo reproduction is such that it requires two identical channels to attain the highest degree of faithfulness and spatial distribution. Any variation in the efficiency of one channel as compared to the other will disturb this relationship. Since there may be slight differences between the two speakers, tape heads, etc., the A700 includes a control to balance one channel against the other. Sufficient range is covered by this control to permit rebalancing of the overall system even in cases where major unbalance exists. THIS CONTROL MAY BE SET ANYWHERE WITHIN ITS RANGE TO ATTAIN SYSTEM BALANCE AND DOES NOT HAVE TO BE IN THE EXACT VERTICAL POSITION TO INSURE PROPER BALANCE.

When the BALANCE control is properly set, the apparent sound source will lie in a broad area between the two speakers. When the BALANCE control is rotated to the right, the sound will move to the right and when the control is rotated to the left, the sound will move to the left.

On/Off Switch:

The push-button ON/OFF switch is located on the front panel of the A700. To turn the amplifier on, depress the switch. The switch will glow indicating the amplifier is receiving current and is operative. To turn the amplifier off, depress the switch and the light will go out.

There is a great advantage to this type of ON/OFF switch since the amplifier may be turned on and off without upsetting the other controls.

Function Switch:

The FUNCTION SWITCH selects the desired program source and has FIVE positions. PHONO selects either the LO or HI PHONO source depending upon which one is used. TAPE HD selects your tape deck and includes NARTB equalization. The TUNER position selects your tuner for operation. TAPE RCDR selects your tape recorder and AUX selects any high impedance device connected to the AUX receptacles on the rear panel.

Stereo Reverse:

At this writing, all newly recorded stereo discs follow the established industry standard, so that your left speaker will reproduce the program picked up by the left recording microphone and the right speaker reproduces the program picked up by the right recording microphone when the STEREO REV switch is in the NORMAL position. However, this was not so for older stereo recordings. While one label may present the orchestra with the basses on the right and the violins on the left, another recording company may reverse this procedure. Some of us prefer to listen to an orchestra in the same relative orientation as in the concert hall. The STEREO REV switch serves to reverse the apparent locations of instruments in an orchestra to duplicate the original setting where necessary.

For those who do not have matched speakers for stereo reproduction, the REVERSE position on the STEREO REVERSE switch serves an additional function. In "Ping-Pong" stereo recordings, the bass is sometimes favored on one side, while the higher string instruments may appear on the other channel. By experimenting with the STEREO REVERSE switch it is possible to channel the low frequencies through the speaker system having the best bass response. Merely throw the switch back and forth until the low frequencies are reproduced by the speaker with the better low frequency response.

High and Low Cut Switches:

At times record changers, turntables and even some FM stations produce an objectional low frequency signal that is strong enough to be introduced into the playback system. Known as "rumble" this undesirable signal can be eliminated by the special LOW CUT switch on the front panel of the A700. If rumble is present, throw the switch to "IN".

In the event of an objectionable high frequency scratch from worn or defective records and tapes, throw the HIGH CUT switch located on the front panel to "IN."

Speaker Selector Switch:

This switch allows the use of any combination of speakers in your installation. In the SYSTEM 1 position it selects what ever may be connected to the SYSTEM 1 terminals on the rear of your amplifier. In the SYSTEM 2 position it selects what ever may be connected to the SYSTEM 2 terminals on your amplifier. In the BOTH position it selects both the SYSTEM 1 and SYSTEM 2 terminals.

Speaker (In-Out) Switch:

This switch is provided should you wish to completely disable your speakers while you are listening to your amplifier with Stereo Headphones.

Tape Monitor Switch:

If your tape recorder has a special monitoring head, throwing this switch to the "IN" position will enable you to listen to your tapes a second after they are recorded. When not in use this switch must be in the "OUT" position.

Blend Control:

The BLEND CONTROL on the A700 amplifier operates in conjunction with the front panel indicator lamps and serves two functions. It selects between monophonic and stereophonic operation when rotated to the extreme clockwise and counterclockwise positions and also controls the amount of crosstalk between Channel A and B to fill in the hole in the middle between the two speakers if it is present.

To operate the amplifier monophonically, turn the BLEND CONTROL to the extreme clockwise position. You will note that the monophonic indicator lamp now glows brightly while the stereophonic lamp is turned off completely.

To operate the amplifier stereophonically, turn the BLEND CONTROL to the extreme counterclockwise position. The stereo indicator lamp will now glow brightly and the monophonic lamp will be turned off completely.

If center fill is required due to speaker placement, room acoustics or to the type of recording you are using, rotating the BLEND CONTROL from stereophonic toward monophonic (clockwise) introduces blend. The degree of rotation determines the amount of blend and as this control approaches the extreme clockwise position, maximum blend is attained (monophonic).

It is important to point out that in certain instances, proper blending will occur when the two lamps are NOT exactly the same intensity. Allowances must be made for room acoustics, speaker efficiency and type of program material and it is therefore virtually impossible to expect every source of program material to blend at the same rotation of the control. The indicator lamps merely act as guides to help locate a setting of the BLEND CONTROL and to indicate the degree of blend.

ADJUSTMENTS

Output Tube Balance Controls:

There are two OUTPUT TUBE BALANCE CONTROLS located between the 7591 output tubes. They are easily accessible from the top of the chassis when the cage or cabinet is removed.

These controls are factory adjusted and should not be touched. Normal changing of output tubes does not require these controls to be adjusted.

When adjustment is made it should be done by a competent service technician who will adjust the controls with an intermodulation distortion analyzer for minimum IM.

Phasing Your Speakers:

When more than one speaker is used in any music reproducing system they must be connected in a manner as to aid each other, rather than to work against one another. Since it is necessary to use two speakers for stereophonic reproduction, this caution applies. Checking for phase and correcting if necessary is quite simple.

Place the BLEND CONTROL in the Monophonic position. Play a monophonic record with readily apparent bass and listen carefully to the strength and clarity of the bass tones while reversing both wires of one of your speakers. Select the position which gives maximum bass reproduction.

Improper phasing will decrease low frequency response and can also create what is commonly referred to as the "hole-in-the-middle" effect. At times improper phasing will actually shift or eliminate certain instruments from their true perspective in the orchestra.

MAINTENANCE AND REPAIRS

Fuse:

The Model A700 is protected by a 3 ampere- 3 AG fuse located on the top rear of the chassis. If this fuse is blown, replace only with one of the same rating.

Replacing with a fuse of a higher rating will not protect the amplifier and may result in severe damage, which will not be covered by a factory guarantee.

Repair:

Only the most qualified service technician should be employed, as special equipment and training is required to service a high fidelity unit.

In the event of failure during the warranty period, refer to the section in this manual entitled WARRANTY.

Hum:

There has been some difficulty encountered when connecting a stereo record player to an amplifier. The conventional form of hookup usually results in one or more ground loops causing excessive hum. The following procedure will reduce hum pickup to a minimum.

A stereophonic record player may be subdivided into three electrically separate systems. These are: 1. The left pickup coil of the stereo cartridge, 2. The right pickup coil and 3. The turntable chassis in combination with the tone arm and motor.

The left pickup coil of the stereo cartridge has two output terminals. These terminals should be brought through a coaxial, shielded and insulated cable to the respective input receptable on the stereo amplifier. Extreme caution must be exercised to make sure that the ground side of the shielded cable does not make contact with either the turntable chassis or the other pickup coil.

The right pickup coil should be brought to its respective amplifier input receptacle in a similar manner, again making sure it is completely isolated electrically from the left pickup coil and the turntable chassis. It may be advantageous to twist the two shielded cables to prevent hum pickup from a radiation source as a power transformer or turntable motor.

The turntable chassis is ordinarily connected through a flexible lead with the motor shell. However, the tone arm is usually NOT electrically connected to the turntable chassis other than through its bearings. Since this is an unreliable connection, it is suggested that a small hole be drilled into the tone arm (near the bearing) and a solder lug fastened with a sheet metal screw be driven into the hole. A flexible wire forming a loop should be connected from tone arm to the turntable chassis. If this does not appear practical, a second and less satisfactory method may be suggested. The lubricant should be removed from the tone arm bearings and replaced by graphite. After the turntable motor and tone arm have been electrically secured to the turntable chassis, a cable should be connected from the chassis to the amplifier ground.

This method applies to cartridges with four output terminals and in this manner the three systems are isolated from each other and all are returned to their proper ground. This will avoid hum caused by ground loops.

In cases of magnetic pickups carrying only three output terminals, and tone arms which are supplied with three-prong plugs, the following modifications of the procedure will have to be effected.

If the pickup is of the four terminal type, but is used in conjunction with a three-prong tone arm head, the two ground outputs of the pickup coils must be tied together.

The left pickup coil is then connected to a shielded lead with the ground side of the coil connected to the shield leading to the appropriate receptacle on the amplifier in the same manner as outlined in the above procedure. The "hot" output of the right pickup coil will be connected with another insulated

shielded lead to its receptacle on the amplifier. However, the shield is to be grounded ONLY at the amplifier end, and left floating at the record player end. The record player chassis is treated in the identical manner as described


in the previous paragraphs.


In any high fidelity system hum and noise may also be caused by other factors. A common cause of hum may be the interconnection of a record player, tuner and amplifier, as a result of the cables and different ground potentials. If hum is experienced and it cannot be traced to improper grounding of the phono cartridge or turntable, disconnect everything but the speaker from the A700. If hum persists, reverse the AC line cord in the socket. Plug in the record player and if hum appears, reverse the record player AC line cord. Connect your other devices in a similar manner. CAUTION: Hum may be also induced by defective interconnecting cables or by running these cables too close to strong AC fields.

MODEL A700 REPLACEMENT PARTS LIST


PART NO.	DESCRIPTION	PRICE
ESCOM3652	Slide Switch, Gray	.50
HJCOM7890	Stereo Headphoné Jack	.70
FT7297891	Power Transformer	17.75
FT7297898	Output Transformer	13.45
JE4727874	150 UF/100V 200 UF/50V	2.25
JE3273851	Electrolytic Capacitor w/sleeve	2.95
	200 UF/250V	
JE7297892	Electrolytic Capacitor 80 UF/450V	2.75
JE7297904	Electrolytic Capacitor 50-50/400V 40 UF/350	V 3.00
RV4727871	Balance Adjustment	.80
ER3825794	Function Switch	3.50
EP3424603	AC On-Off Power Switch	.70
RV3826064	Gain Control	2.75
RV7297893	Blend Control	4.50
RV3824953	Balance Control	1.75
RV7297894	Tone Control, Single Bass or Treble	1.00
ER7297897	Speaker Selector Switch	1.50
KB1142117	Pilot Lamp, Type No. 1847	.25
ZCOM5683	Silicon Diode, 600V PIV	2.25
B7297896	Escutcheon	6.65
P3825094	Jewel, On-Off Pilot Lamp	.25
P3824999	Jewel, Mono or Stereo Pilot Lamp	.25
PCOM3584	Spring, Power Switch	.10
P3824983	Knob 11/8" (4 used)	1.25
P3824984	Knob, 29/32" (4 used)	1.25
P3825004	Knob, 11%, with Indicator Mark (1 used)	1.25
L7297957	This Instruction Book, Additional Copies	1.00


NOTE: To speed handling of your order be sure to include both the model and serial numbers which appear at the back of the chassis, in addition to the quantity, part number and part description of the items ordered. Orders from independent dealers, independent servicemen, and retail customers will be shipped on a C.O.D. basis except for orders \$1.00 or less, for which remittance should be enclosed. Prices subject to change without notice. Harman-Kardon reserves the right to substitute equivalent parts for those originally installed in this chassis.

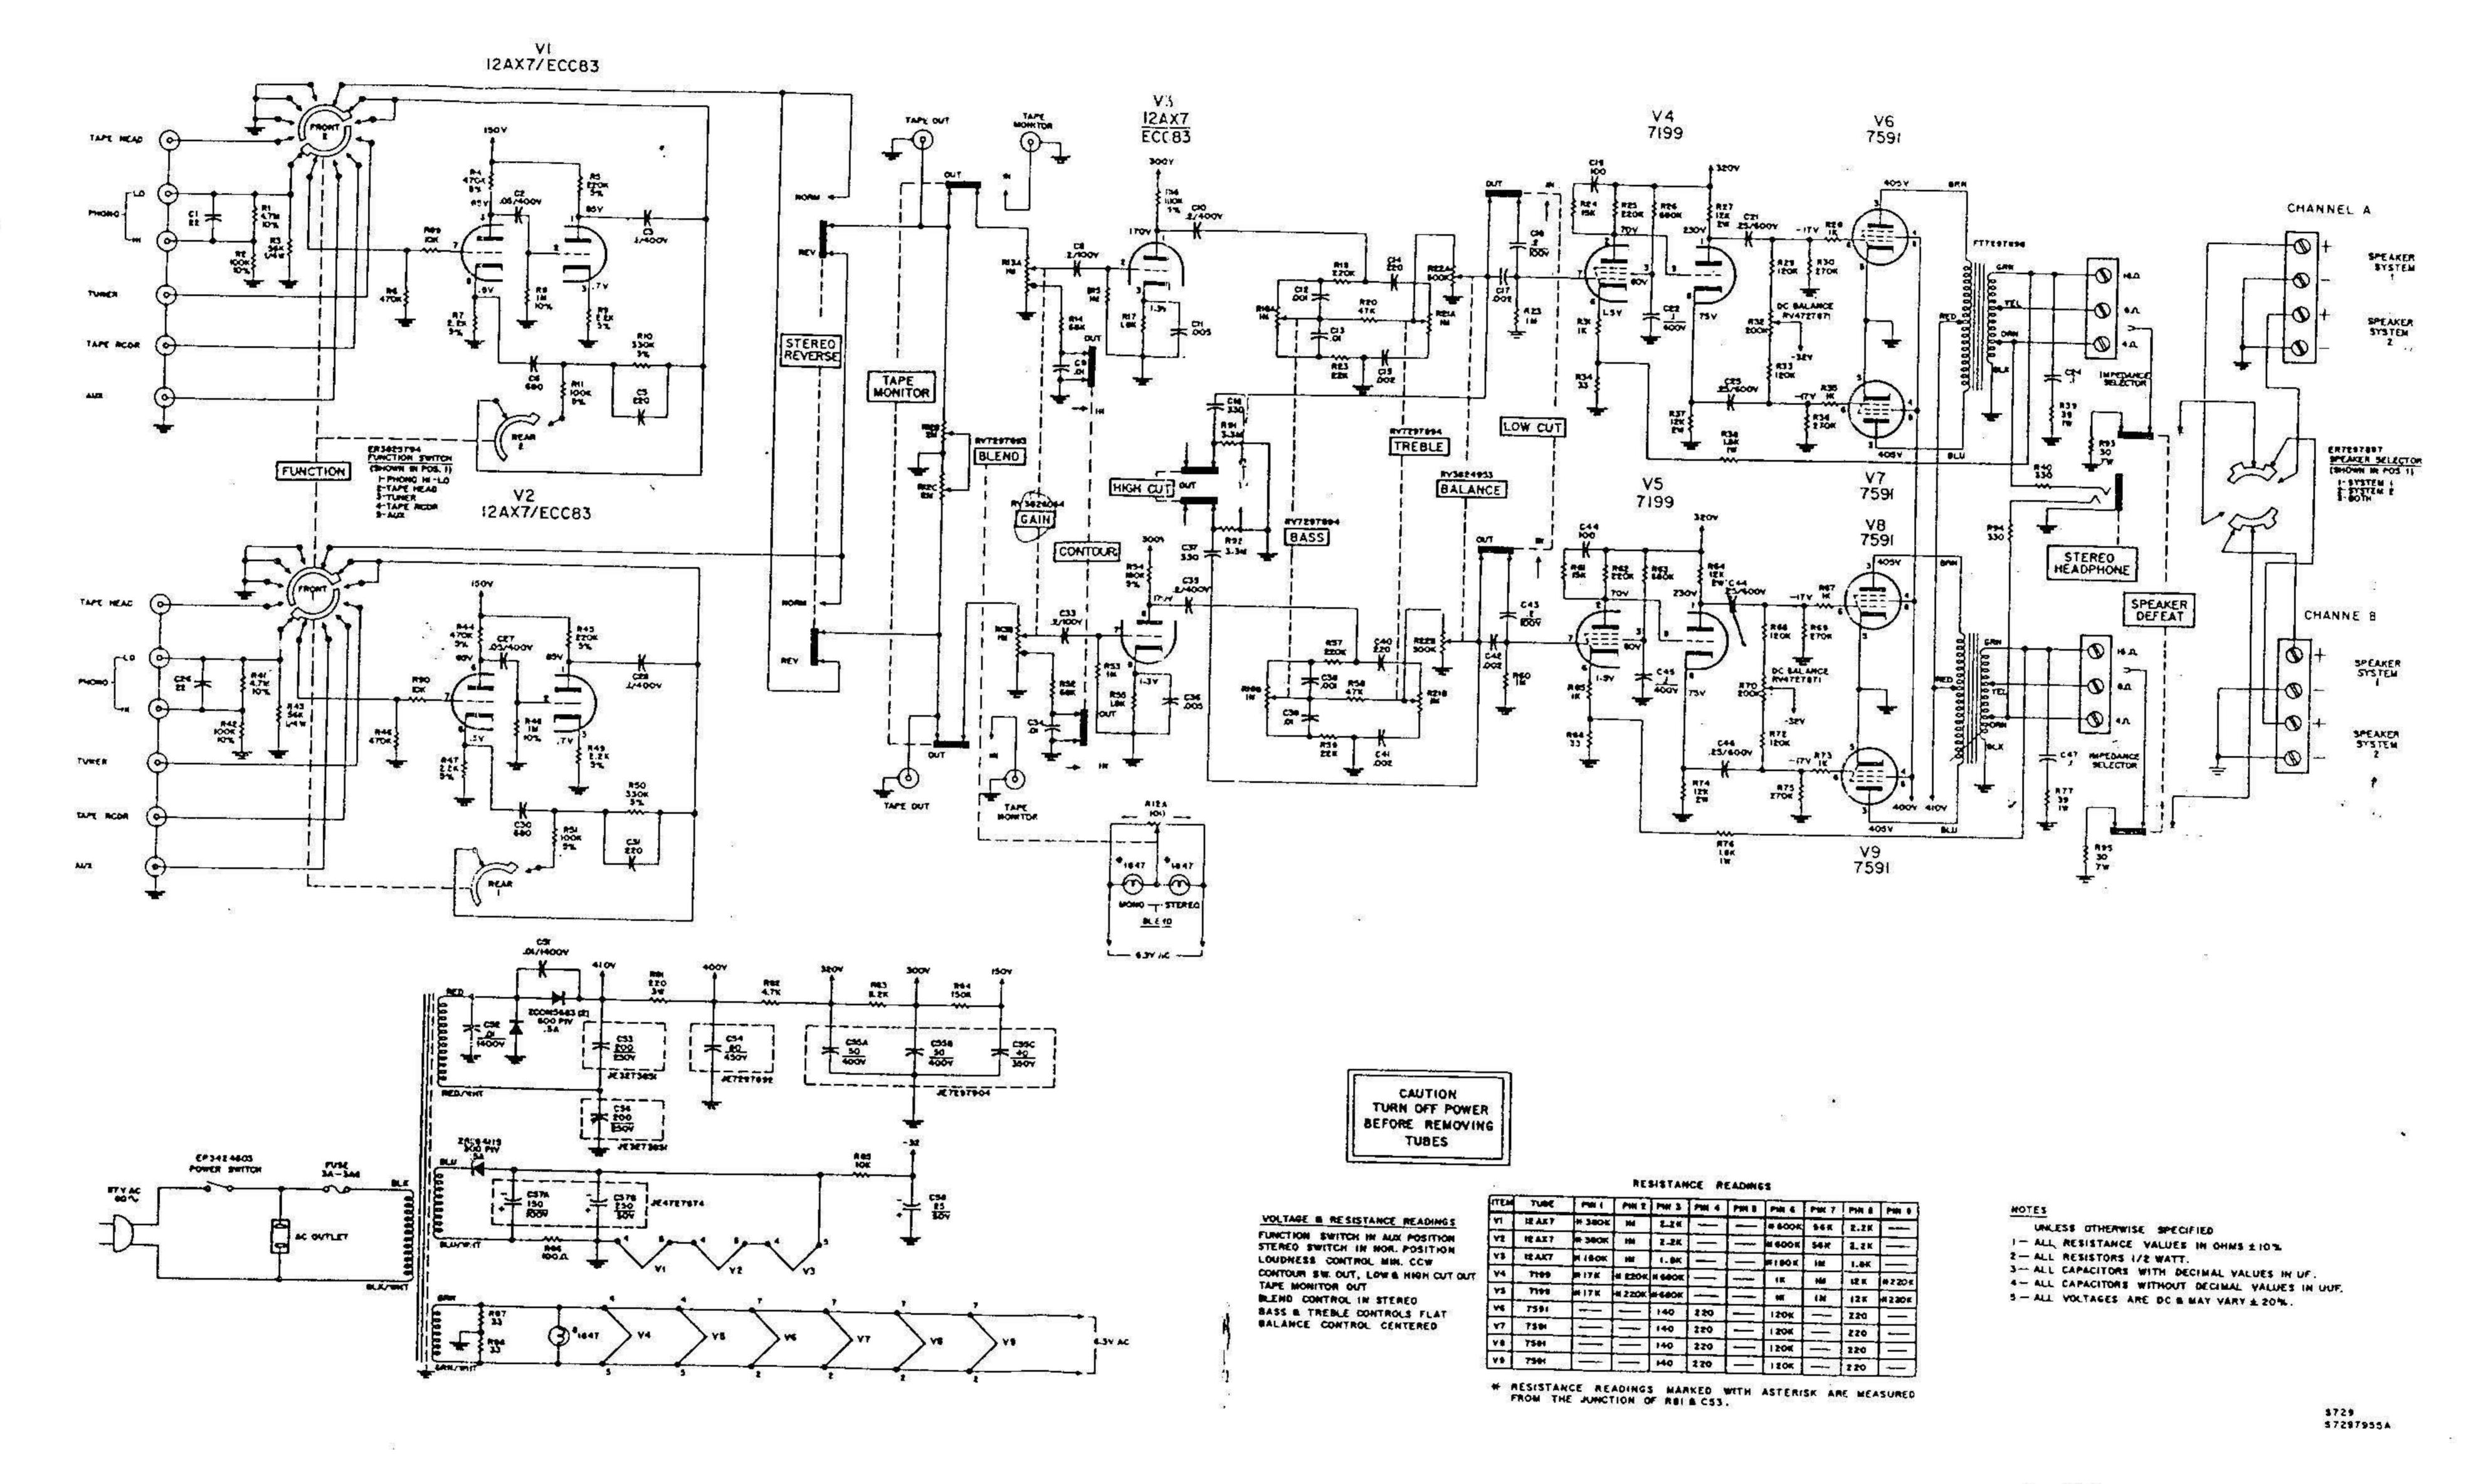

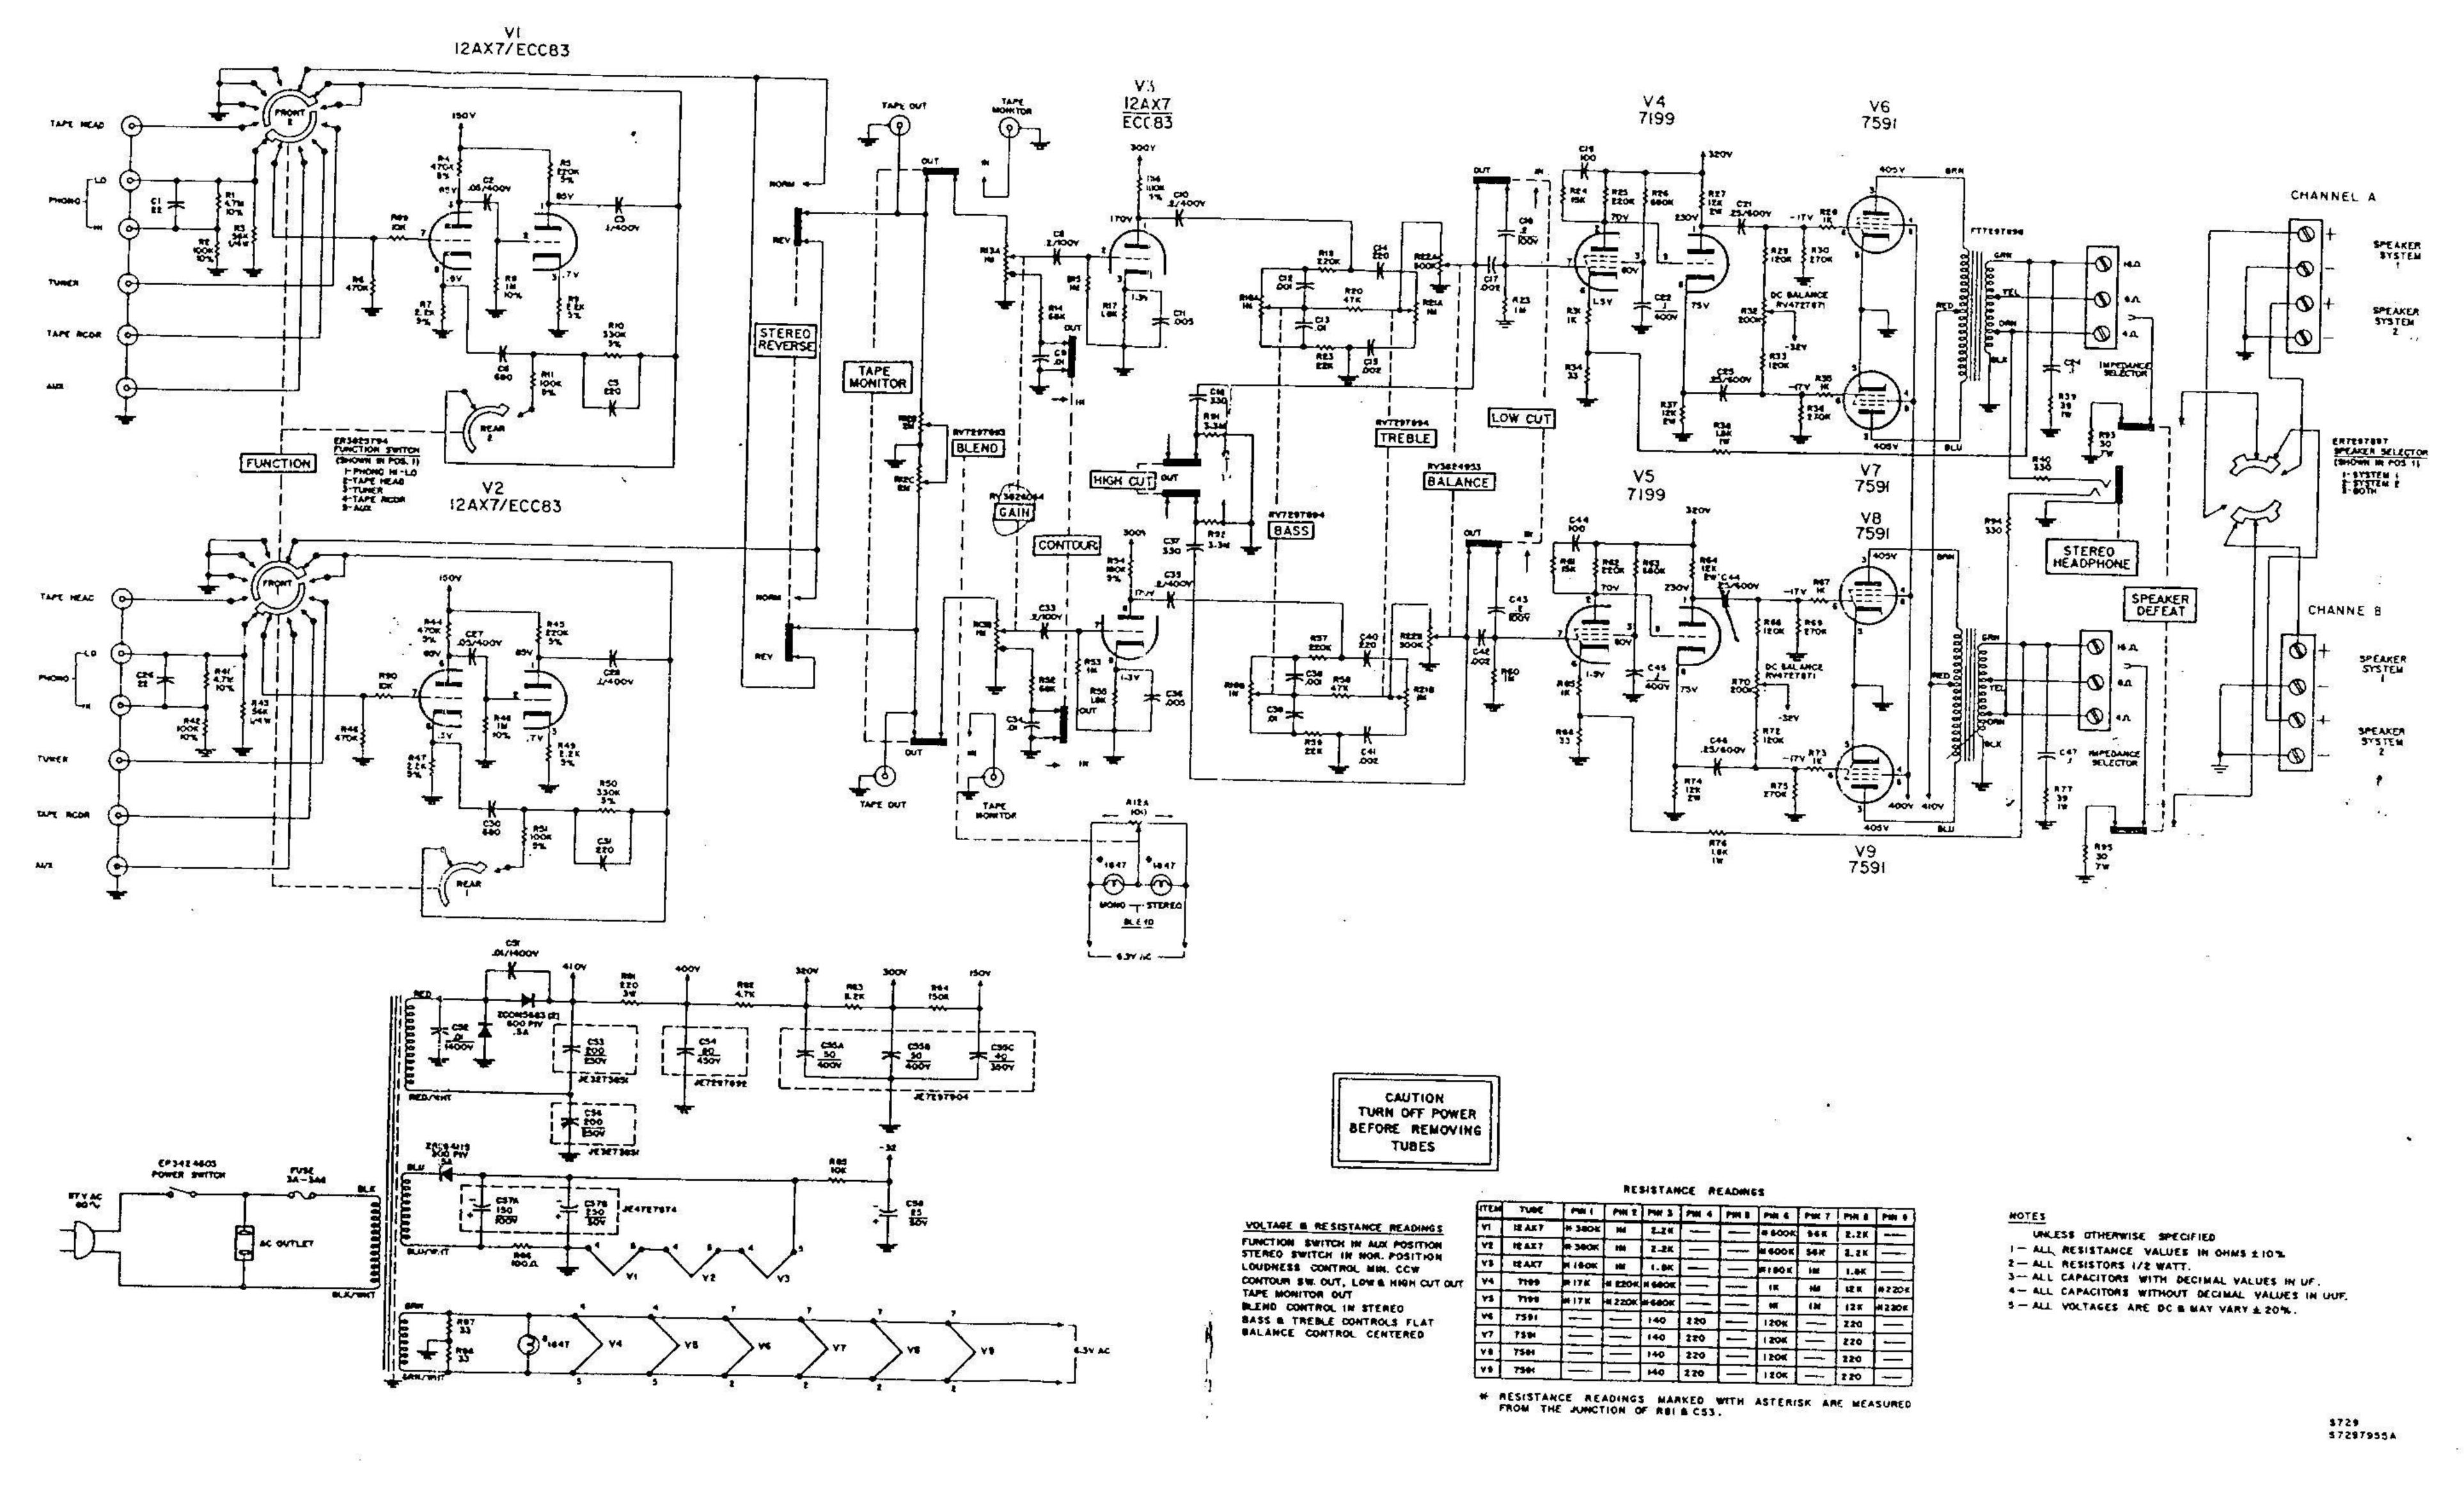

A 700

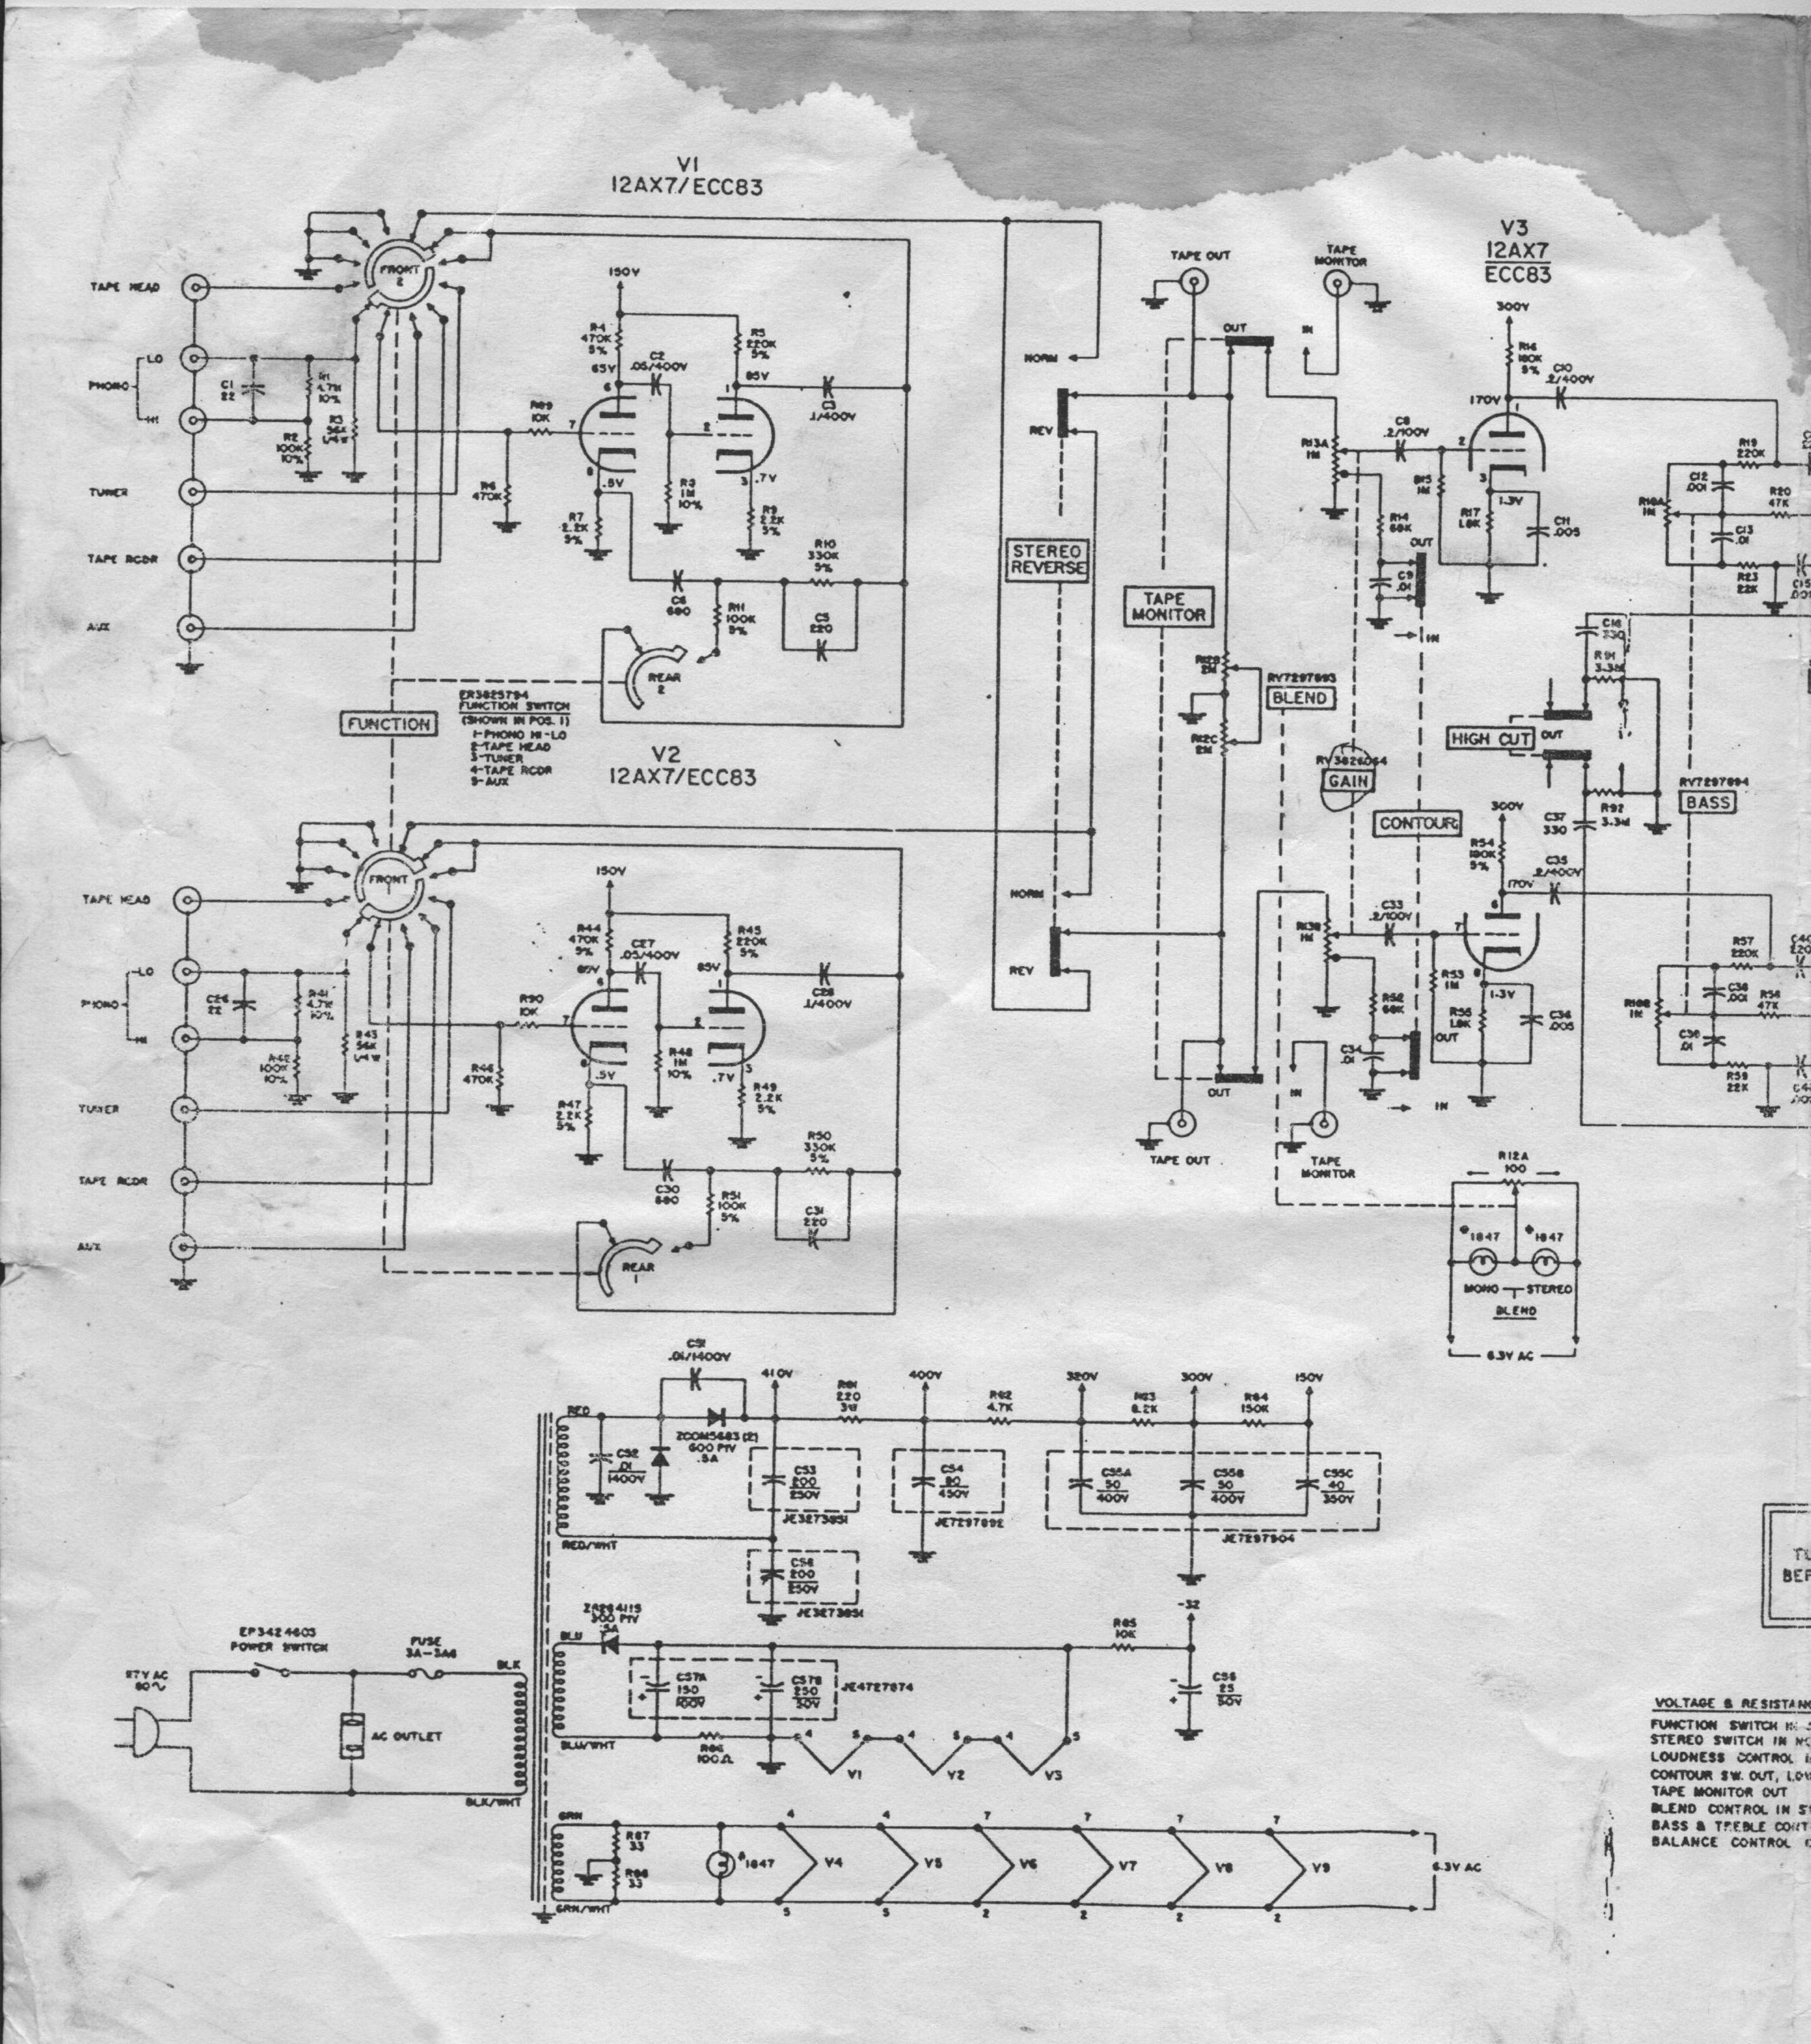

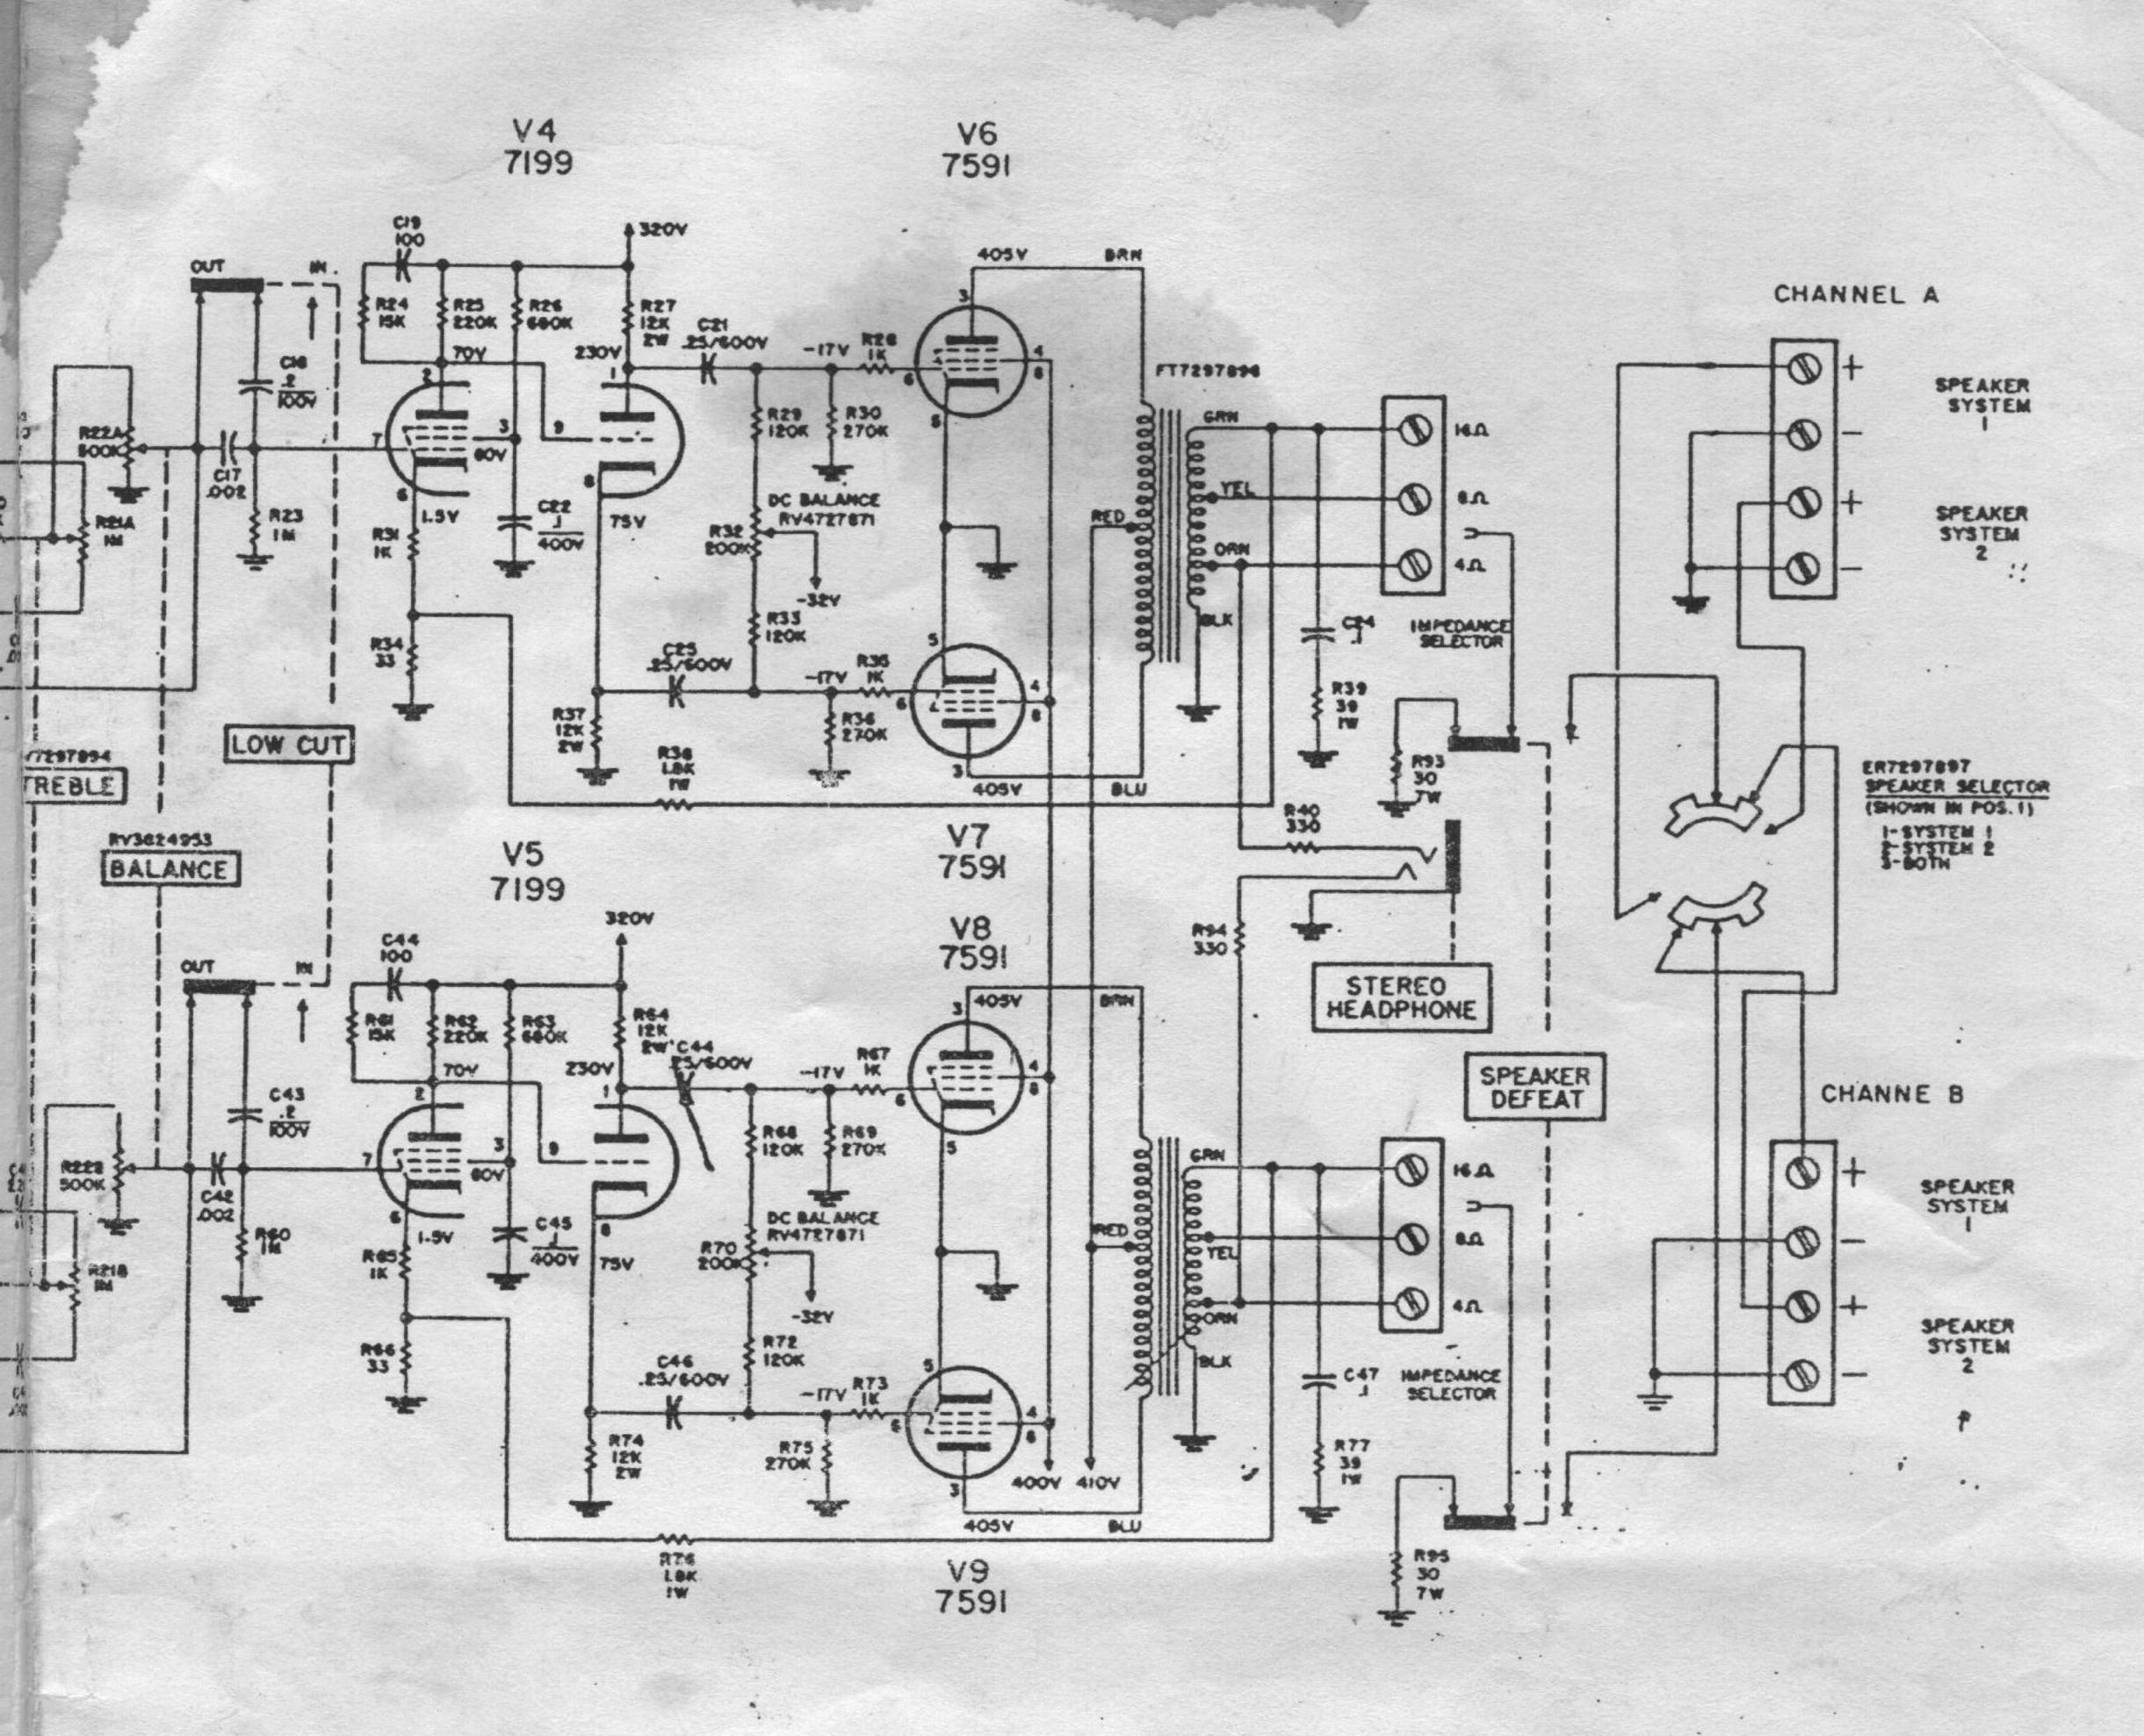

CAUTION THE OFF POWER BEFORE REMOVING TUBES

RESISTANCE READINGS

ANCE	READINGS
100000000000000000000000000000000000000	POSITION
	CCW.
ST-MININ	HIGH CUT OUT

I ME	FUS	11:1	N		
N. 1812	. 00	W			
LOW C	HIG	HC	זע	out	
STE.	939				
DITTAC	15 1	FLA	T		

L CENTERED

ITEM	TUBE	PMI I	PW 2	PIN 3	PIN 4	PSN S	PIN 6	PIN 7	PIN S	PSN 9
AI	IR AXT	# 380K	MA	2.2K	-		# 600K	SEK	2.2K	-
45	1EAX7	# 380K	164	2-2K		-	# 600K	56R	2.2K	-
V3	12 AX7	× 190%	100	1.8K		_	MISOK	IM	1.8K	-
¥4	7199	#17K	H 220K	# 600K	_	_	1K	166	12 K	#220K
YS	7199	#17K	# 220K	#680K		-	BK.	114	ISK	#230K
46	7591	-		140	220	_	120K	_	220	-
¥7	7591		-	140	220	_	150K	_	220	-
YE	7591			140	220		120K		220	-
V9	7501		-	140	220	-	120K		220	-

* RESISTANCE READINGS MARKED WITH ASTERISK ARE MEASURED FROM THE JUNCTION OF RBI & C53.

HOTES

- UNLESS OTHERWISE SPECIFIED
- 1 ALL RESISTANCE VALUES IN OHMS ± 10%
- 2 ALL RESISTORS 1/2 WATT.
- 3- ALL CAPACITORS WITH DECIMAL VALUES IN UF. 4- ALL CAPACITORS WITHOUT DECIMAL VALUES IN UUF.
- 5 ALL VOLTAGES ARE DC & MAY VARY ± 20%.

\$729 57297955A

A 700