

SERVICE NOTES

It is necessary that the INSG tube be shielded. See that the shield is firmly in place around the bottom portion of the tube.

The intermediate frequency of this receiver is 465 KC.

The trimmers and padding condenser adjustments are accessible through bottom of cabinet.

Color code of battery leads:- Red B+90; Black B-; Brown A-; Blue A+ 12 V.

RECOMMEND BATTERY KITS

	EVEREADY	BURGESS	For greater economy use two "A" colls in PARALLEL. Connect
1½ V. "A" 1 Roquired	7 4 0	20-F	plus to plus and minus to minus
45 V. "B" 2 Required	749	D60	
Combination "A" and "B" Single Unit.	746	17GD60	Use Adapter

Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from Signal Generator low. The I.F. trimmers are reached through the two holes on the top of each I.F. can.

See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.

The following durmy antenna circuit is recommended, since it is adaptable for any frequency range. The grid cap should remain in place during alignment.

