

Signal Generator	Adjust Trimmers to Maximum Output	Input and Output I. F. Slugs	Oscillator Trimmer	Antenna Trimmer
	Capacitor Setting	Full Capacitance	Minimum Capacitance	1500 Kc
	Ground Connection	Chassis	Chassis	
	Connection to Receiver	IR5 Pin 6 Grid	IR5 Pin 6 Grid	Radiating Loop
Coupling Capacitor	0.1 Mfd	0.1 Mfd		
Frequency	455 Kc	1680 Kc	1500 Kc	

JEWEL RADIO CORP.

PORTABLE RADIO Model 5310

