


BATTERY DRAIN: 12 MA (No signal)
TUNING RANGE: 537 KC-1640 KC
I. F. STAGES: 455 KC

REMOVAL OF PRINTED CIRCUIT BOARD FROM CABINET

1. Pull out tuning knob.
2. Remove the screw & washer from under tuning knob (holding cabinet to mounting bracket)
3. Open rear cover and remove the screws & washers on each side of board. **IMPORTANT: DO NOT MIX UP THESE SCREWS WITH FRONT SCREW.**
4. Remove the printed board cover.
5. Remove the screw with washer from top of board & spacer beneath board (holding board to speaker).
6. Lift the printed board out of cabinet.
7. Unsolder speaker leads, if servicing requires removal of board from cabinet.

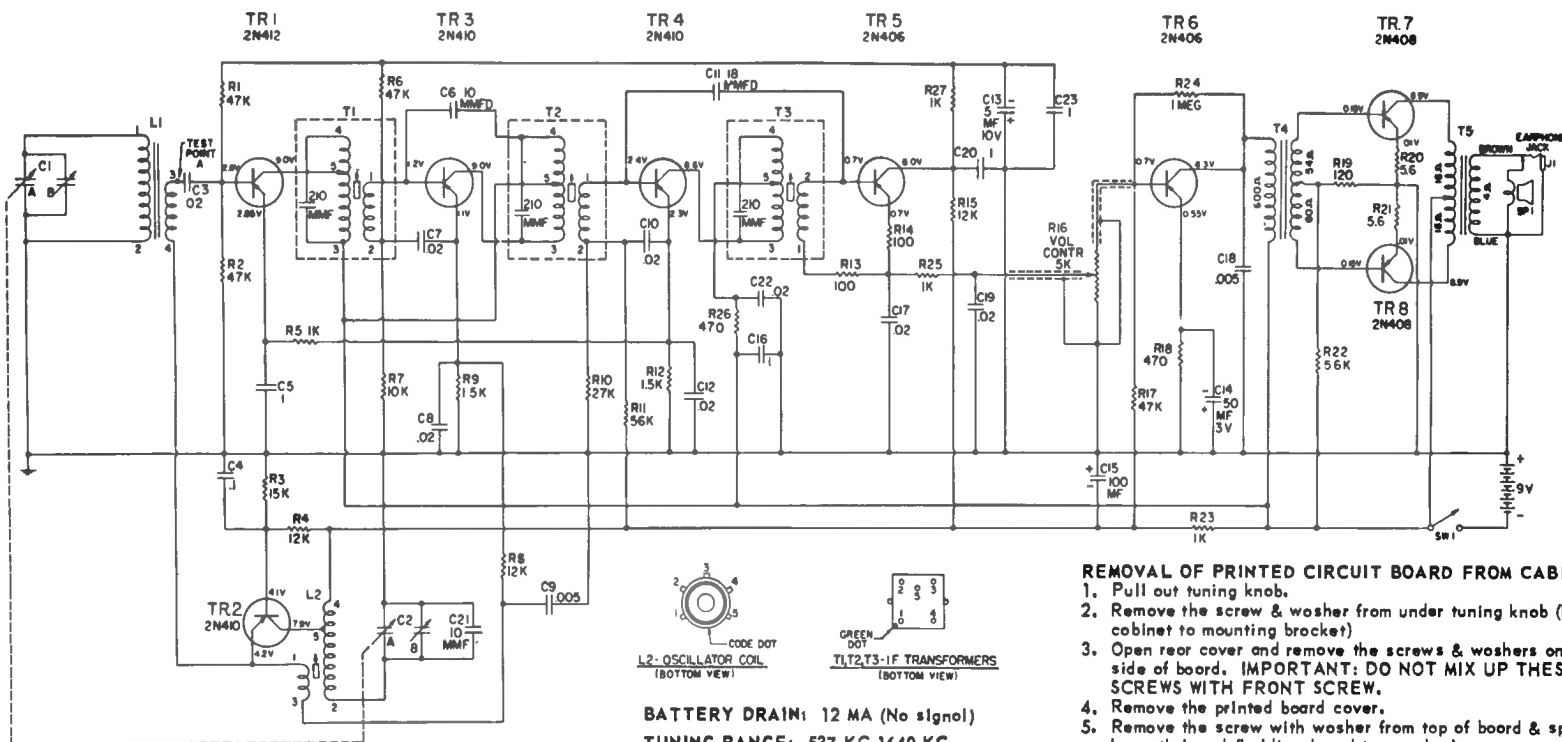

TOP VIEW OF BOARD SHOWING ALIGNMENT ADJUSTMENT LOCATIONS.

- 1) 1st I.F.
- 2) OSC. COIL
- 3) TRIM. C1B
- 4) TRIM. C2B
- 5) 2nd I.F.
- 6) 3rd I.F.

