

MOTOROLA MODELS CHASSIS

2F12N	HS-667
2F12W	HS-667



VOLTAGES - Measured from point indicated to B- with a VTVM. = CHASSIS

To Remove Chassis from Cabinet

- ### To Remove Turntable

- ## MODELS CHASSIS

2F11B HS-666
2F11R HS-666



VOLTAGES - Measured from point indicated to B- with a VTVM.



MODELS CHASSIS

3F13B	HS-668
3F13W	HS-668

NOTES

CAPACITORS - Decimal values in MF, all others in MMF unless otherwise specified.
VOLTAGES - Measured from point indicated to B- with a VTVM, $\pm 10\%$. Line Voltage maintained at 120V AC.

$\nabla \approx B^-$ $\perp \approx$ Chassis

1. Remove volume and tone knobs.
2. From inside cabinet, remove 3 baffle mounting screws, then remove baffle.
3. Unclip speaker leads.
4. Remove 4 motorboard mounting screws.
5. Grasp record changer at base of tone arm and record support arm, then lift straight out of cabinet (to facilitate servicing, both record changer and chassis are mounted on the motorboard).
6. To remove chassis, remove 4 chassis mounting nuts; unsolder leads connected to chassis if necessary.