

MODELS 46HF1

46HFID 46HF1B

Mahogany Limed Oal

HS-495 HS-495

Limed Oak Mahogany

HS-495

DISASSEMBLY INSTRUCTIONS

To Remove Chassis From Cabinet

E2

Pull off three knobs from top of cabinet.
Remove three screws which hold perforated


speaker leads connecting chassis connecting the chassis to the record

3.2 OHM

El

nuts which hold the chassis

In MMF unless otherwise specified, Voltages - measured from point indicated to B- with a VTVM. No signal input. = B-

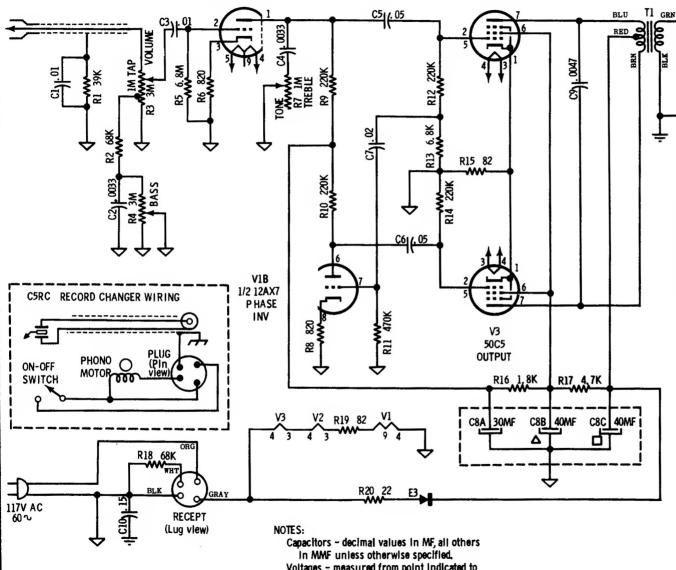

V2 50C5

OUTPUT

VIA

1/2 12AX7 **VOLTAGE AMP**