

# 52CW1 52CW3 52CW3 52CW4 CHASSIS HS-32S

#### **CLOCK OPERATION**

The clock will start as soon as the receiver is plugged into an electrical outlet. To set the hands to the correct time, pull out knob "A" and rotate it in a clockwise direction only.

### AUTOMATIC RADIO OPERATION

The clock controls may be pre-set to turn the radio on

automatically at any time up to ten hours in advance.

Rotate knob "C" clockwise to the desired time on the automatic time dial scale. Rotate knob "B" to the "AUTO" position. At the pre-set time the radio will begin to play.

If the radio has been turned on automatically and is left unattended, with knob "B" in the "AUTO" position, it will shut off after approximately two hours. To permit continuous operation, rotate knob "B" to the "ON" position.

# MOTOROLA, INC.

### ALIGNMENT

## Chassis HS-329

NOTE: It is recommended that an isolation transformer be placed between the power line and the receiver to avoid hum and electrical shocks. If an isolation transformer is not available, connect the low side of the signal generator to B- through a . 1 mf capacitor.

- 1. Connect a low range output meter across the speaker voice coil.
- 2. Connect the low side of the signal generator to B-.
- 3. Set the signal generator for 400 cycle, 30% modulation.

- 4. Turn the receiver volume control to maximum.
- 5. Use a small fibre screwdriver for aligning the IF and diode transformers,
- 6. As stages are brought into alignment, reduce the signal generator output to a level which produces less than .40 volts (.05 watt) across the voice coil to avoid overloading the receiver.
- 7. See Figure 4 for adjustment locations and the following chart for procedure.

STEP	DUMMY ANTENNA	GENERATOR CONNECTION	GENERATOR FREQUENCY	GANG SETTING	ADJUST.	REMARKS
IF ALI	I GNMENT					
1.	.1 mf	Grid of conv. (pin 7, 12BE6)	455 Kc	Fully open	1, 2, 3 & 4 (IF cores)	Adjust for maximum.
RF AL	IGNMENT					
2.	.l mf	Grid of conv. (pin 7, 12BE6)	1620 Kc	Fully open	5 (Osc)	Adjust for maximum.
3,	-	Radiation loop*	1400 Kc	Tune for max	6 (Ant)	Adjust for maximum.

\*Connect generator output across 5" diameter, 5 turn loop and couple inductively to receiver loop. Keep generator loop perpendicular to axis of and at least 12 inches from receiver iron core loop.

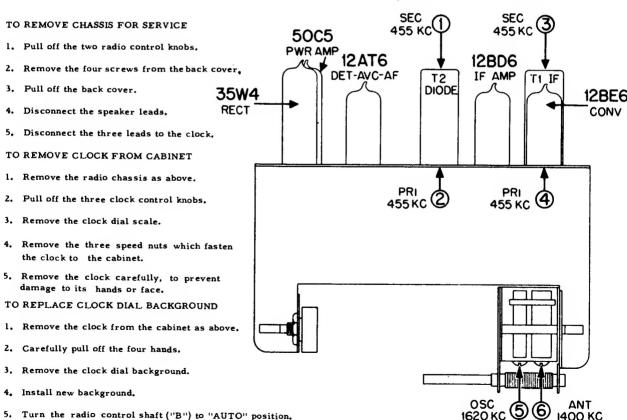


FIGURE 4. TUBE AND ALIGNMENT LOCATIONS

7. Reassemble all four hands in the 12 o'clock position.

tacts have closed. Do not overshoot this point.

6. Slowly rotate the automatic time set shaft ("C") clock-

wise until a "click" is heard, indicating that the switch con-

8. Check the operation of the clock to be sure the radio turns on at the time indicated on the automatic time dial scale.