



TO REMOVE CHASSIS FROM CABINET

1. Pull off the two radio control knobs and dial pointer knob.
2. Remove the four screws which hold the rear cover to the cabinet.
3. From the back of the cabinet, remove the four hex head screws which mount the radio chassis.
4. Unsolder the speaker leads.
5. Remove the screw that mounts the power interlock plug.
6. Remove the radio chassis from the cabinet.
7. Remove the four screws which mount the speaker and remove speaker from cabinet.

MOTOROLA, INC.

CHASSIS
HS-336

MODELS
53X1
53X2
53X3
53X4