


MOTOROLA

CHASSIS
HS-530



MODELS
57CE
57CE1
57CE2
57CF1
57CF2

- To Remove Chassis
1. Remove cabinet back cover screws and remove cover.
 2. Pull off the two control knobs from the front of the radio.
 3. From front, remove the Phillips head screw near tuning shaft.
 4. From rear, remove chassis mounting screw from the ear of the volume control.
 5. Unplug power leads from connector strip located behind clock.
 6. Remove chassis from cabinet.

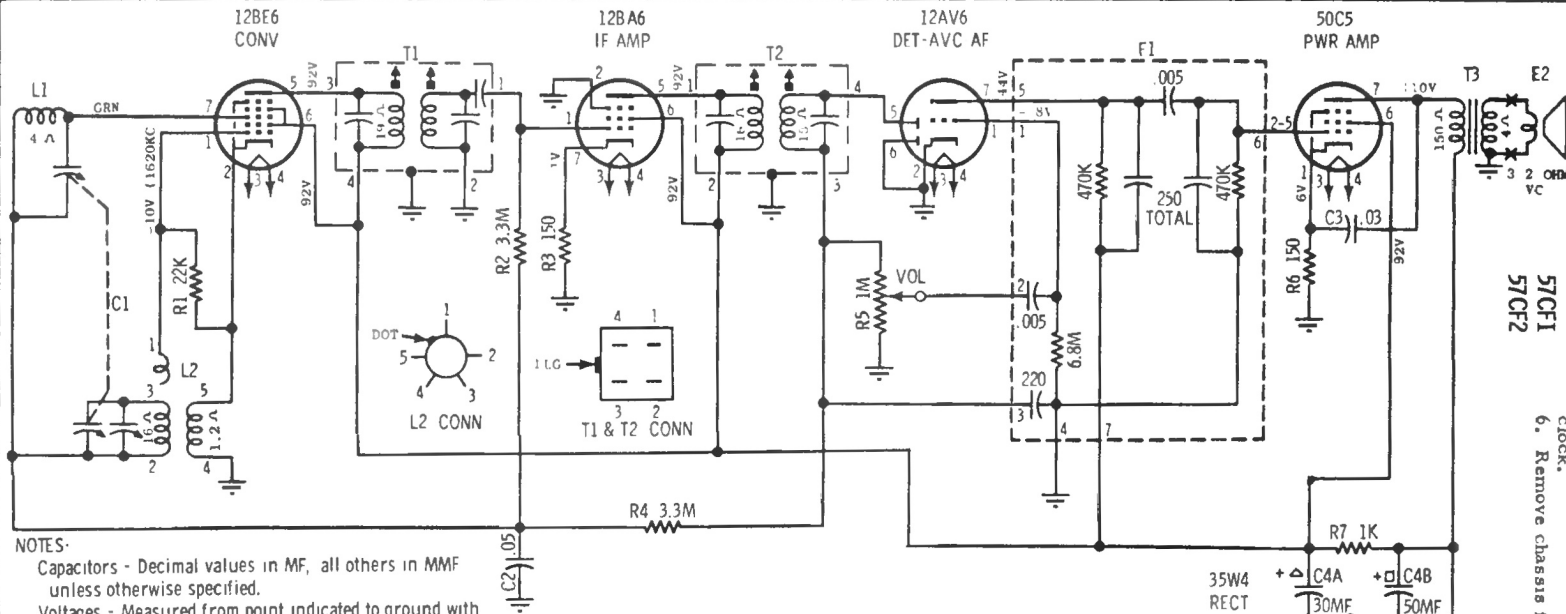

NOTES:

Capacitors - Decimal values in MF, all others in MMF unless otherwise specified.
 Voltages - Measured from point indicated to ground with a VTVM. No signal input.
 Tuning Range 535 to 1620 KC.

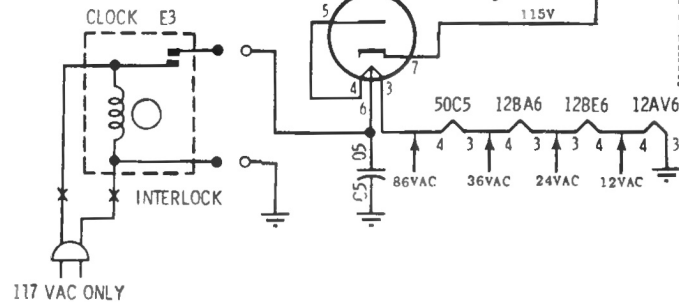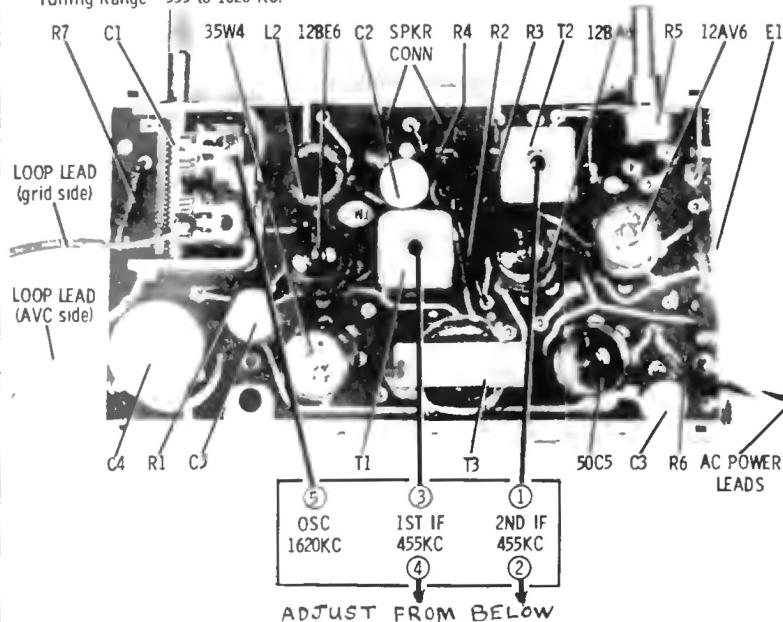

ALIGNMENT

STEP	GENERATOR CONNECTION	GENERATOR FREQUENCY (400 cycle mod)	GANG SETTING	ADJUST
IF ALIGNMENT 1.	Grid of conv (pin 7, 12BE6) thru .1 mf & B-	455 Kc	Fully open	1, 2, 3 & 4 for maximum.
RF ALIGNMENT 2.	Grid of conv (pin 7, 12BE6) thru .1 mf & B	1620 Kc	Fully open	5 for maximum.