


MOTOROLA INC.

Chassis HS-521, Models 57A1, 57A2, 57A3, and
Chassis HS-522, Models 57R1, 57R2, 57R3, 57R4.

Chassis HS-527 and HS-566, used in Models 57CS1, -A, 57CS2, -A, 57CS3, -A, 57CS4, -A, are like the above chassis plus clock and appliance outlet.

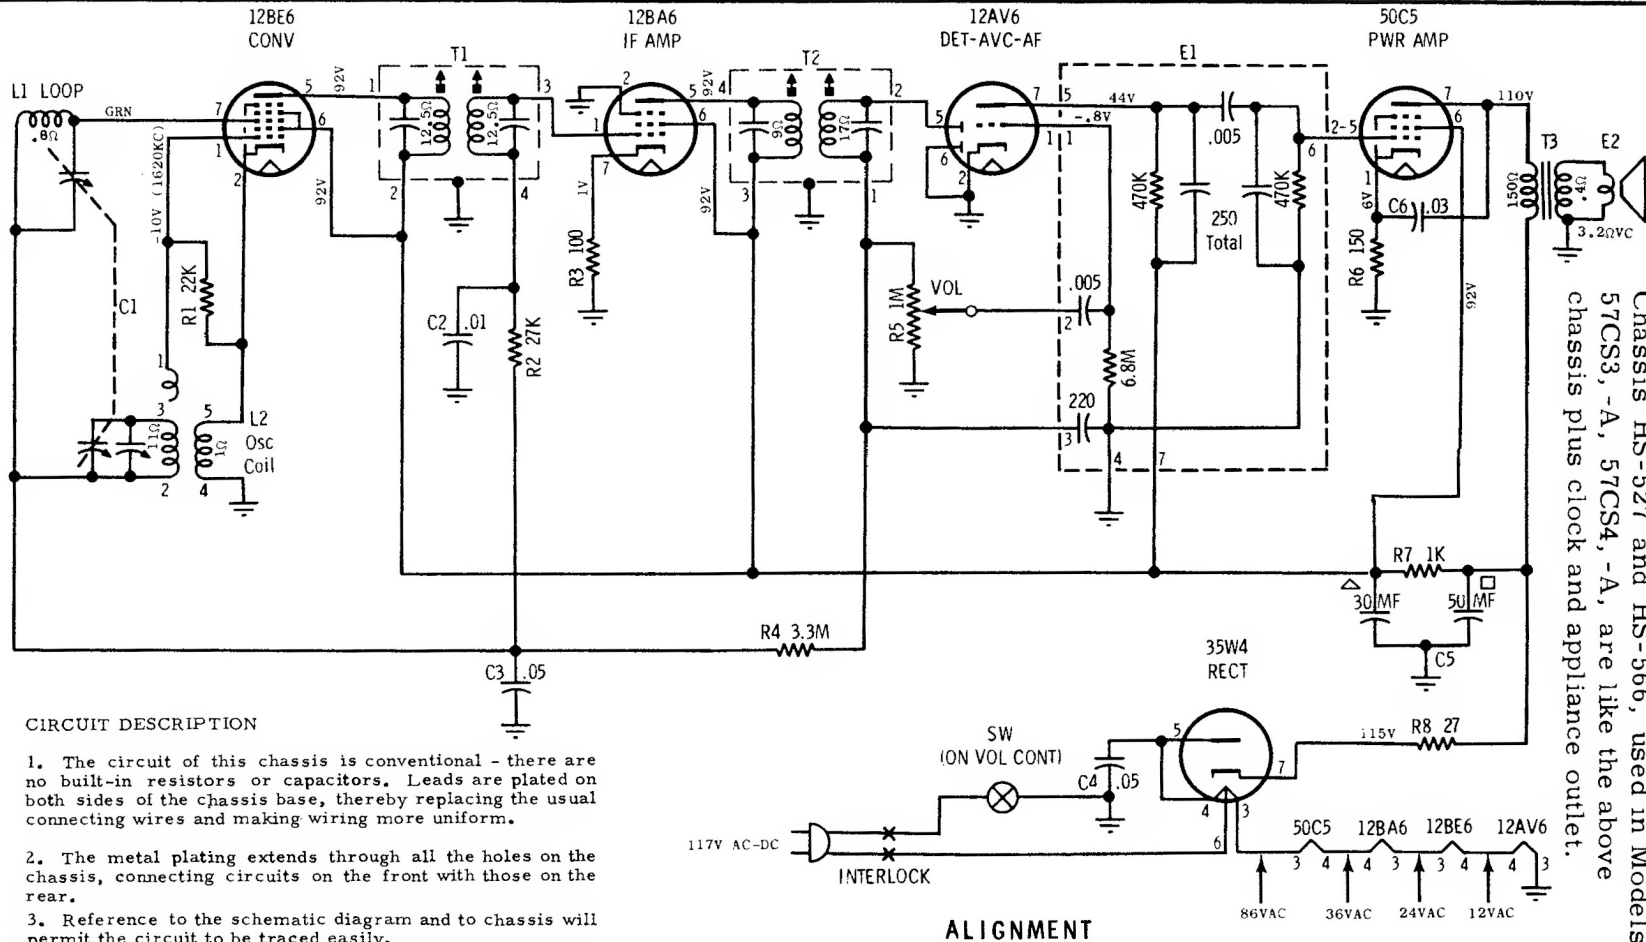

STEP	GENERATOR CONNECTION	GENERATOR FREQUENCY (400 cycle mod)	GANG SETTING	ADJUST	REMARKS
IF ALIGNMENT 1.	Grid of conv (pin 7, 12BE6) thru .1 mf & B-	455 Kc	Fully open	T1 and T2 Top and Bottom	Adjust for maximum.
RF ALIGNMENT 2.	Grid of conv (pin 7, 12BE6) thru .1 mf & B-	1620 Kc	Fully open	C1, OSC. TRIMMER	Adjust for maximum.

