


NOTES

Capacitors - Decimal Values in MF, all others in MMF unless otherwise specified.
Voltages measured to B - with VTVM. Tolerance $\pm 10\%$.
= Chassis = RC Base

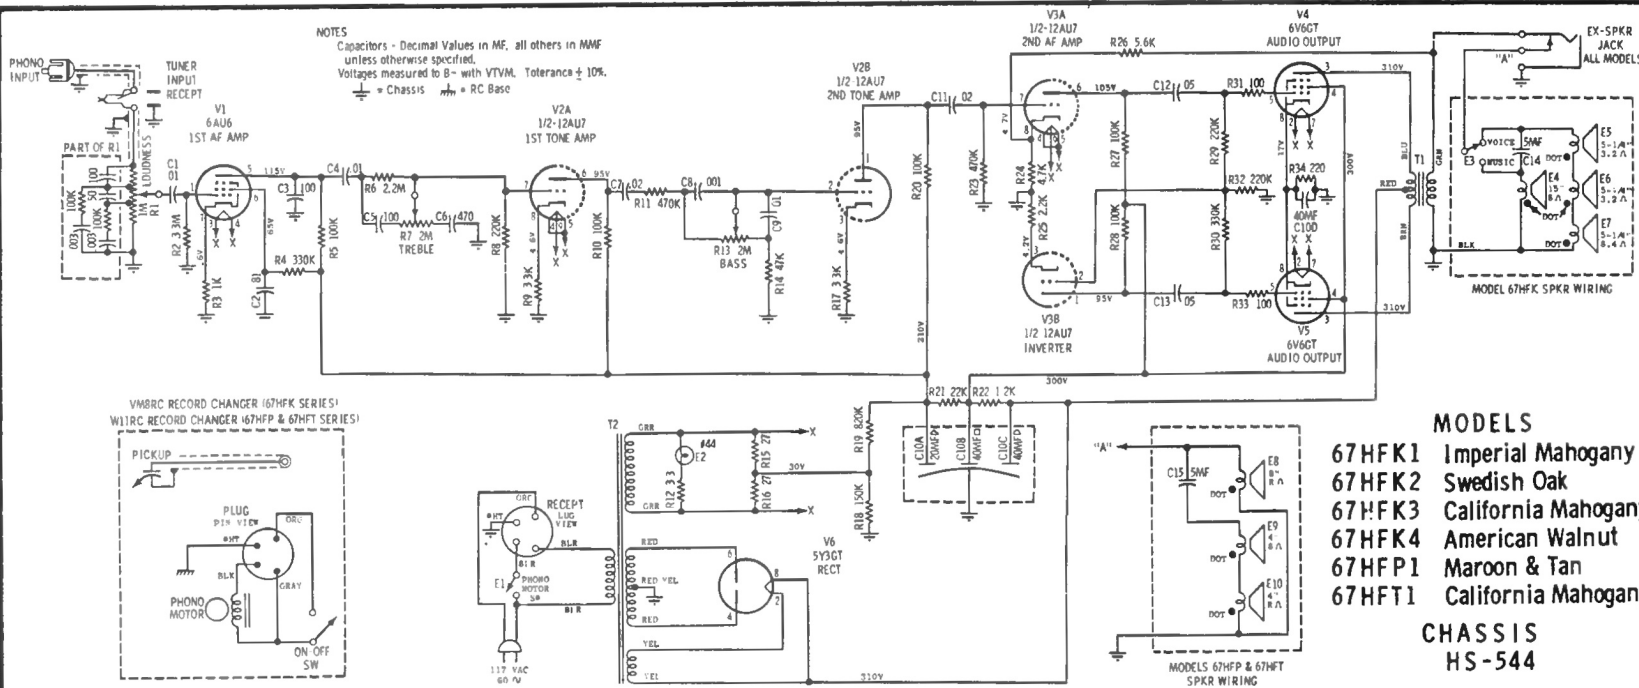

MODELS

- 67HFK1 Imperial Mahogany
- 67HFK2 Swedish Oak
- 67HFK3 California Mahogany
- 67HFK4 American Walnut
- 67HFP1 Maroon & Tan
- 67HFT1 California Mahogany

CHASSIS HS-544

To Remove Chassis from Cabinet

(67HFK series)


1. Remove VOICE-MUSIC switch from cabinet.
2. Pull off three control knobs.
3. Remove cabinet back cover.
4. Disconnect leads from changer and speakers.
5. Remove two screws that mount chassis to cabinet, slide chassis from cabinet.

(67HFP series)

1. Pull off the three control knobs.
2. Remove wingnut from cabinet back cover and remove cover.
3. Remove screws from bottom panel (located at base of cabinet) and remove panel from cabinet.
4. Disconnect leads from changer and speakers.
5. Remove nuts from block of wood adjacent to chassis and lift block of wood out of way.
6. Remove chassis mounting screw and slide chassis out from bottom of cabinet.

(67HFT series)

1. Pull off the three control knobs.
2. Remove cabinet back cover.
3. Disconnect leads from changer and speakers.
4. From rear of cabinet, remove two chassis mounting screws from cabinet and slide chassis out of cabinet.

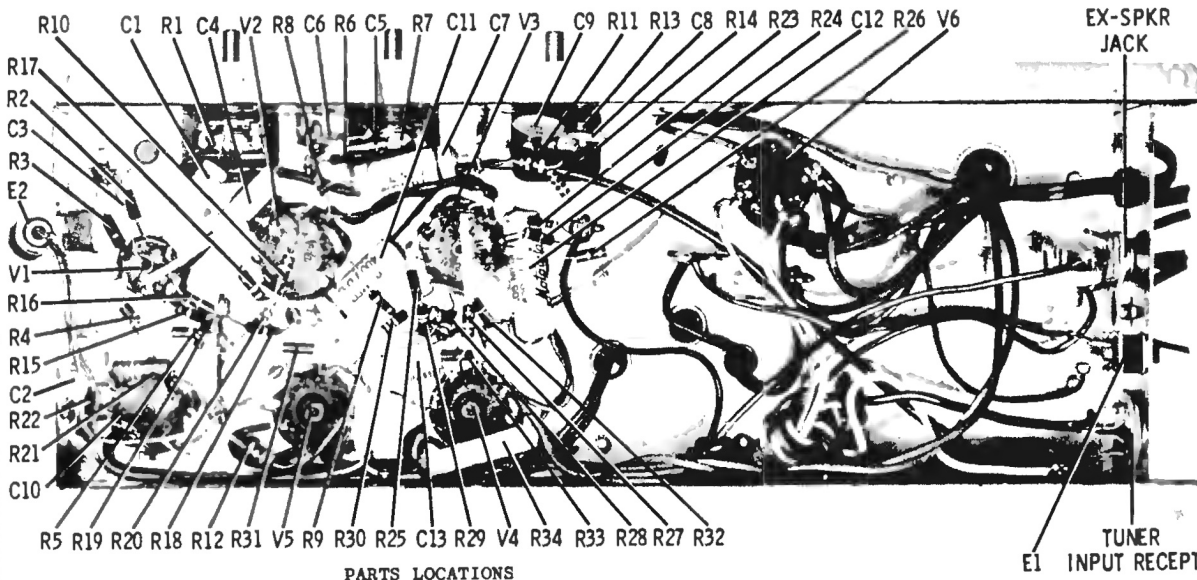

PARTS LOCATIONS