

To Remove Chassis From Cabinet


1. Pull off the control knobs.
2. Remove cabinet back cover.
3. Disconnect leads from changer, auxiliary jacks and speakers.
4. Remove light shield and pilot light socket.
5. Remove three chassis mounting screws and remove chassis.

To Remove Record Changer From Cabinet

1. Remove back cover.
2. Disconnect all changer leads.
3. Turn the two record changer mounting screws fully clockwise (down flush against changer base).
4. From bottom of changer, turn the two Tinnerman nuts located at mounting screw ends so they are parallel with the screws.
5. Grasp changer by base and lift up.

To Replace Pilot Lights

1. To replace pilot light in record changer compartment, remove light shield, then bulb.
2. To remove pilot light on chassis, first remove chassis (see above), then bulb.

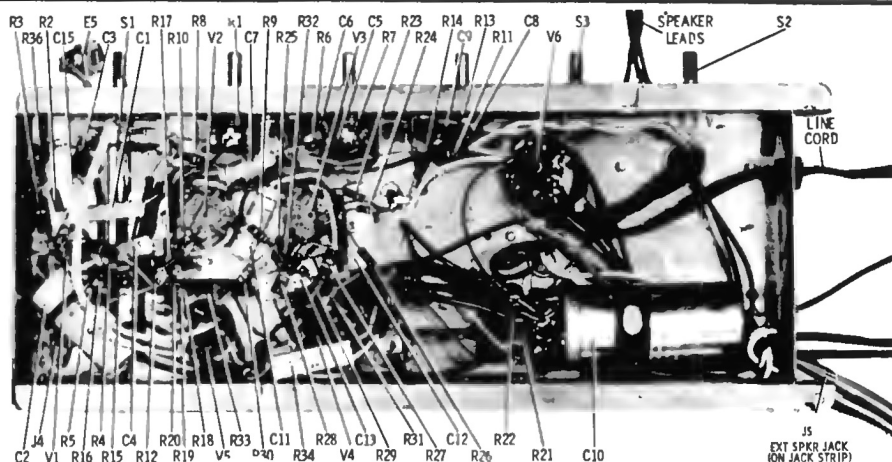

PARTS LOCATIONS

