




RF CORE	OSC CORE	ANT CORE
1020 KC (9)	(8) 1020 KC	(10) 1020 KC

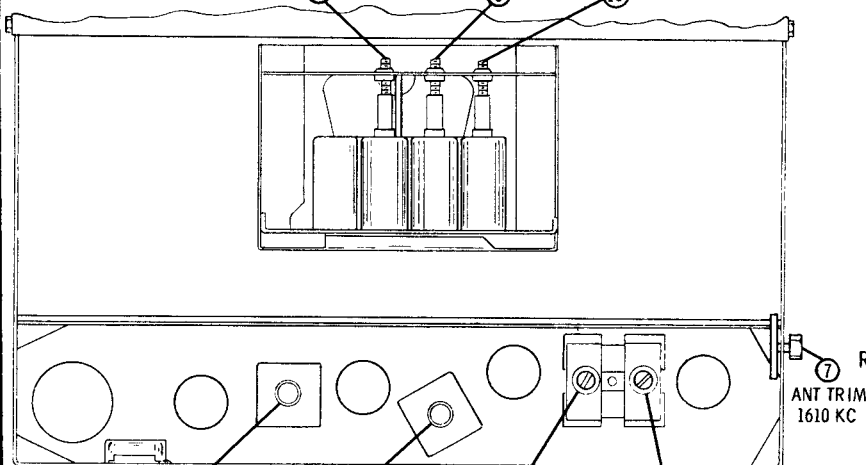


c. Adjust R-19 for a reading of 140 ma with 12.6 volts input to radio "A" lead.

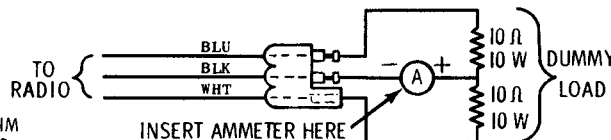

ADJUSTING TRANSISTOR CURRENT OR OPERATING SET WITHOUT SPEAKER

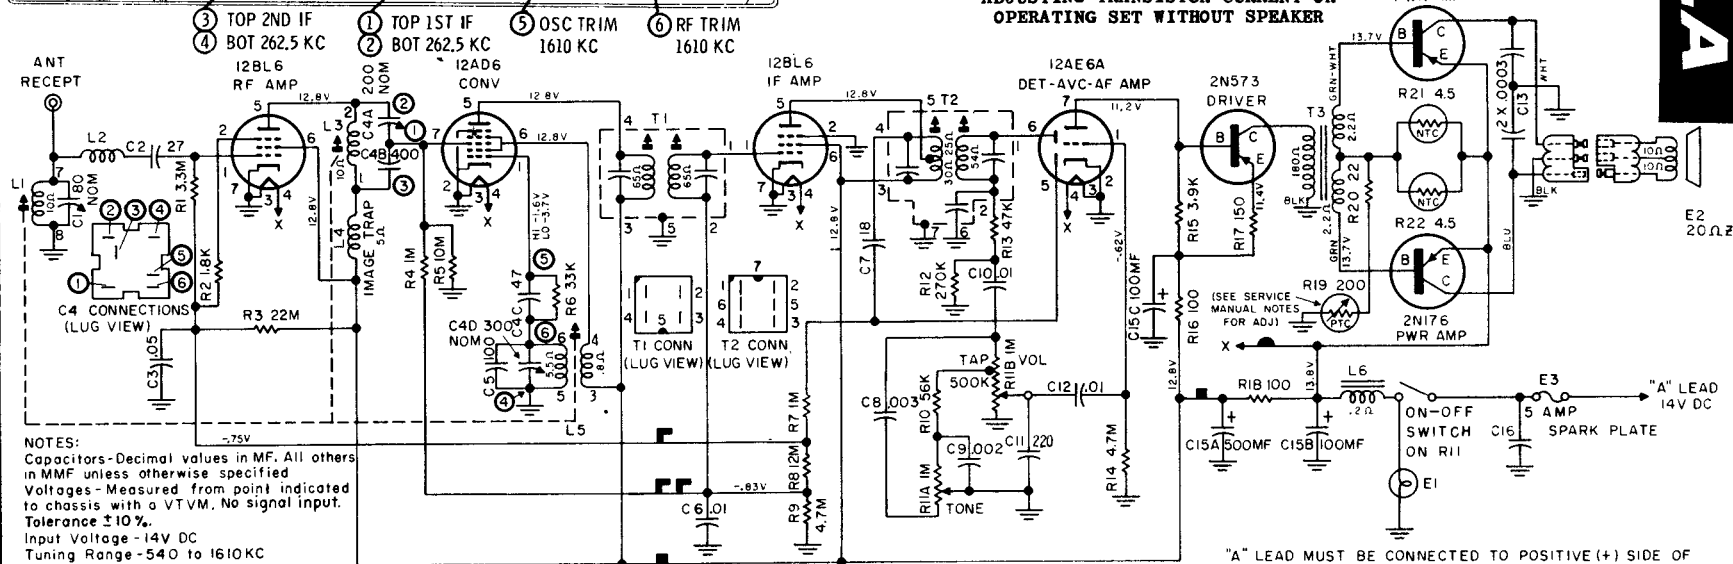

NOTES: -75V
Capacitors-Decimal values in MF. All others in MMF unless otherwise specified.
Voltages - Measured from point indicated to chassis with a VTVM. No signal input.
Tolerance $\pm 10\%$.
Input Voltage - 14V DC
Tuning Range - 540 to 1610 KC
IF - 262.5 KC.

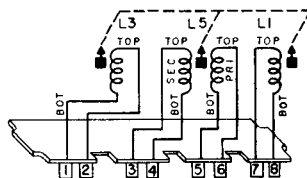


LI.L38L5 CONNECTION DETAIL

PLATED PANEL WIRING LEGEND

■ = B+ ● = FILAMENT

 ■ = RE. AVC ■ ■ = IE. CONV. AVC



TRANSISTOR CONNECTIONS
(LUG VIEW)

MOTOROLA 04MA

AMERICAN MOTORS 8990706

"A" LEAD MUST BE CONNECTED TO POSITIVE (+) SIDE OF POWER SUPPLY. RADIO WILL NOT OPERATE AND DAMAGE TO COMPONENTS WILL RESULT IF CONNECTED OTHERWISE

