


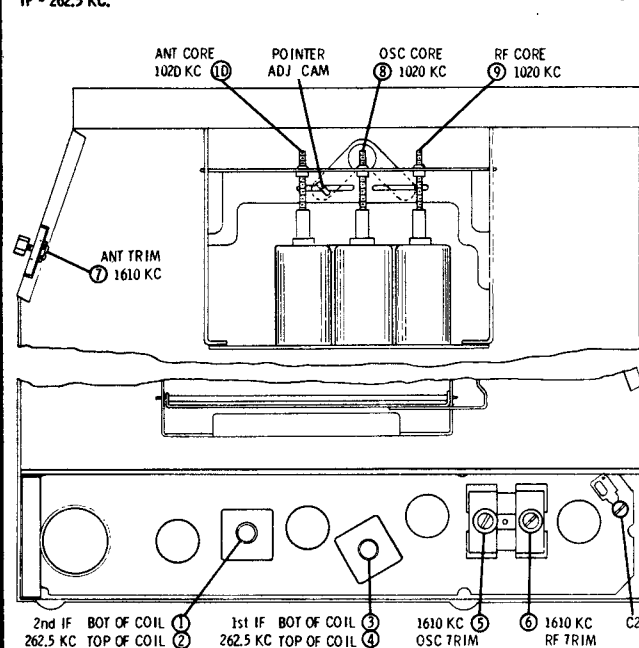


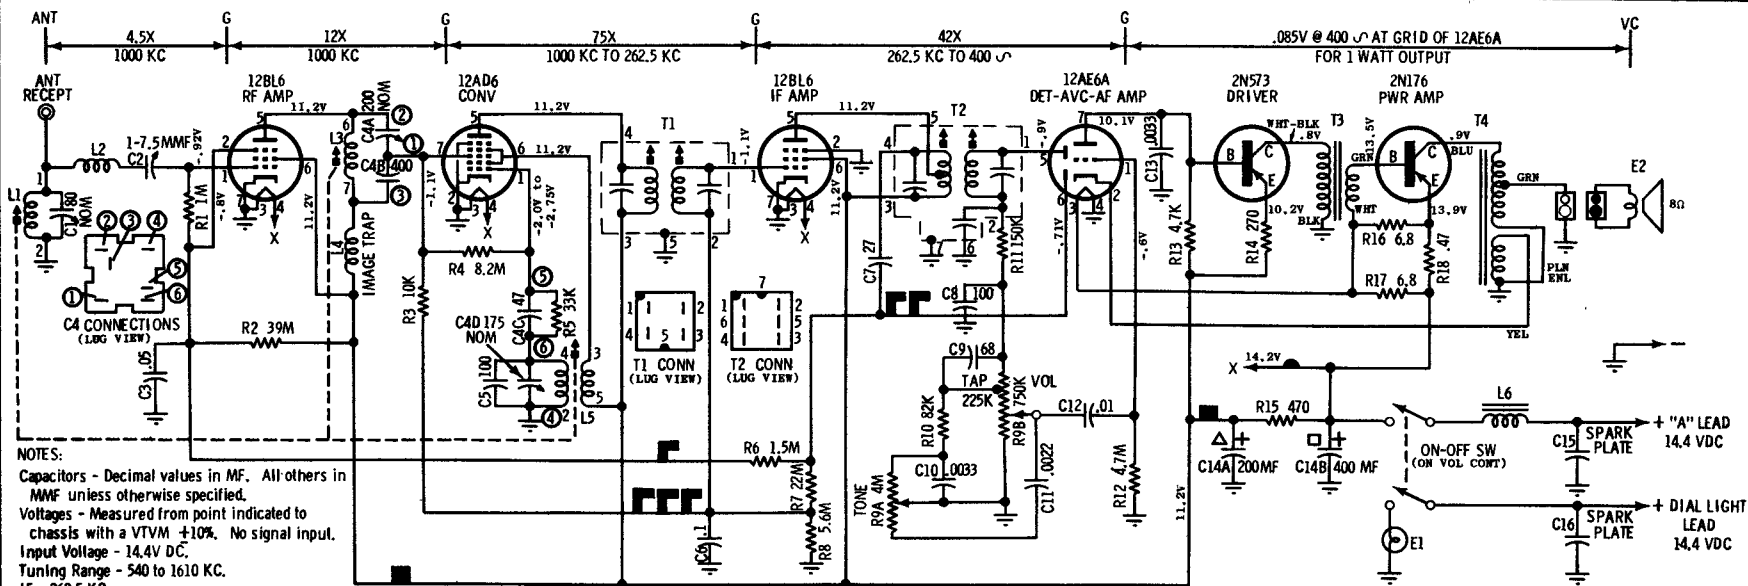

ALIGNMENT POINTS LOCATION DETAIL

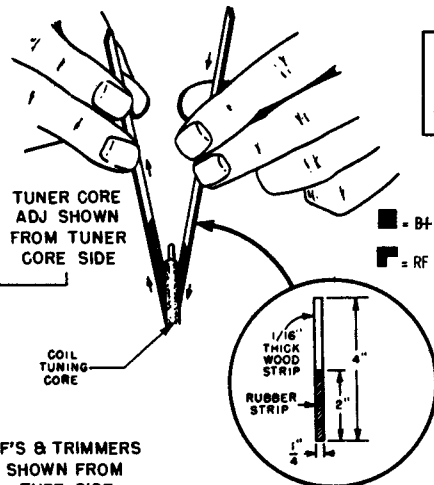

CORE ALIGNMENT TOOL DETAIL

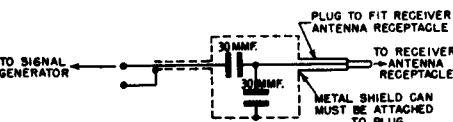

DUMMY ANTENNA DETAIL

**CAUTION**  
 "A" LEAD MUST BE CONNECTED TO POSITIVE (+) SIDE OF POWER SUPPLY. RADIO WILL NOT OPERATE AND DAMAGE TO COMPONENTS WILL RESULT IF CONNECTED OTHERWISE.

PLATED PANEL WIRING LEGEND

■ - B+    ◐ = FILAMENT  
 F = RF AVC    FF = AVC INPUT    FFF = IF, CONV AVC

