
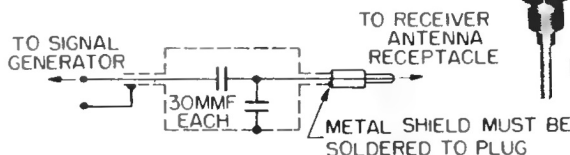
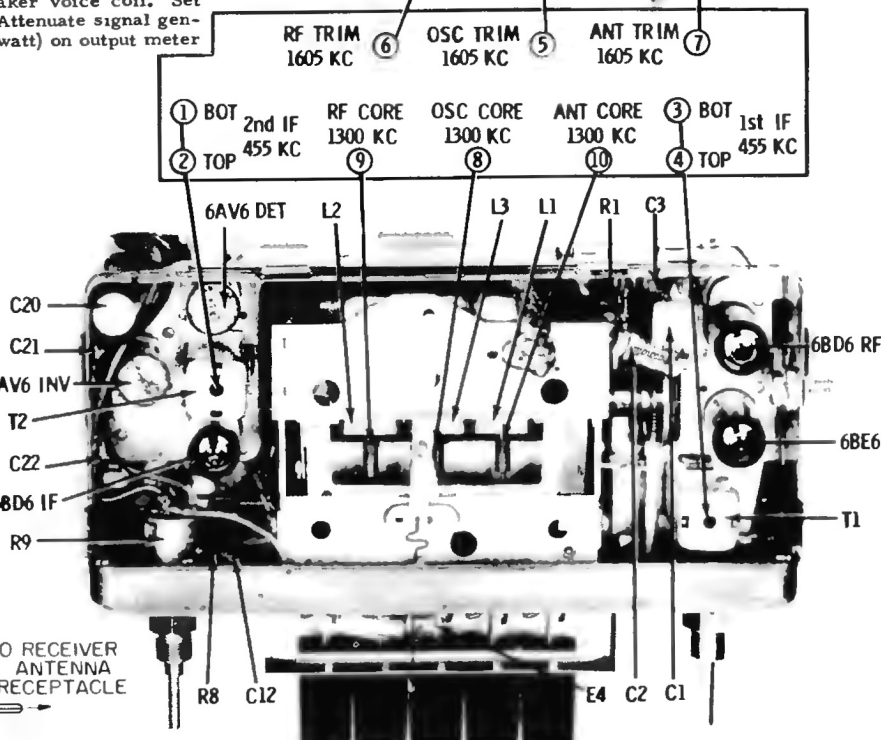
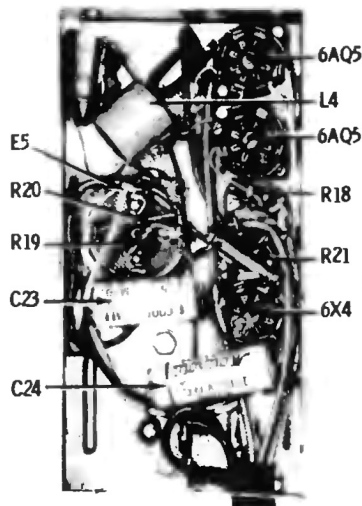


MOTOROLA

MODEL
MOTOROLA HN5AC-8
HUDSON 4389027

ALIGNMENT

Connect an output meter across speaker voice coil. Set volume and tone control to maximum. Attenuate signal generator output to maintain 1.79 volts (1 watt) on output meter to prevent overloading.

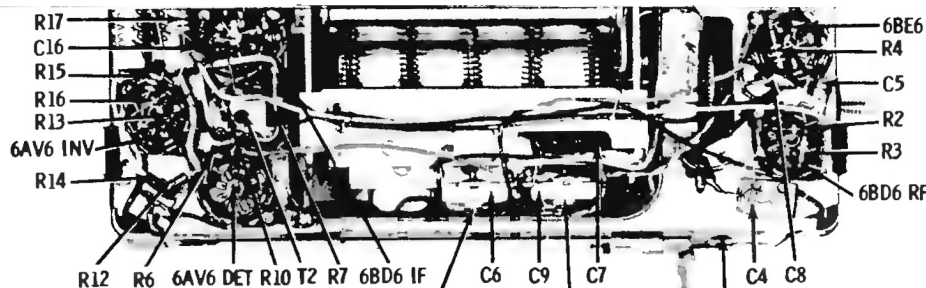

DUMMY ANTENNA

PARTS LOCATIONS & ALIGNMENT ADJUSTMENTS

