


(Continued on next page.)

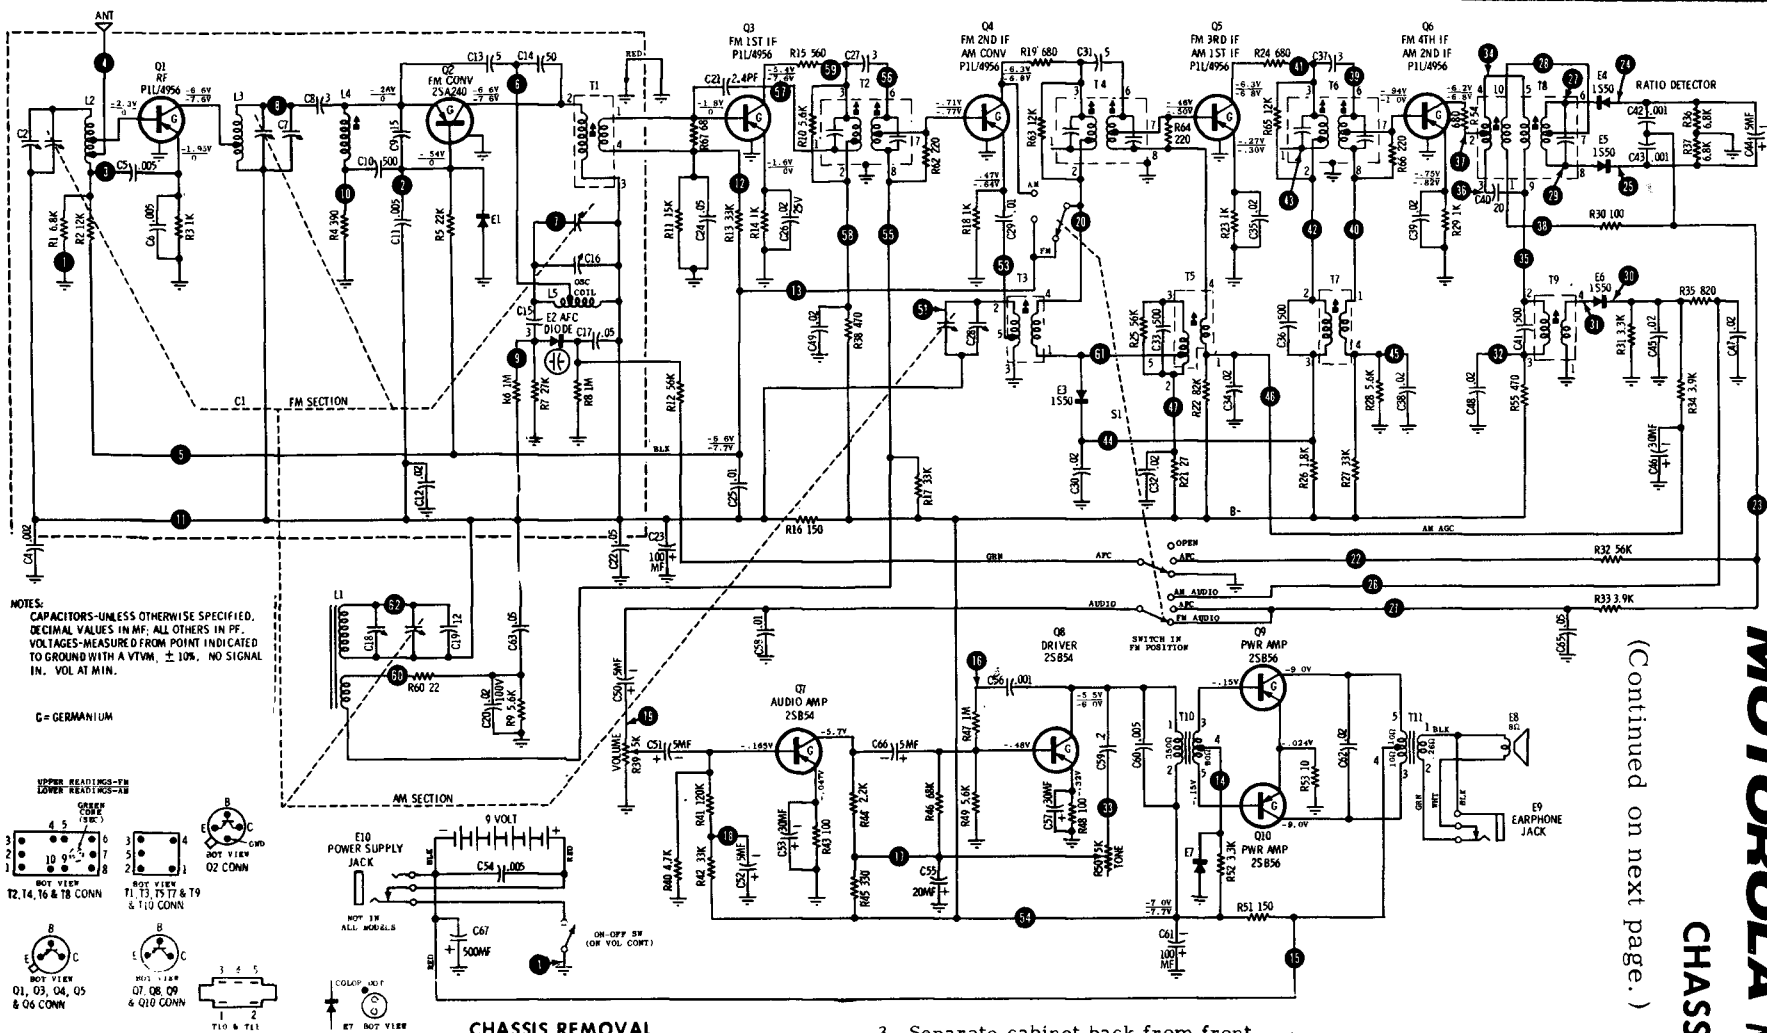

CHASSIS REMOVAL

1. Remove 3 cabinet back mounting screws; 2 are located at top of cabinet (under carrying handle), the other screw is located on bottom of cabinet.
2. Remove the earphone jack mounting nut (a special tool is available - order Part Number 66A646211).

3. Separate cabinet back from front escutcheon far enough to gain access to chassis, then unsolder yellow lead from monopole FM antenna.
4. To remove chassis completely, first remove control knobs from front of radio.
5. Remove 6 chassis and 1 dial background mounting screws.


6. If necessary, unsolder speaker leads, then remove chassis from escutcheon.

TUNING RANGE


FM - 88 to 108Mc (FM IF - 10.7Mc).

AM - 535 to 1620Kc (AM IF - 455Kc).

BOTTOM VIEW PLATED CHASSIS REFERENCE POINTS AND PARTS LOCATION

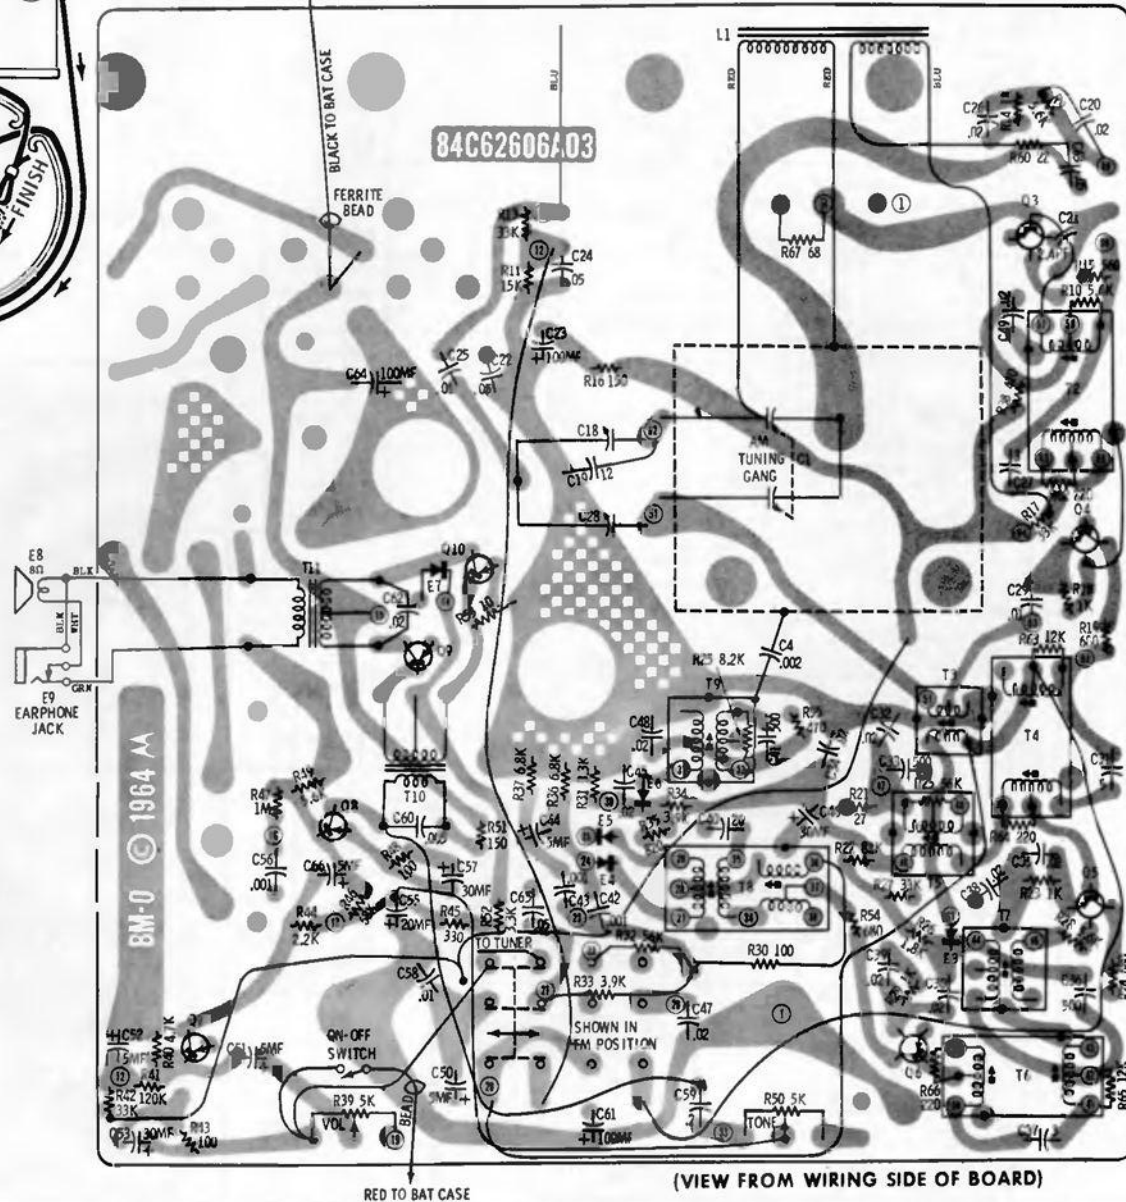

DIAL STRINGING DETAIL

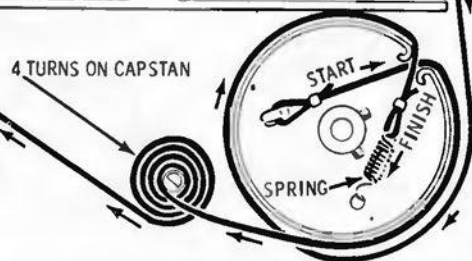

1. GANG FULLY OPEN (LARGE PULLEY CW). INSTALL STRING.
2. CLOSE GANG (LARGE PULLEY CCW) AND FASTEN POINTER SLIDE TO STRING WITH POINTER DIRECTLY OVER ZERO (0) ON LOG SCALE.

BOTTOM VIEW PARTS LOCATION - FM TUNER

