
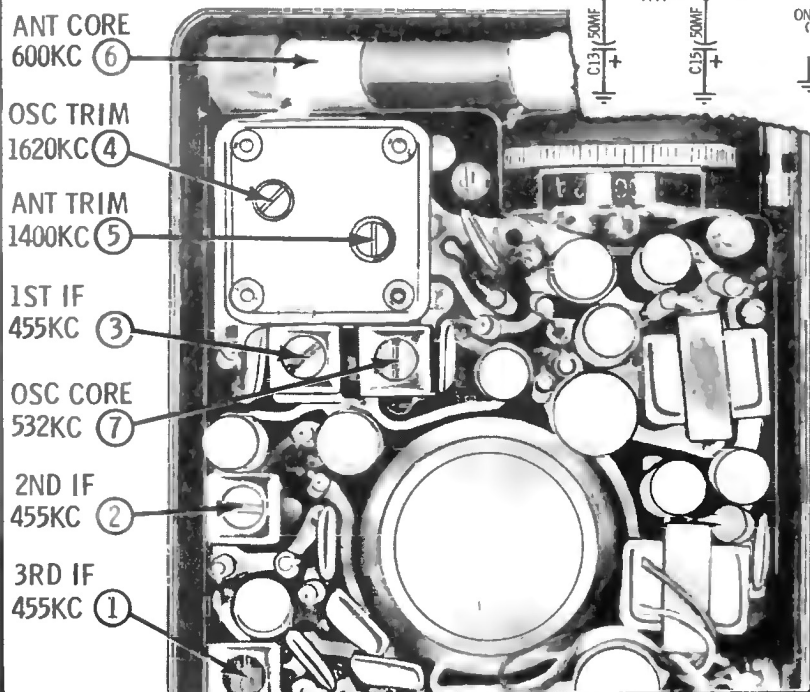


MOTOROLA Models X 23, X 24, Chassis HS-880, HS-881

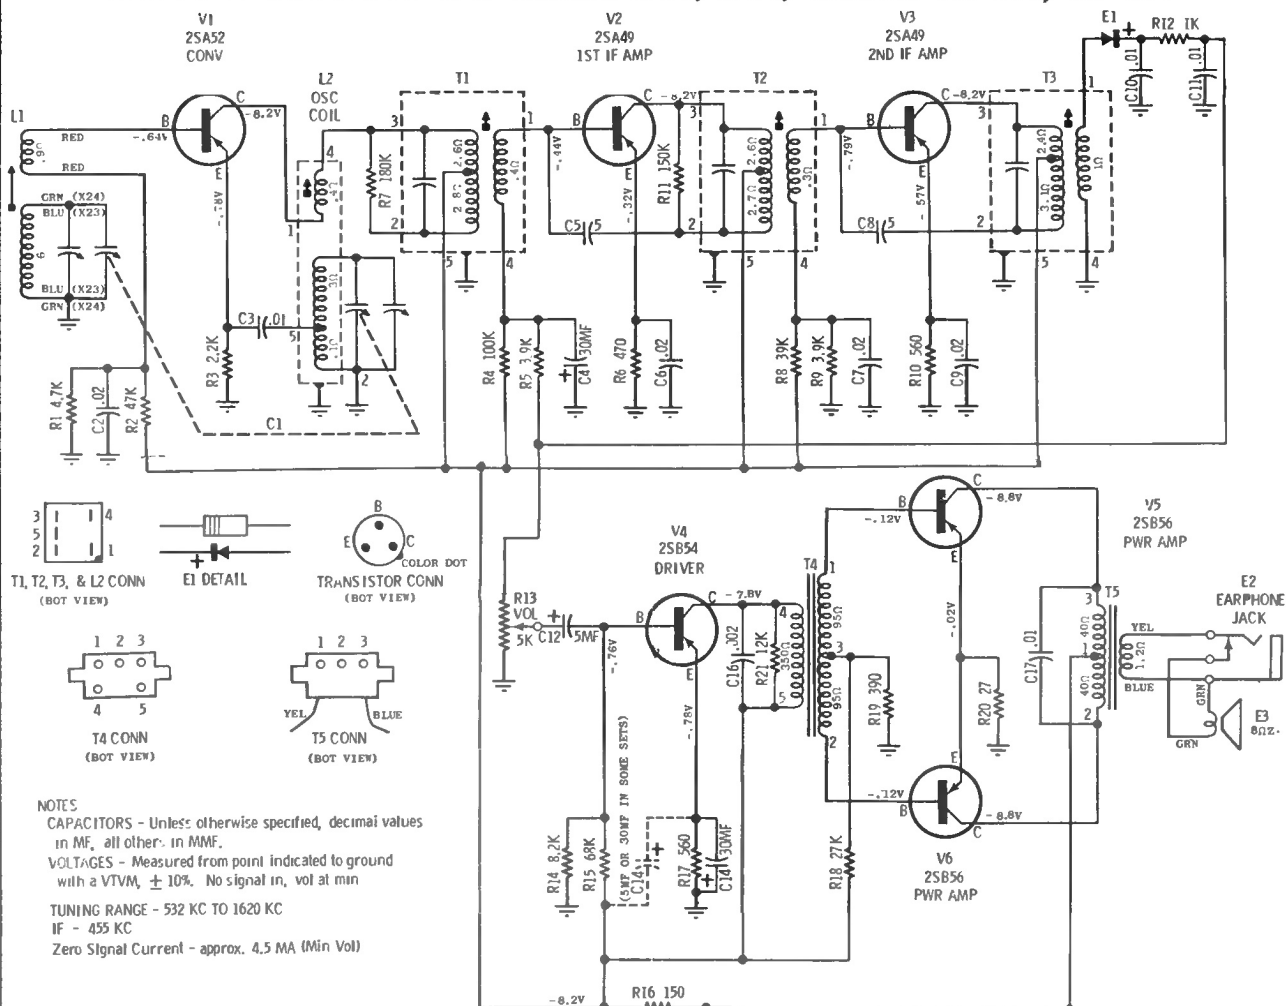

CHASSIS REMOVAL

1. Remove tuning knob mounting screw (from front of radio), remove cabinet back & 1 chassis mtg screw located next to tuning gang.
2. Spread cabinet slightly at sides until chassis is free from its 4 chassis retainers (part of cabinet). Lift chassis up until it clears the retainers.
3. If necessary, unsolder all chassis connecting leads. If it becomes necessary to remove the earphone jack, unscrew the earphone jack mtg nut (a special tool is available - order Part No. 66A646211).

POWER SUPPLY

Operates from one 9-volt battery; use Eveready 206 or equivalent. Battery Drain - 3.5 to 5.5 ma with no input signal and volume at minimum level. To measure battery drain, turn radio off & connect a milliammeter across the terminals of the on-off switch; the meter should read 3.5 to 5.5 ma.