 


D-579, D-590, D-591, D-717, D-719 and D-726



ALIGNMENT PROCEDURE

Output Indicator — Connect the output indicator (a 1000 ohms-per-volt, a-c voltmeter, or an oscilloscope) across the voice-coil terminals.

Signal Generator — Use an AM r-f signal generator. Connect the ground lead to B—, and connect the output lead as indicated in the alignment chart.

Output Level — Attenuate the signal-generator output throughout the alignment so as to maintain the output level below 0.4 volts.

Radio Controls — Set the volume control to maximum. Set the tuning control as indicated in the chart.