


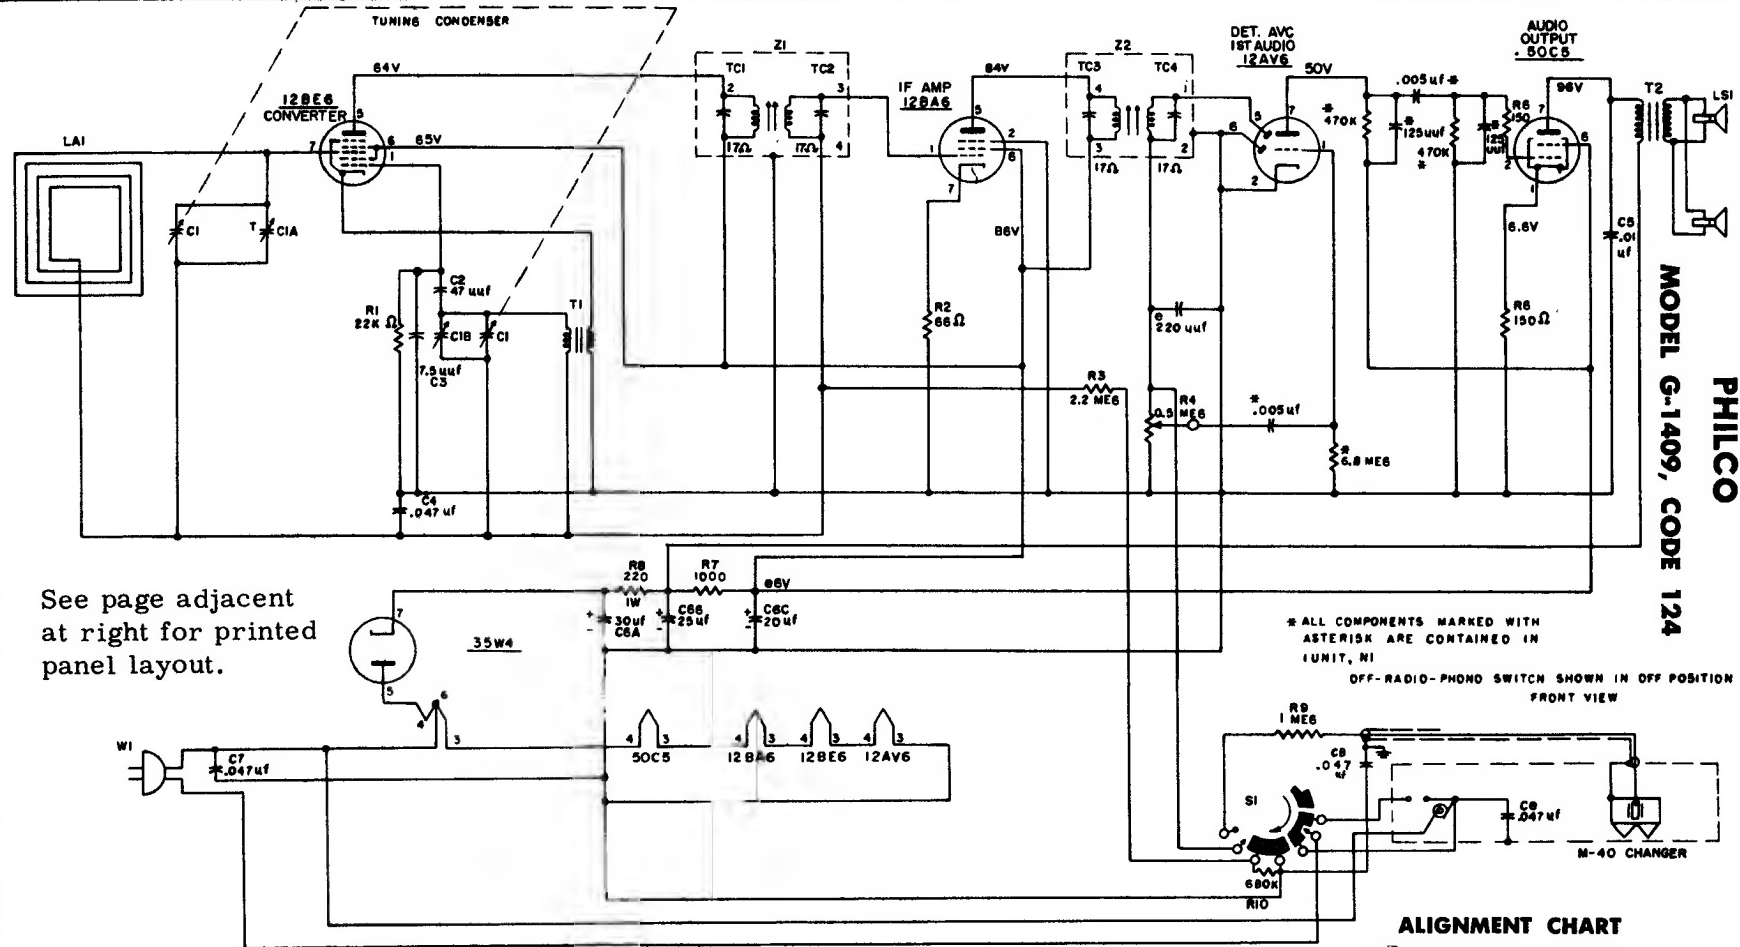

ALIGNMENT PROCEDURE

Radio Controls—Set volume control to maximum. Set tuning control as indicated in chart.

Output Meter—Connect across voice coil terminals.

Signal Generator—Connect generator and set frequency as indicated in chart. Use modulated output, 30%.

Output Level—During alignment, adjust signal-generator output to hold output-meter reading below .5 volts.

PHILCO Model G-1409
Printed Panel Layout

